

# Assembly and Operating Manual

## EGL

### 2-finger parallel gripper

Firmware 3.x



## Imprint

### Copyright:

This manual is protected by copyright. The author is SCHUNK GmbH & Co. KG. All rights reserved. Any reproduction, processing, distribution (making available to third parties), translation or other usage - even excerpts - of the manual is especially prohibited and requires our written approval.

### Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

**Document number:** 1012097

**Version:** 06.00-FW3.x | 11/02/2020 | en

© SCHUNK GmbH & Co. KG

All rights reserved.

Dear Customer,

thank you for trusting our products and our family-owned company, the leading technology supplier of robots and production machines.

Our team is always available to answer any questions on this product and other solutions. Ask us questions and challenge us. We will find a solution!

Best regards,

Your SCHUNK team

SCHUNK GmbH & Co. KG  
Spann- und Greiftechnik

Bahnhofstr. 106 – 134  
D-74348 Lauffen/Neckar

Tel. +49-7133-103-0  
Fax +49-7133-103-2399

info@de.schunk.com  
schunk.com

## Table of Contents

<b>1</b>	<b>General.....</b>	<b>5</b>
1.1	About this manual .....	5
1.1.1	Presentation of Warning Labels .....	5
1.1.2	Applicable documents .....	6
1.1.3	Sizes .....	6
1.1.4	Variants.....	6
1.2	Warranty .....	6
1.3	Scope of delivery .....	7
1.4	Accessories .....	7
<b>2</b>	<b>Basic safety notes .....</b>	<b>8</b>
2.1	Intended use.....	8
2.2	Not intended use.....	8
2.3	Constructional changes .....	9
2.4	Spare parts .....	9
2.5	Gripper fingers .....	9
2.6	Ambient conditions and operating conditions .....	9
2.6.1	Electromagnetic compatibility.....	9
2.6.2	Environmental conditions.....	10
2.6.3	Insulation resistance and voltage resistance in accordance with EN 60204-1...	11
2.7	Personnel qualification.....	11
2.8	Personal protective equipment.....	12
2.9	Notes on safe operation .....	12
2.10	Transport .....	12
2.11	Malfunctions.....	13
2.12	Disposal .....	13
2.13	Fundamental dangers.....	13
2.13.1	Protection during handling and assembly .....	13
2.13.2	Protection during commissioning and operation .....	14
2.13.3	Protection against dangerous movements.....	14
2.13.4	Protection against electric shock.....	15
2.13.5	Protection against magnetic and electromagnetic fields .....	16
2.14	Notes on particular risks.....	17
<b>3</b>	<b>Technical data.....</b>	<b>19</b>
3.1	Basic data .....	19
3.2	Diagrams.....	20
<b>4</b>	<b>Design and description.....</b>	<b>22</b>
4.1	Design .....	22
4.2	Description .....	22
4.3	Interfaces and service windows .....	23
4.3.1	LED.....	25

4.3.2	DIP switch .....	28
4.4	Functional principle .....	29
<b>5</b>	<b>Assembly and settings .....</b>	<b>30</b>
5.1	Assembling and connecting.....	30
5.2	Connections.....	32
5.2.1	Mechanical connection.....	32
5.2.2	Electrical connection .....	34
5.3	Connecting ground cable.....	39
5.4	Combining several products (PROFIBUS, CAN bus) .....	40
5.5	Setting the baud rate (CAN bus).....	40
5.6	Configuring PROFIBUS or CAN bus .....	41
<b>6</b>	<b>Start-up .....</b>	<b>43</b>
6.1	Systemintegration .....	43
6.1.1	SCHUNK Drive Protocol (SDP).....	43
6.1.2	SCHUNK Motion protocol (SMP) .....	43
6.1.3	Notes on the compatibility of Motion Tool Schunk (MTS) and firmware... ..	43
6.2	Commissioning the product .....	44
6.3	PROFINET.....	45
6.3.1	Types of communication of PROFINET .....	45
6.3.2	Operating behavior of the product.....	46
6.3.3	Commissioning with PROFINET interface .....	46
6.3.4	Projecting of the regulator .....	47
<b>7</b>	<b>Operation .....</b>	<b>55</b>
7.1	Special feature with Firmware 3.03.....	55
7.2	Perform quick test .....	56
7.3	Change parameter configuration on the product with USB stick.....	58
7.4	Updating firmware .....	59
7.4.1	Update via USB Mini AB (device).....	59
7.4.2	Update via USB Micro AB (host) .....	60
<b>8</b>	<b>Trouble shooting.....</b>	<b>64</b>
8.1	Communication malfunction .....	65
8.2	Product moves in a jerky fashion, is sluggish or blocked.....	66
8.3	Product does not open .....	66
<b>9</b>	<b>Maintenance .....</b>	<b>67</b>
9.1	Maintenance intervals.....	67
9.2	Disassembly and assembling .....	67
<b>10</b>	<b>EU-Declaration of Conformity .....</b>	<b>68</b>
<b>11</b>	<b>Translation of original declaration of incorporation .....</b>	<b>69</b>
<b>12</b>	<b>Annex to Declaration of Incorporation.....</b>	<b>70</b>

# 1 General

## 1.1 About this manual

This manual contains important information for a safe and appropriate use of the product.

This manual is an integral part of the product and must be kept accessible for the personnel at all times.

Before starting work, the personnel must have read and understood this operating manual. Prerequisite for safe working is the observance of all safety instructions in this manual.

Illustrations in this manual are provided for basic understanding and may differ from the actual product design.

In addition to these instructions, the documents listed under [Applicable documents](#) [► 6] are applicable.

### 1.1.1 Presentation of Warning Labels

To make risks clear, the following signal words and symbols are used for safety notes.



#### **⚠ DANGER**

##### **Danger for persons!**

Non-observance will inevitably cause irreversible injury or death.



#### **⚠ WARNING**

##### **Dangers for persons!**

Non-observance can lead to irreversible injury and even death.



#### **⚠ CAUTION**

##### **Dangers for persons!**

Non-observance can cause minor injuries.

#### **CAUTION**

##### **Material damage!**

Information about avoiding material damage.

### 1.1.2 Applicable documents

- General terms of business \*
- Catalog data sheet of the purchased product \*
- Assembly and operating manuals of the accessories \*
- "SCHUNK Motion Tool (MTS)" software manual \*
- "SCHUNK Motion Protocol (SMP)" software manual \*
- "SCHUNK Drive Protocol (SDP)" software manual \*
- For EGL PROFINET / EGL PROFIBUS: Quick guide \*

The documents marked with an asterisk (\*) can be downloaded on our homepage **schunk.com**

### 1.1.3 Sizes

This operating manual applies to the following sizes:

- EGL 90

### 1.1.4 Variants

This operating manual applies to the following variations:

- EGL PROFINET
- EGL PROFIBUS
- EGL CAN bus

## 1.2 Warranty

The warranty is valid for 24 months or a maximum of 10 million cycles \* from the date of delivery from the production facility if used as intended under the following conditions:

- Observe the ambient conditions and operating conditions, [Ambient conditions and operating conditions](#) [► 9]
- Observe the specified maintenance and lubrication intervals, [Maintenance](#) [► 67]

Parts touching the workpiece and wear parts are not included in the warranty.

\* One cycle consists of a complete gripping process: "Open gripper" (release workpiece) and "Close gripper" (grip workpiece).

### 1.3 Scope of delivery

The scope of delivery includes

- 2-finger parallel gripper EGL in the version ordered, firmware 3.x
- USB cable mini A
- USB cable micro B
- DVD
- 2 x centering sleeve Ø 10 x 6.65
- 4 x centering sleeve Ø 8 x 5.35

Contents of DVD:

- "SCHUNK Motion Tool (MTS)" configuration and commissioning tool
- "SCHUNK Motion Tool (MTS)" software manual
- "SCHUNK Motion Protocol (SMP)" software manual
- "SCHUNK Drive Protocol (SDP)" software manual
- "Firmware Updater" tool
- Assembly and operating manual
- USB driver
- Parameter data set

### 1.4 Accessories

The following accessories, which must be ordered separately, are required for the product:

- Power cable
- Data cable
  - PROFIBUS, PROFINET or CAN-Bus
- Termination resistor
  - PROFIBUS or CAN bus

A wide range of accessories are available for this product

For information regarding which accessory articles can be used with the corresponding product variants, see catalog data sheet.

## 2 Basic safety notes

### 2.1 Intended use

The product is used solely for gripping, holding and releasing dimensionally stable workpieces with low elasticity within load limits. For permissible load values, see the catalog datasheet.

- The product may only be used within the scope of its technical data, [Technical data](#) [► 19].
- The product is intended for installation in a machine/system. The applicable guidelines must be observed and complied with.
- The product is intended for industrial use.
- Appropriate use of the product includes compliance with all instructions in this manual.

### 2.2 Not intended use

The product is not being used as intended if, for example:

- The product is used outside of the load limits.
- The product is used for impermissible workpieces.
- The product is used by untrained personnel or not in the intended environment.
- The product is used for the following applications:
  - Direct gripping/holding/releasing of living beings
  - Gripping/holding/releasing of food items
  - Clamping device for workpieces and lathe chucks
  - Tool guide
  - Machining tools, for example pressing, punching, cutting tool
  - Operation without separating protective equipment, for example human-robot collaboration (HRC)
  - Welding applications, for example welding robot
  - Gripping/holding/releasing magnetic clamping plates
  - Inductive hardening
  - Radar or plasma applications

Any utilization that exceeds or differs from the appropriate use is regarded as misuse.



## 2.3 Constructional changes

### Implementation of structural changes

By conversions, changes, and reworking, e.g. additional threads, holes, or safety devices can impair the functioning or safety of the product or damage it.

- Structural changes should only be made with the written approval of SCHUNK.

## 2.4 Spare parts

### Use of unauthorized spare parts

Using unauthorized spare parts can endanger personnel and damage the product or cause it to malfunction.

- Use only original spare parts or spares authorized by SCHUNK.

## 2.5 Gripper fingers

### Requirements for the gripper fingers

Stored energy within the product creates the risk of serious injuries and significant property damage.

- Arrange the gripper fingers in a way that the product reaches either the position "open" or "closed" in a de-energized state.
- Only exchange the gripper fingers when no residual energy remains in the product.
- Make sure that the product and the top jaws are a sufficient size for the application.

## 2.6 Ambient conditions and operating conditions

### Required ambient conditions and operating conditions

Incorrect ambient and operating conditions can make the product unsafe, leading to the risk of serious injuries, considerable material damage and/or a significant reduction to the product's life span.

- Make sure that the product is used only in the context of its defined application parameters, [Technical data](#) [► 19].

### 2.6.1 Electromagnetic compatibility

The product conforms to the requirements of the EMC directive EU 2014/30 and satisfies the requirements of the following standards:

Standard	Title
EN 61000-6-2 (2005)	Immunity for industrial environments
EN 61000-6-3 (2011)	Interference emissions in residential, commercial, industrial and light industrial environments
EN 61000-6-4 (2007)	Emission standard for industrial environments

## 2.6.2 Environmental conditions

### Transport and storage requirements

For transport and storage of product in original packaging, the following requirements apply:

- Loading and unloading with mechanical aids
- Ambient temperature from -40 °C to +70 °C
- Air humidity up to max. 85%

### Operational requirements

The following requirements apply for operation of the product:

- Ambient temperature from +5 °C to +55 °C
- Air humidity up to max. 65%

According to DIN EN 60068-2-6 and DIN EN 60068-2-27, in accordance with EN 60721-3-2 and EN 60721-3-3, the product was subjected to a vibration and shock inspection during transport and in operation with respect to the ambient influences and withstands the required loads.

The product may only be used in the following locations if additional measures are taken:

- In locations with a high level of ionizing radiation
- In locations with difficult operating conditions, e.g. due to caustic fumes, gases, oils or chemicals
- In facilities requiring special monitoring, e.g. in particularly at-risk areas
- In applications during which the product is exposed to unacceptably severe knocking or vibrations Suitable measures must be taken to reduce the amplitude or acceleration of such disturbances. Vibration-damping or vibration-absorbing systems are to be used in such cases.

The product must also not be used in potentially explosive zones.

### 2.6.3 Insulation resistance and voltage resistance in accordance with EN 60204-1

When measuring the insulation resistance and inspecting the voltage resistance of the machine/automated system, observe the following information in order to protect the product from damage:

- The electronics are connected to the housing ground, in order to protect against overvoltage.
- For measurements of the insulation resistance in accordance with EN 60204-1, no voltage levels above the permitted operating voltage range may be used. In addition, the maximum measuring current must be safely limited to values below 10mA.
- Before testing the voltage resistance of the machine/automated system in accordance with EN 60204-1, disconnect the product from the electric circuits to be tested. This applies to all connections on the product:
  - positive and negative connections of the power and logic supply
  - Fieldbus connections
  - USB interface

## 2.7 Personnel qualification

### Inadequate qualifications of the personnel

If the personnel working with the product is not sufficiently qualified, the result may be serious injuries and significant property damage.

- All work may only be performed by qualified personnel.
- Before working with the product, the personnel must have read and understood the complete assembly and operating manual.
- Observe the national safety regulations and rules and general safety instructions.

The following personal qualifications are necessary for the various activities related to the product:

<b>Trained electrician</b>	Due to their technical training, knowledge and experience, trained electricians are able to work on electrical systems, recognize and avoid possible dangers and know the relevant standards and regulations.
<b>Qualified personnel</b>	Due to its technical training, knowledge and experience, qualified personnel is able to perform the delegated tasks, recognize and avoid possible dangers and knows the relevant standards and regulations.
<b>Instructed person</b>	Instructed persons were instructed by the operator about the delegated tasks and possible dangers due to improper behaviour.
<b>Service personnel of the manufacturer</b>	Due to its technical training, knowledge and experience, service personnel of the manufacturer is able to perform the delegated tasks and to recognize and avoid possible dangers.

## **2.8 Personal protective equipment**

### **Use of personal protective equipment**

Personal protective equipment serves to protect staff against danger which may interfere with their health or safety at work.

- When working on and with the product, observe the occupational health and safety regulations and wear the required personal protective equipment.
- Observe the valid safety and accident prevention regulations.
- Wear protective gloves to guard against sharp edges and corners or rough surfaces.
- Wear heat-resistant protective gloves when handling hot surfaces.
- Wear protective gloves and safety goggles when handling hazardous substances.
- Wear close-fitting protective clothing and also wear long hair in a hairnet when dealing with moving components.

## **2.9 Notes on safe operation**

### **Incorrect handling of the personnel**

Incorrect handling and assembly may impair the product's safety and cause serious injuries and considerable material damage.

- Avoid any manner of working that may interfere with the function and operational safety of the product.
- Use the product as intended.
- Observe the safety notes and assembly instructions.
- Do not expose the product to any corrosive media. This does not apply to products that are designed for special environments.
- Eliminate any malfunction immediately.
- Observe the care and maintenance instructions.
- Observe the current safety, accident prevention and environmental protection regulations regarding the product's application field.

## **2.10 Transport**

### **Handling during transport**

Incorrect handling during transport may impair the product's safety and cause serious injuries and considerable material damage.

- When handling heavy weights, use lifting equipment to lift the product and transport it by appropriate means.
- Secure the product against falling during transportation and handling.
- Stand clear of suspended loads.

## 2.11 Malfunctions

### Behavior in case of malfunctions

- Immediately remove the product from operation and report the malfunction to the responsible departments/persons.
- Order appropriately trained personnel to rectify the malfunction.
- Do not recommission the product until the malfunction has been rectified.
- Test the product after a malfunction to establish whether it still functions properly and no increased risks have arisen.

## 2.12 Disposal

### Handling of disposal

The incorrect handling of disposal may impair the product's safety and cause serious injuries as well as considerable material and environmental harm.

- Follow local regulations on dispatching product components for recycling or proper disposal.

## 2.13 Fundamental dangers

### General

- Observe safety distances.
- Never deactivate safety devices.
- Before commissioning the product, take appropriate protective measures to secure the danger zone.
- Disconnect power sources before installation, modification, maintenance, or calibration. Ensure that no residual energy remains in the system.
- If the energy supply is connected, do not move any parts by hand.
- Do not reach into the open mechanism or movement area of the product during operation.

### 2.13.1 Protection during handling and assembly

#### Incorrect handling and assembly

Incorrect handling and assembly may impair the product's safety and cause serious injuries and considerable material damage.

- Have all work carried out by appropriately qualified personnel.
- For all work, secure the product against accidental operation.
- Observe the relevant accident prevention rules.
- Use suitable assembly and transport equipment and take precautions to prevent jamming and crushing.

### **Incorrect lifting of loads**

Falling loads may cause serious injuries and even death.

- Stand clear of suspended loads and do not step into their swiveling range.
- Never move loads without supervision.
- Do not leave suspended loads unattended.

## **2.13.2 Protection during commissioning and operation**

### **Falling or violently ejected components**

Falling and violently ejected components can cause serious injuries and even death.

- Take appropriate protective measures to secure the danger zone.
- Never step into the danger zone during operation.

## **2.13.3 Protection against dangerous movements**

### **Unexpected movements**

Residual energy in the system may cause serious injuries while working with the product.

- Switch off the energy supply, ensure that no residual energy remains and secure against inadvertent reactivation.
- The faulty actuation of connected drives may cause dangerous movements.
- Operating mistakes, faulty parameterization during commissioning or software errors may trigger dangerous movements.
- Never rely solely on the response of the monitoring function to avert danger. Until the installed monitors become effective, it must be assumed that the drive movement is faulty, with its action being dependent on the control unit and the current operating condition of the drive. Perform maintenance work, modifications, and attachments outside the danger zone defined by the movement range.
- To avoid accidents and/or material damage, human access to the movement range of the machine must be restricted. Limit/prevent accidental access for people in this area due through technical safety measures. The protective cover and protective fence must be rigid enough to withstand the maximum possible movement energy. EMERGENCY STOP switches must be easily and quickly accessible. Before starting up the machine or automated system, check that the EMERGENCY STOP system is working. Prevent operation of the machine if this protective equipment does not function correctly.

### 2.13.4 Protection against electric shock

#### Work on electrical equipment

Touching live parts may result in death.

- Work on the electrical equipment may only be carried out by qualified electricians in accordance with the electrical engineering regulations.
- Lay electrical cables properly, e. g. in a cable duct or a cable bridge. Observe standards.
- Before connecting or disconnecting electrical cables, switch off the power supply and check that the cables are free of voltage. Secure the power supply against being switched on again.
- Before switching on the product, check that the protective earth conductor is correctly attached to all electrical components according to the wiring diagram.
- Check whether covers and protective devices are fitted to prevent contact with live components.
- Do not touch the product's terminals when the power supply is switched on.

#### Possible electrostatic energy

Components or assembly groups may become electrostatically charged. When the electrostatic charge is touched, the discharge may trigger a shock reaction leading to injuries.

- The operator must ensure that all components and assembly groups are included in the local potential equalisation in accordance with the applicable regulations.
- While paying attention to the actual conditions of the working environment, the potential equalisation must be implemented by a specialist electrician according to the applicable regulations.
- The effectiveness of the potential equalisation must be verified by executing regular safety measurements.

### **2.13.5 Protection against magnetic and electromagnetic fields**

#### **Work in areas with magnetic and electromagnetic fields**

Magnetic and electromagnetic fields can lead to serious injuries.

- Persons with pace-makers, metal implants, metal shards, or hearing aids require the consent of a physician before entering areas in which components of the electric drive and control systems are mounted, started up, and operated.
- Persons with pace-makers, metal implants, metal shards, or hearing aids require the consent of a physician before entering areas in which magnetic grippers or motor parts with permanent magnets are stored, repaired, or assembled.
- Do not operate high-frequency or radio devices in the proximity of electric components of the drive system and their feed lines.

If the use of such devices is necessary:

When starting up the electric drive and control system, check the machine or automated system for possible failures when such systems are used at different intervals and in different states of the control system. A special additional EMC test may be necessary if the system has a high risk potential.



## 2.14 Notes on particular risks



### **⚠ DANGER**

#### **Danger from electric voltage!**

Touching live parts may result in death.

- Switch off the power supply before any assembly, adjustment or maintenance work and secure against being switched on again.
- Only qualified electricians may perform electrical installations.
- Check if de-energized, ground it and hot-wire.
- Cover live parts.



### **⚠ DANGER**

#### **Risk of fatal injury from suspended loads!**

Falling loads can cause serious injuries and even death.

- Stand clear of suspended loads and do not step within their swiveling range.
- Never move loads without supervision.
- Do not leave suspended loads unattended.
- Wear suitable protective equipment.



### **⚠ WARNING**

#### **Risk of injury from objects falling and being ejected!**

Falling and ejected objects during operation can lead to serious injury or death.

- Take appropriate protective measures to secure the danger zone.



### **⚠ WARNING**

#### **Risk of injury due to unexpected movements!**

If the power supply is switched on or residual energy remains in the system, components can move unexpectedly and cause serious injuries.

- Before starting any work on the product: Switch off the power supply and secure against restarting.
- Make sure, that no residual energy remains in the system.



### **⚠ WARNING**

#### **Risk of injury from crushing and impacts!**

Serious injury could occur during the base jaw procedure and when breaking or loosening the gripper fingers.

- Wear suitable protective equipment.
- Do not reach into the open mechanism or the movement area of the product.



### **⚠ WARNING**

#### **Risk of injury from sharp edges and corners!**

Sharp edges and corners can cause cuts.

- Use suitable protective equipment.



### **⚠ WARNING**

#### **Risk of burns through contact with hot surfaces!**

Surfaces of components can heat up severely during operation. Skin contact with hot surfaces causes severe burns to the skin.

- For all work in the vicinity of hot surfaces, wear safety gloves.
- Before carrying out any work, make sure that all surfaces have cooled down to the ambient temperature.



### **⚠ WARNING**

#### **Risk of injury from objects falling in the event of an energy supply failure**

In case of an energy supply failure, the gripping force decreases and a secure hold on the gripped workpiece cannot be guaranteed.

- Take suitable protective measures to secure the danger zone.

### 3 Technical data

#### 3.1 Basic data

<b>Mechanical operating data</b>	
Weight [kg]	1.8
Noise emission [dB(A)]	≤70
IP rating*	46
Ambient temperature [°C] Min. Max.	5 55
<b>Brake</b>	
Brake	available **
<b>Internal motor operating data</b>	
Motor current at nominal gripping force [A]	4.25
<b>Internal logic supply fuse ***</b>	
Value [A] Tripping characteristic	1 time delay
<b>Power supply</b>	
Logic voltage supply [VDC]	24 ±10%
Voltage supply output [VDC] (stabilized and smoothed, internal reverse polarity protection)	24 ±10%
maximum current input (logic) [A]	0.5
maximum current input (power) of power supply unit [A]	2.5
<b>Interface</b>	
PROFINET [100 MBit/s]	X
PROFIBUS [12 MBit/s]	X
CAN bus [up to 1 MBit/s]	X
USB Mini AB, device, parameterization interface	X
USB Micro AB, host	X
<b>IMPORTANT! A product is supplied either with PROFINET, PROFIBUS, or CAN bus.</b>	

\* For use in dirty ambient conditions (e.g. sprayed water, vapors, abrasion or processing dust) SCHUNK offers corresponding product options as standard. SCHUNK also offers customized solutions for special applications in dirty ambient conditions.

\*\* The built-in, electric holding break is used for mounting and holding the position of the gripper jaws in the event of a power failure. It cannot cover all of the safety or gripping force maintenance functions.


\*\*\* SCHUNK recommends: Littelfuse 1A time delay (0154001 .DRTL)

More technical data is included in the catalog data sheet.  
Whichever is the latest version.

## 3.2 Diagrams


### NOTE

The following diagrams refer to the motor current. This is internal and is controlled via the SPS programming.

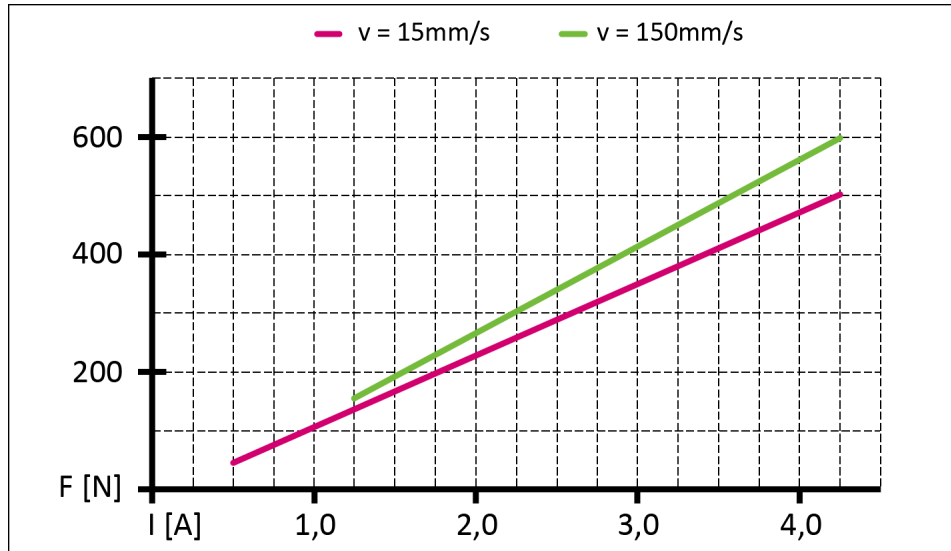

*Gripping force diagram*


The gripping force diagram shows the achievable gripping force at 15 mm/s and 150 mm/s with the relevant motor current.

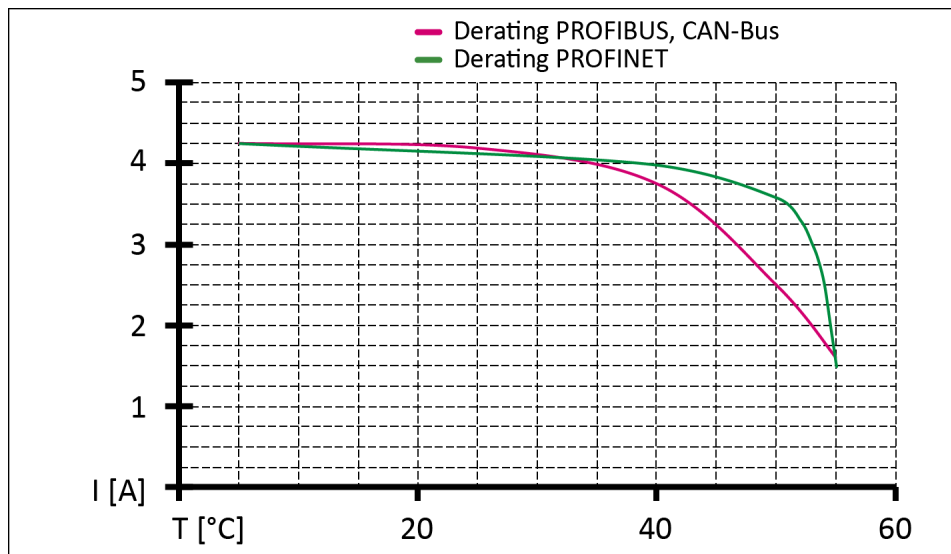

*Derating diagram*

Depending on the ambient temperature, continuous gripping is only permitted with reduced motor current. Otherwise the product will overheat and signal a malfunction.

To determine the nominal gripping force, the product is installed with a positive locking on an aluminum plate. The 200x200x20 mm<sup>3</sup> large aluminum plate is isolated to the ground. With an ambient temperature of 22 °C, the product can hold with the nominal gripping force for at least 5 hours.

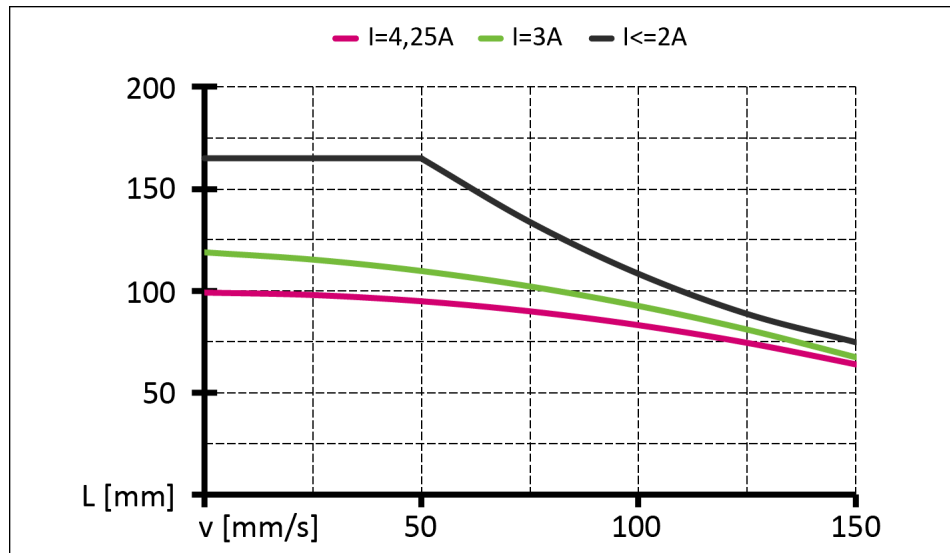


*v-L diagram*

The v-L diagram shows the maximum finger length according to the set motor current and the process speed. If the maximum finger length is exceeded, the guides will wear prematurely.

## 4 Design and description

### 4.1 Design

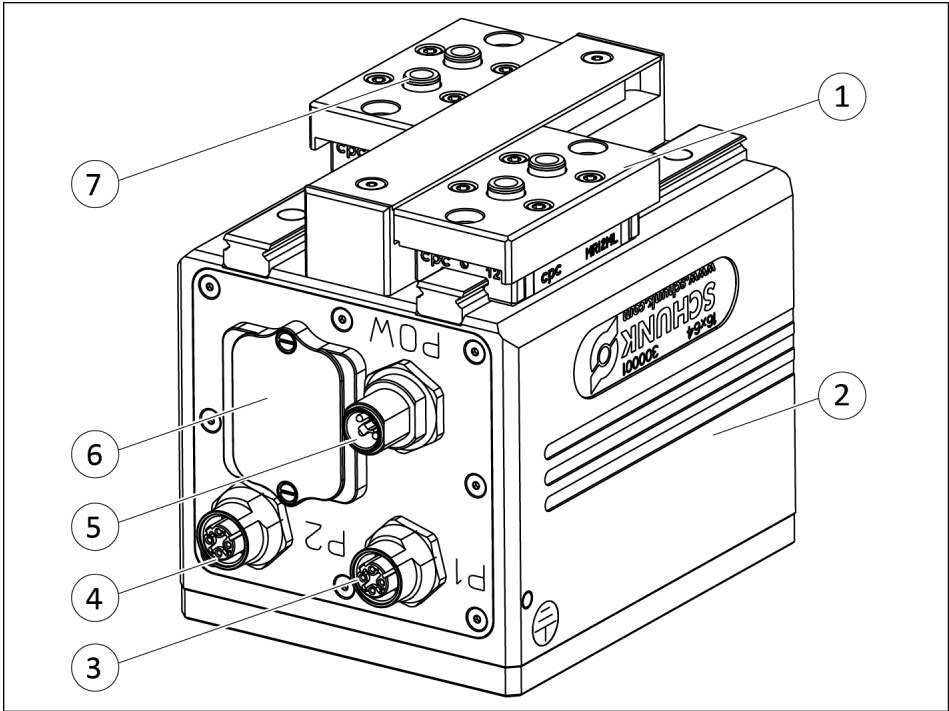

EGL 2-finger-parallel gripper, example version PROFINET

1	Finger interface
2	Housing
3	PROFINET, PROFIBUS or CAN bus socket
4	PROFIBUS or CAN bus socket OR: PROFINET socket
5	Power supply plug
6	Service window
7	Finger centering sleeves

### 4.2 Description

The product is a servo-electric 2-finger parallel gripper featuring high power density and integrated electronics.


Depending on the version, the bus system is either PROFINET, PROFIBUS or CAN bus.

Depending on the bus system, various address ranges and communication protocols are available:


	Address range	Communication protocol
PROFINET	is assigned by SPS	SDP
PROFIBUS	0-127	SDP* / SMP
CAN bus	0-255	SMP

\*) recommended by SCHUNK

### 4.3 Interfaces and service windows

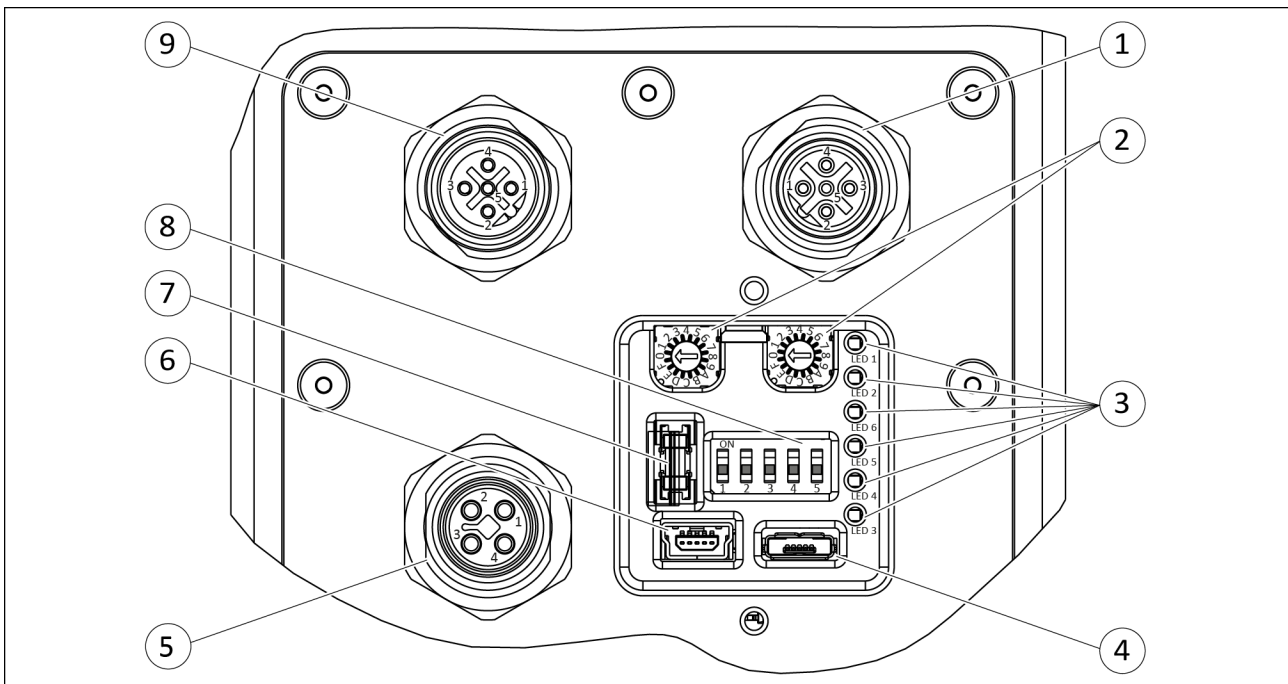

Interfaces and service window, PROFIBUS and CAN bus variant

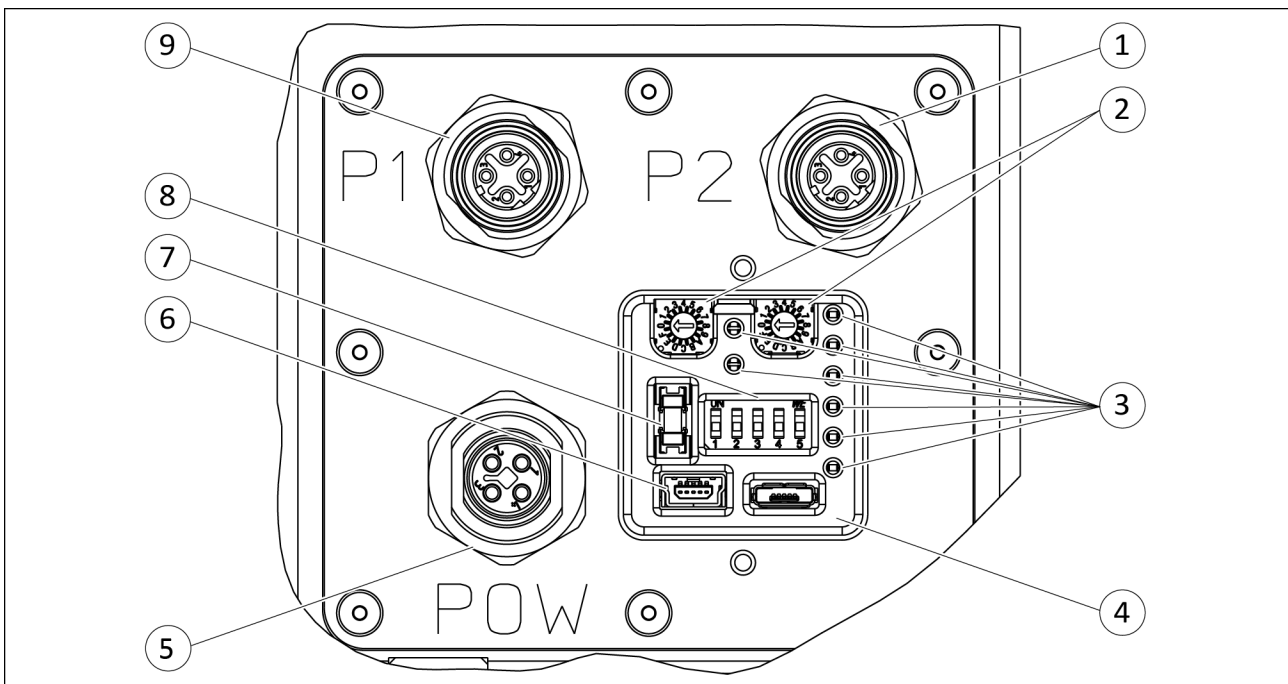

Interfaces and service window, PROFINET version

Item	Designation	Function
1	PROFIBUS or CAN bus socket OR: PROFINET socket	Inlet communication
2	Rotary encoding switch	Address configuration for PROFIBUS or CAN bus
3	LED	Status display and error analysis
4	USB Micro AB, host*	Firmware update via USB flash drive
5	Power supply plug	Logic and power supply
6	USB mini AB, device*, parameterized interface	Service interface, parameterization and firmware update via computer
7	Logic supply fuse	Protection for logic supply, 1 A, time delay
8	DIP switch	Testing and commissioning functions, adjustment of the baud rate for CAN bus
9	PROFINET, PROFIBUS or CAN bus socket	Communication outlet or termination resistor

**\*) IMPORTANT! Do not load the USB interface laterally as doing so may damage it.**


If a device is connected to one or both USB interfaces, the respective bus connection will not function even if a bus cable is connected.

In the following cases, communication via the bus connection is not possible:


- If a USB device is connected to the interface USB mini AB, device.
- When connecting the USB stick to the interface USB micro AB, host and when the DIP switch 1 is "ON".



### 4.3.1 LED

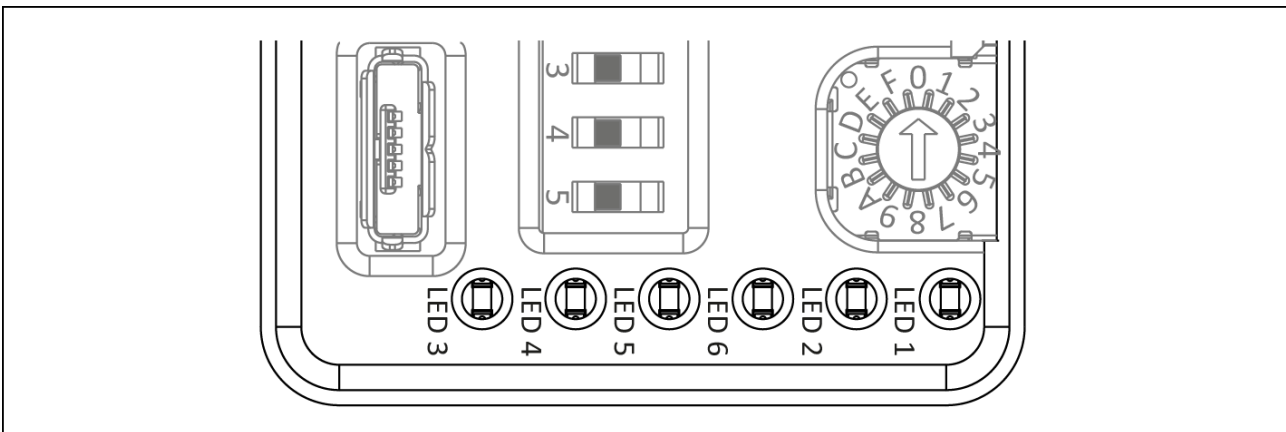

LED, PROFIBUS and CAN bus variant

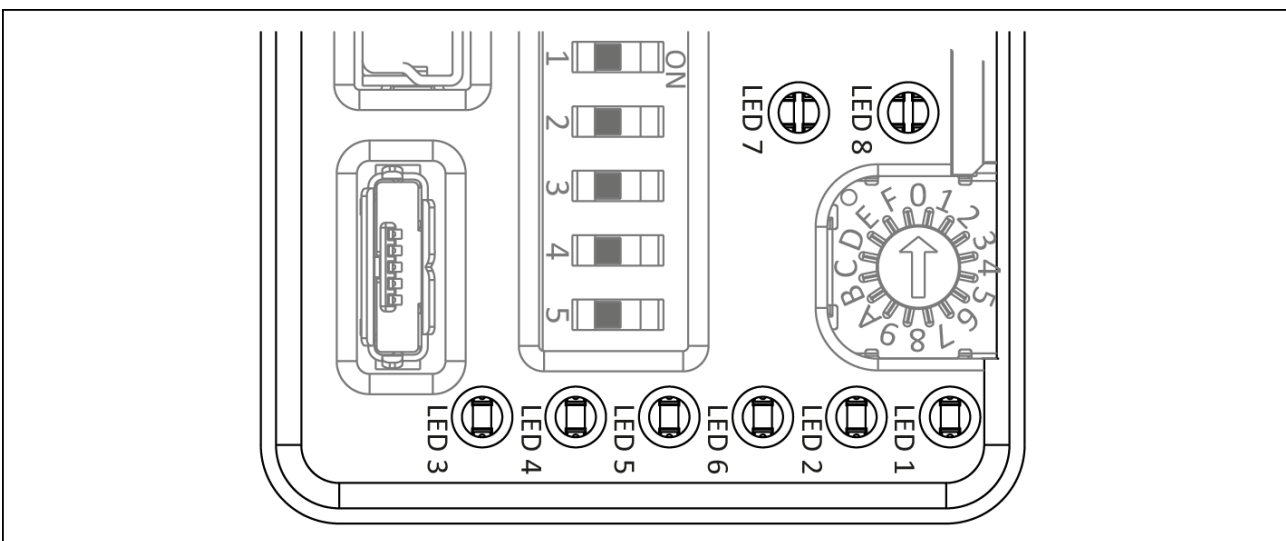

LED, PROFINET variant


LED	Designation	Color	Function
1	Supply power	green	Indicates whether the power supply is connected. <ul style="list-style-type: none"> <li>• <b>Lights up</b> when the power supply for the product is connected.</li> </ul>
2	Logic supply	green	Indicates whether the logic voltage is connected. <ul style="list-style-type: none"> <li>• <b>Lights up</b> when the power supply for the product is connected.</li> </ul>

LED	Designation	Color	Function
3	Module status	yellow	Indicates the operating condition of the product.
			<ul style="list-style-type: none"> <li>• <b>Lights up</b> if the product is ready for operation.</li> <li>• <b>Does not light up</b> if there is an error.</li> <li>• <b>Does not light up</b> if there is a warning.</li> <li>• <b>Lights up</b> if there is an info message.</li> <li>• <b>Flashes</b> if the hardware is not recognized or if the status of the software is undefined (alternating with "module error" LED).</li> <li>• <b>Flashes</b> if a firmware update is being installed via USB Micro AB, host (CAN bus communication interface).</li> <li>• <b>Lights up</b> if a firmware update is being installed via USB Micro AB, host (PROFIBUS communication interface).</li> </ul>
4	Module error	red	Indicates if there is an error; see "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software manuals.
			<ul style="list-style-type: none"> <li>• <b>Lights up</b> if there is an error.</li> <li>• <b>Does not light up</b> if the product is ready for operation.</li> <li>• <b>Flashes</b> if there is a warning.</li> <li>• <b>Flashes briefly</b> if there is an info message (on/off about 5 times).</li> <li>• <b>Flashes</b> if the hardware is not recognized or if the status of the software is undefined (alternating with "module status" LED).</li> <li>• <b>Lights up (approximately 1 second) and goes out</b> before the logic board is updated during a firmware update via USB Micro AB, host. <b>Flashes</b> when the logic board is updating. <b>Lights up</b> when the adapter board is being updated and goes out when the update is finished.</li> </ul>
5	PROFIBUS or CAN bus operation	yellow	Indicates whether there is communication.
			<ul style="list-style-type: none"> <li>• <b>Lights up</b> if there is communication via CAN bus. <b>Flashes briefly</b> with each change of direction (on/off about 2 times).</li> <li>• <b>Lights up</b> if there is communication via PROFIBUS.</li> <li>• <b>Does not light up</b> if communication via PROFIBUS or CAN bus is interrupted.</li> </ul>
6	PROFIBUS or CAN bus off state	red	Indicates whether communication has been interrupted.
			<ul style="list-style-type: none"> <li>• <b>Lights up</b> if communication via PROFIBUS or CAN bus has been interrupted.</li> <li>• <b>Does not light up</b> if there is communication via PROFIBUS or CAN bus.</li> </ul>

## LED PROFINET variant

LED	Designation	Color	Function
7	PROFINET network status	green/red	<p>Displays the current network status.</p> <ul style="list-style-type: none"> <li>• <b>Does not light up</b>, if no power supply is connected to the product.</li> <li>• <b>Does not light up</b>, if there is no connection to the PROFINET control.</li> <li>• <b>Lights up green</b>, if there is a connection to a PROFINET control system and it is in "Run" mode.</li> <li>• <b>Flashes green once and goes out</b> if there is a connection to a PROFINET control system and it is in "Stop" mode.</li> <li>• <b>Flashes green once and goes out</b> if the IRT synchronization is not yet finished.</li> <li>• <b>Flashes green</b> if the product is in identification mode.</li> <li>• <b>Flashes red</b> if there is a serious network error.</li> <li>• <b>Flashes red once and goes out</b> if the station name is unknown.</li> <li>• <b>Flashes red twice and goes out</b> if the IP address is unknown.</li> <li>• <b>Flashes red three times and goes out</b> if there are configuration errors.</li> </ul>
8	Module status	green/red	<p>Displays the current status of the product.</p> <ul style="list-style-type: none"> <li>• <b>Does not light up</b>, if no power supply is connected to the product.</li> <li>• <b>Does not light up</b> if the product is in setup mode or in the NW Init-status.</li> <li>• <b>Lights up green</b> if the product is in normal operating mode.</li> <li>• <b>Flashes green once and goes out</b> if diagnosis data is being processed.</li> <li>• <b>Flashes red</b> if there is a serious fault with the product.</li> <li>• <b>Flashes red</b> if the product is not ready for operation.</li> <li>• <b>Flashes green/red alternately</b> if a Firmware update is being carried out.</li> </ul>

### 4.3.2 DIP switch

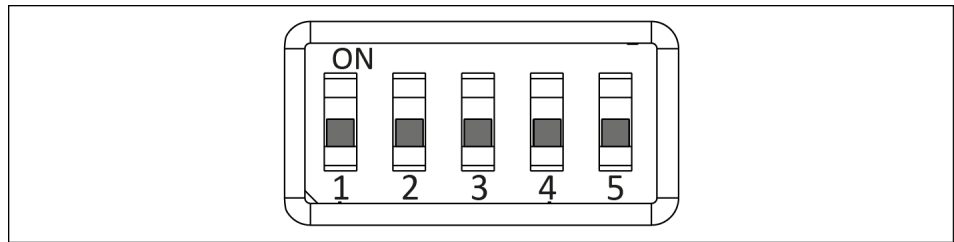

*DIP switch*

#### Configuration for PROFIBUS or CAN bus

Item	Designation	Function
1	Reserved	<p>Only for SCHUNK service!</p> <p>The DIP switch must always be in the "OFF" position when switching on the voltage supply.</p> <p>The function may only be run by SCHUNK service.</p>
	Enable USB host	<ul style="list-style-type: none"> <li>If the DIP switch is set to the "ON" position with the voltage supply switched on: <ul style="list-style-type: none"> <li>The USB host function is approved for a Firmware update or parameter update. The communication to the superordinate bus system is interrupted, <a href="#">Update via USB Micro AB (host)</a> [► 60].</li> </ul> </li> </ul>
2	Firmware update	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "ON" position: <ul style="list-style-type: none"> <li>An update with the Firmware on the USB stick is running. First the logic board is updated followed by the adapter board, <a href="#">Update via USB Micro AB (host)</a> [► 60].</li> </ul> </li> </ul>
	Test 2	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "OFF" position: <ul style="list-style-type: none"> <li>The product quick test is being carried out, <a href="#">Perform quick test</a> [► 56]</li> </ul> </li> </ul>
3	Parameter update	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "ON" position: <ul style="list-style-type: none"> <li>An update with the parameter file on the USB stick is running, <a href="#">Change parameter configuration on the product with USB stick</a> [► 58].</li> </ul> </li> </ul>
	Test 1	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "OFF" position: <ul style="list-style-type: none"> <li>The product quick test is being carried out, <a href="#">Perform quick test</a> [► 56]</li> </ul> </li> </ul>
4	CAN baud rate 1	The baud rate for CAN bus is set, <a href="#">Setting the baud rate (CAN bus)</a> [► 40]
5	CAN baud rate 2	The baud rate for CAN bus is set, <a href="#">Setting the baud rate (CAN bus)</a> [► 40]

**Configuration for PROFINET**

Item	Designation	Function
1	Reserved	Only for SCHUNK service! The DIP switch must always be in the "OFF" position when switching on the voltage supply. The function may only be run by SCHUNK service.
	Enable USB host	<ul style="list-style-type: none"> <li>If the DIP switch is set to the "ON" position with the voltage supply switched on: <ul style="list-style-type: none"> <li>The USB host function is approved for a Firmware update or parameter update. The communication to the superordinate bus system is interrupted, <a href="#">Update via USB Micro AB (host)</a> [► 60].</li> </ul> </li> </ul>
2	Firmware update	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "ON" position: <ul style="list-style-type: none"> <li>An update with the Firmware on the USB stick is running. First the logic board is updated followed by the adapter board, <a href="#">Update via USB Micro AB (host)</a> [► 60].</li> </ul> </li> </ul>
	Test 2	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "OFF" position: <ul style="list-style-type: none"> <li>The product quick test is being carried out, <a href="#">Perform quick test</a> [► 56]</li> </ul> </li> </ul>
3	Parameter update	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "ON" position: <ul style="list-style-type: none"> <li>An update with the parameter file on the USB stick is running, <a href="#">Change parameter configuration on the product with USB stick</a> [► 58].</li> </ul> </li> </ul>
	Test 1	<ul style="list-style-type: none"> <li>If the DIP switch "1" is in the "OFF" position: <ul style="list-style-type: none"> <li>The product quick test is being carried out, <a href="#">Perform quick test</a> [► 56]</li> </ul> </li> </ul>
4	Reserved	SCHUNK recommends that the DIP switch must be in the "OFF" position when switching on the voltage supply.
5	Reserved	SCHUNK recommends that the DIP switch must be in the "OFF" position when switching on the voltage supply.

**4.4 Functional principle**

All possible parameters and the special features of each communication interface (of the individual bus systems) are described in the software handbook of the respective protocol, see "SCHUNK Drive Protocol (SDP)" and "SCHUNK Motion Protocol (SMP)" software manuals.

SCHUNK recommends using the "SDP" protocol.

## 5 Assembly and settings

### 5.1 Assembling and connecting



#### **⚠ DANGER**

##### **Danger from electric voltage!**

Touching live parts may result in death.

- Switch off the power supply before any assembly, adjustment or maintenance work and secure against being switched on again.
- Only qualified electricians may perform electrical installations.
- Check if de-energized, ground it and hot-wire.
- Cover live parts.



#### **⚠ WARNING**

##### **Risk of injury due to unexpected movements!**

If the power supply is switched on or residual energy remains in the system, components can move unexpectedly and cause serious injuries.

- Before starting any work on the product: Switch off the power supply and secure against restarting.
- Make sure, that no residual energy remains in the system.

#### **NOTE**

Mount the product so that sufficient heat dissipation is guaranteed. A temperature malfunction may occur if the product reaches excessively high temperatures.

#### **Overview**

- Check the evenness of the mounting surface, [Mechanical connection](#) [► 32].
- Screw the product to the machine/system, [Mechanical connection](#) [► 32].
  - ✓ If necessary, use appropriate connection elements (adapter plates).
  - ✓ Observe the maximal tightening torque, admissible screw-in depth and, if necessary, strength class.
- Connect the ground cable between the product and the machine/system, [Connecting ground cable](#) [► 39].
- Plug the cable for the fieldbus into the plug and screw it in by hand, [Cable connections](#) [► 36].

If the cable is tightened with a tool, for example a wrench, observe maximum tightening torque, [Cable connections](#) [► 36].

- If applicable: connect multiple products to each other, [Combining several products \(PROFIBUS, CAN bus\)](#) [► 40].

**Only PROFIBUS or CAN bus:**

- On the last product, plug the termination resistor into the socket.
- Set address of PROFIBUS or CAN bus via the rotary encoding switch, [Configuring PROFIBUS or CAN bus](#) [► 41].

**Only CAN bus:**

- Set the baud rate, [Setting the baud rate \(CAN bus\)](#) [► 40].

**All communication interfaces:**

## CAUTION

**Material damage due to erroneous control!**

If the DIP switch is in the "ON" position when switching on the voltage supply, the product may become damaged.

- Before switching on the product, move the DIP switch into the "OFF" position.

- If necessary, move the DIP switch "1" into the "OFF" position.
- Plug the power supply cable into the plug and screw it in tight, [Cable connections](#) [► 36].  
If the cable is tightened with a tool, for example a wrench, observe maximum tightening torque, [Cable connections](#) [► 36].
- ✓ "Power supply" LED 1 lights up green.
- ✓ "Logic supply" LED 2 lights up green.
- ✓ "Module status" LED 3 flashes yellow.
- ✓ "Module error" LED 4 does not light up.

## 5.2 Connections

### 5.2.1 Mechanical connection

#### Evenness of the mounting surface


The values apply to the whole mounting surface to which the product is mounted.

*Requirements for evenness of the mounting surface (Dimensions in mm)*

Edge length	Permissible unevenness
< 100	< 0.02
> 100	< 0.05

Choose the installation position so that connection cables are not damaged or cannot wrap around the product when swiveling.

- Connect the product to the machine/system with screws.
  - ✓ Use suitable connecting elements (adapter plates) if necessary.
  - ✓ Observe the permissible depth of engagement.
  - ✓ Observe the tightening torque for the mounting screws.

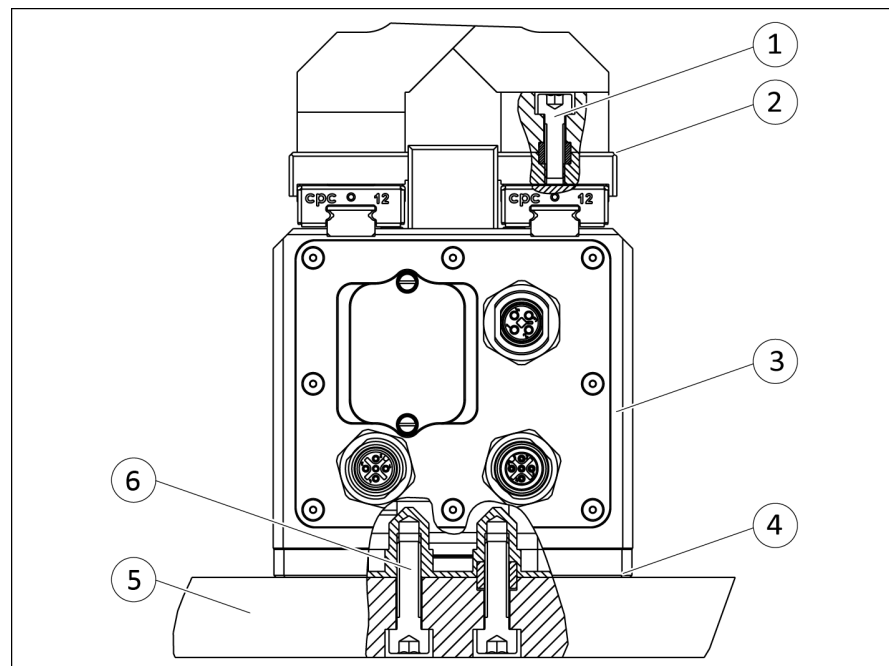

*Assembly example, EGL PROFIBUS/CAN bus variant with connecting element adapter plate*

Item	Designation	Note
1	Fastening screws Finger to base jaw	Specifications for the mounting screws: See the following table
2	Finger interface	
3	Housing	
4	Adapter plate interface	
5	Adapter plate	See catalog (accessories)
6	Fastening screws Product to adapter plate	Specifications for the mounting screws: See the following table



*Depth of engagement and tightening torque, product to adapter plate*

Designation	EGL
Thread	M6
Minimum depth of engagement [mm]	10
Maximum depth of engagement [mm]	11
Centering sleeve [Ø]	10
Tightening torque [Nm]	10.1

*Depth of engagement and tightening torque, finger to base jaw*

Designation	EGL
Thread	M5
Minimum depth of engagement [mm]	7.5
Maximum depth of engagement [mm]	7.8
Centering sleeve [Ø]	8
Tightening torque [Nm]	5.9

## 5.2.2 Electrical connection

### CAUTION

#### Risk of damage to the electronics!

A faulty connection can cause damage to the internal electronics.

- The supply network must be a network of type "PELV" for power and logic.
- Observe the PIN assignment of the connecting terminals.
- Make sure that all components are grounded correctly.

### NOTE


Note on EMC conformity (according to EN 61000-6-3: 2007+A1:2011):

- The product may only be used in DC distribution networks with an expansion of < 30 m.

### 5.2.2.1 Pin allocation

#### Power supply

The power is supplied via an M12 plug. The plug is T-coded.

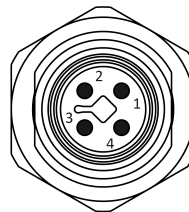


Pin allocation for power supply plug

1	Logic+	3	GND
2	GND	4	Power+

#### Profibus and CAN bus

Profibus and CAN bus are connected via an M12 plug and an M12 socket. The plug and socket of the Profibus are B-coded. The plug and socket of the CAN bus are A-coded.

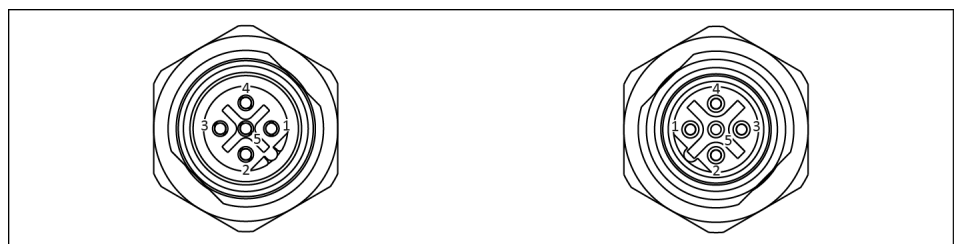

PIN allocation of socket and plug for Profibus oder CAN bus

<b>Profibus</b>			
1	+5V bus	4	PB-B
2	PB-A	5	–
3	PB-GND		
<b>CAN bus</b>			
1	FE	4	CAN-H
2	–	5	CAN-L
3	GND-CAN		

### PROFINET

PROFINET is achieved via two M12 sockets. The sockets of the PROFINET are D-coded.



*PIN allocation of socket and socket, PROFINET variant*

<b>PROFINET</b>			
1	TD+	4	RD-
2	RD+	5	Shield via connector housing
3	TD-		

### 5.2.2.2 Cable connections

#### CAUTION

##### Damage to the connecting plugs and cables possible!


The connecting cables must not transfer any mechanical loads (tension, pressure, vibrations) to the connecting plugs.

- Provide strain relief (3) for all connecting cables near the connecting plug.
- If required, use cable tracks, cable hoses, etc.
- Observe the permissible bending radii of the connecting cables used.

#### CAUTION

##### Material damage due to incorrect assembly!


- When connecting the cable, do not exceed the maximum tightening torque of 0.8 Nm for the cable.

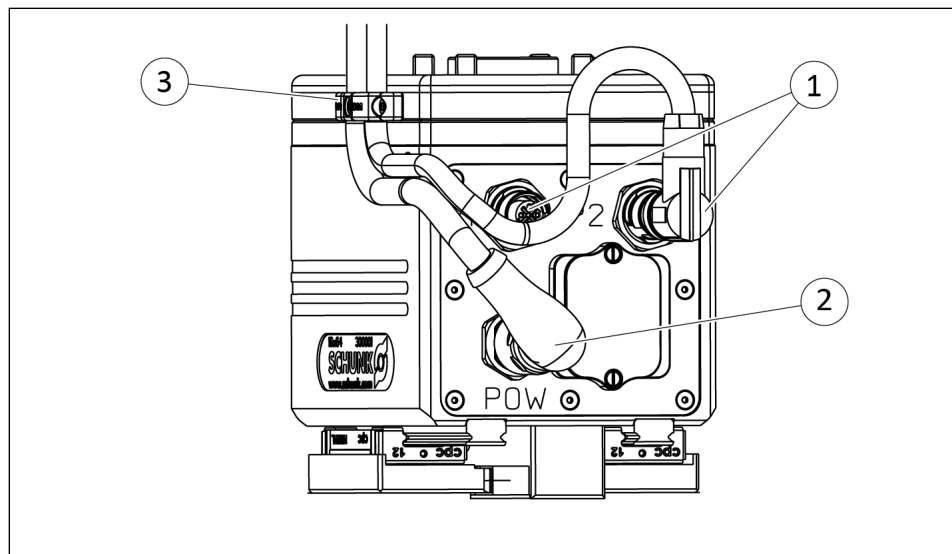


*Cable outlets and strain relief*

1	Cable communication (PROFINET, PROFIBUS, CAN bus)
2	Voltage supply cable
3	Cable outlets and strain relief (shown as an example)

# 5.2.2.3 Wiring diagram

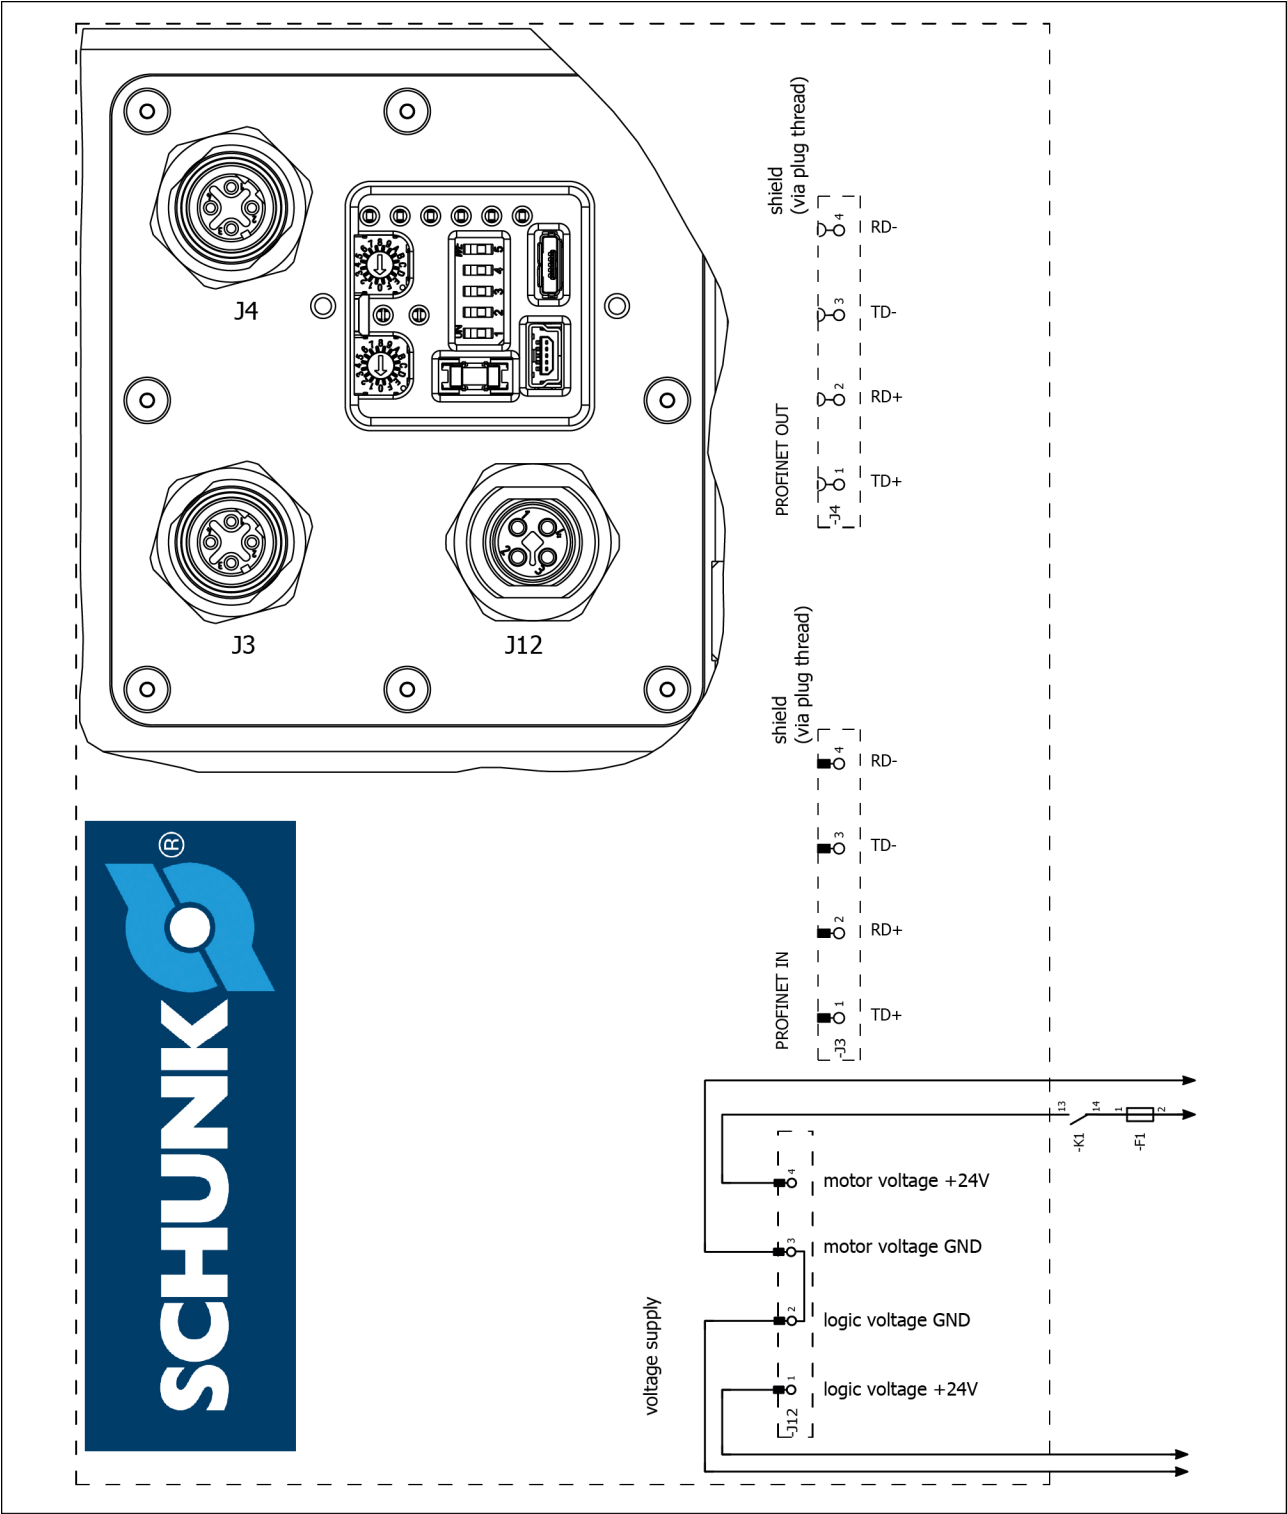

Connection diagram, PROFINET variant

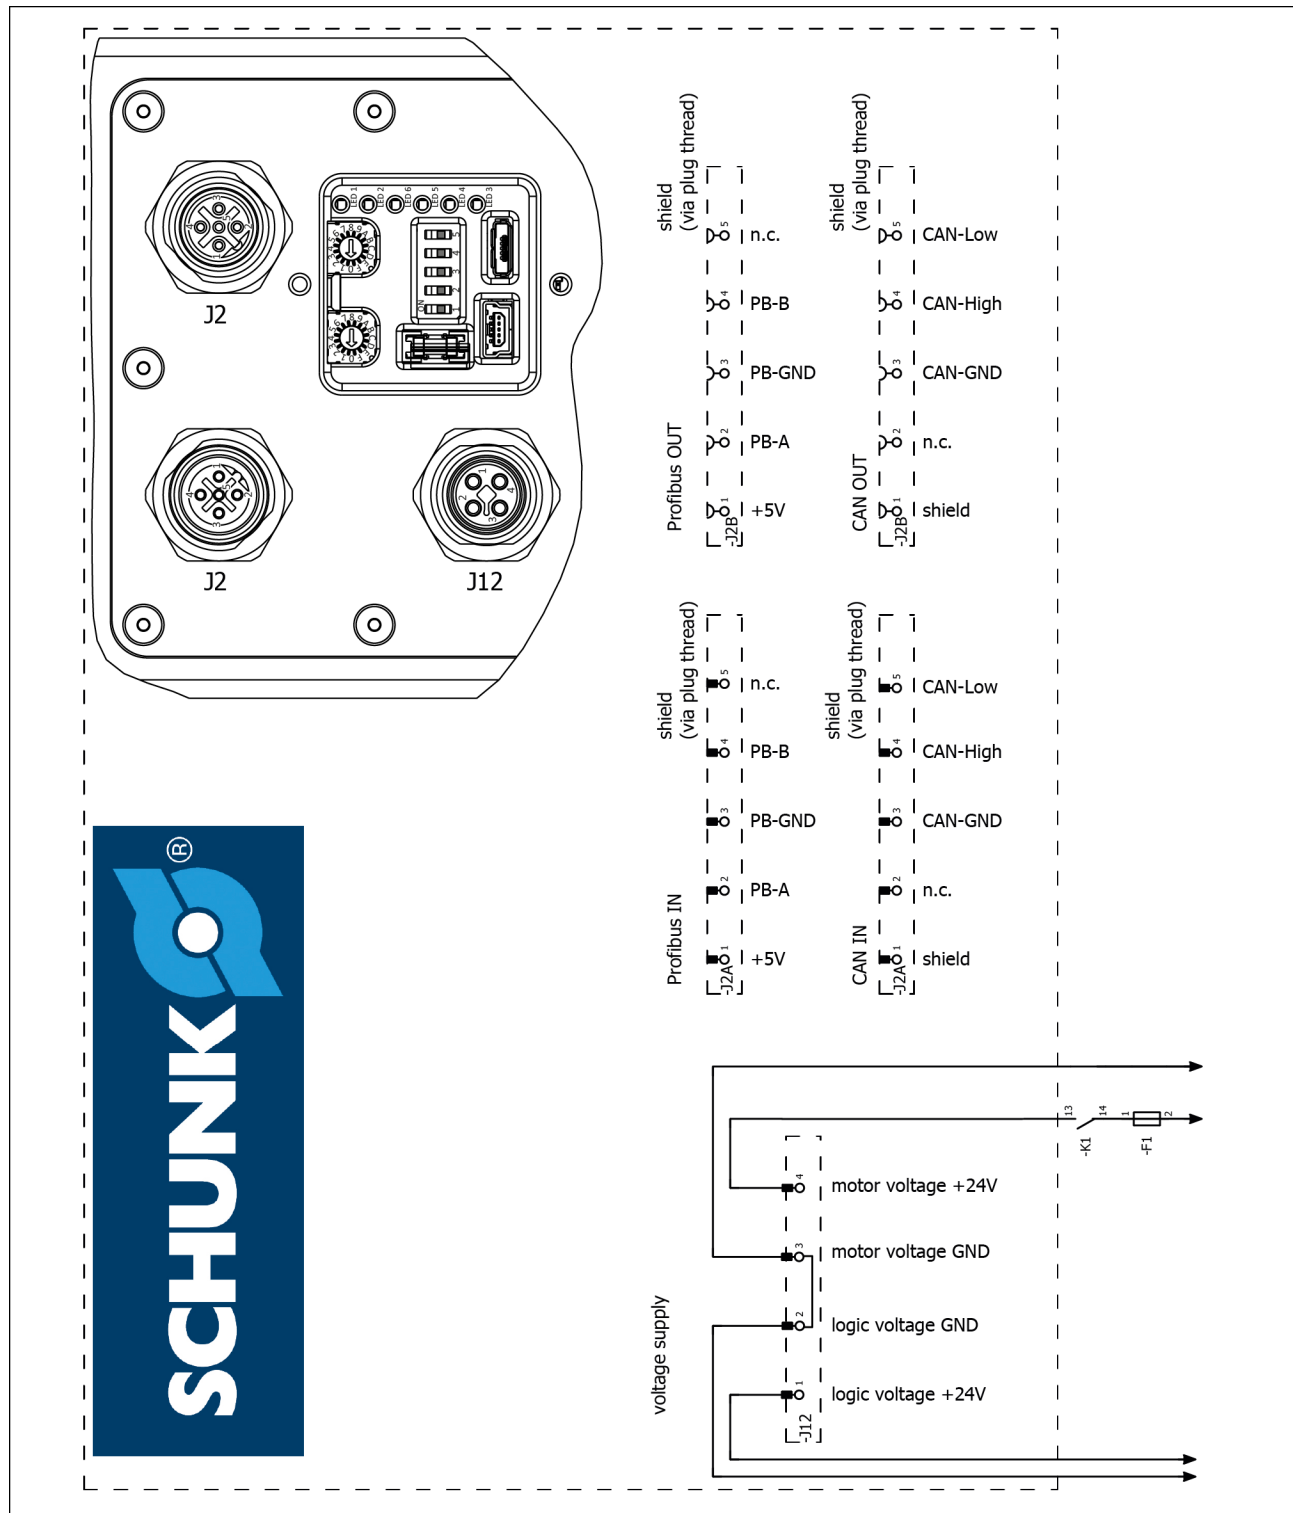


Connection diagram, PROFIBUS and CAN bus variant

#### 5.2.2.4 External protection

The power circuit of the EGL needs to be protected by a fuse provided by the customer, [Technical data](#) [► 19].

### 5.3 Connecting ground cable

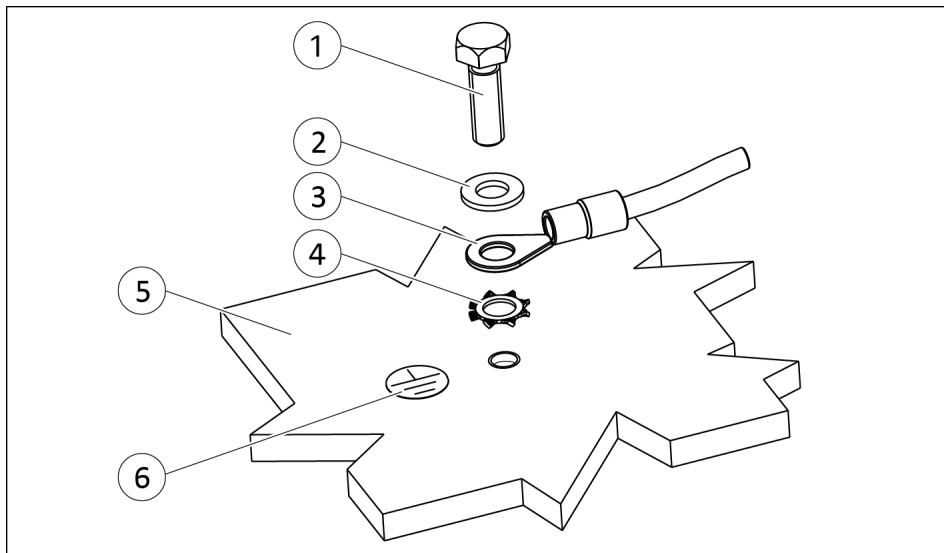

Ground connection

1	Screw *	4	Toothed lock washer
2	Washer	5	Product
3	Cable lug	6	Ground marking

\*) Tightening torque: 5 Nm



A ground connection with a sufficient cross-section must be established between the product and the machine on the customer's premises.

The ground cable must be mounted on the threaded hole identified by the ground marking.

#### NOTE

Only connect the ground cable at the location intended for this purpose.


Always mount the ground cable singly.

Always use all components to screw in the ground cable and install them in this order: toothed lock washer, cable lug, washer and bolt. See "Ground connection" diagram. Observe the tightening torque.

## 5.4 Combining several products (PROFIBUS, CAN bus)

This chapter describes the combination of products of the variants EGL PROFIBUS or EGL CAN bus.

The combination of products of the variant EGL PROFINET is described in the corresponding documents of the PROFIBUS organization.

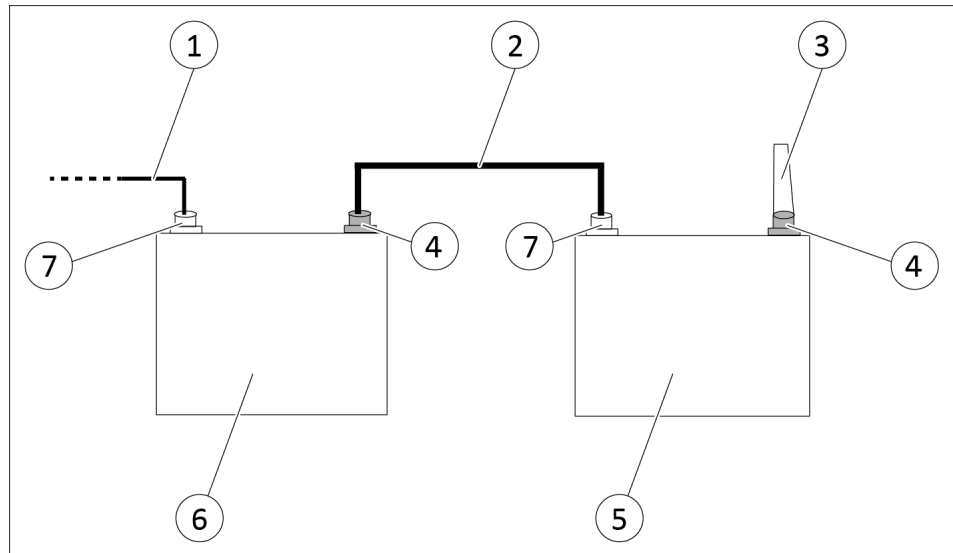

Combining multiple products

1	Bus cable 1	5	Product n+1
2	Bus cable 2	6	Product n
3	Terminating resistor (only for PROFIBUS or CAN bus)	7	PROFIBUS or CAN bus plug
4	PROFIBUS or CAN bus socket		

When multiple products are combined, the signals are looped through from product "n" to product "n+1".

- Plug bus cable 2 from the socket of the product "n" to the product plug "n+1".
- On the last product, plug the termination resistor into the plug.

## 5.5 Setting the baud rate (CAN bus)


The baud rate is only set for variants with CAN bus. The baud rate is set via DIP switches "4" and "5",

[DIP switch](#) [► 28]. The following settings are possible:

DIP switch 4	DIP switch 5	Baud rate
OFF	OFF	125 kbaud
ON	OFF	250 kbaud
OFF	ON	500 kbaud
ON	ON	1000 kbaud



## 5.6 Configuring PROFIBUS or CAN bus

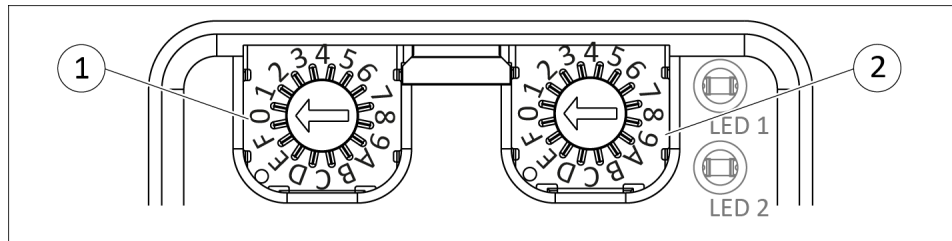

Rotary encoder switch

Item	Designation	Note
1	Rotary encoder switch "S1"	For setting the less significant digit (half byte).
2	Rotary encoder switch "S2"	For setting the more significant digit (half byte).

### NOTE

The CAN bus or PROFIBUS address is configured as a hexadecimal code on the product. The hexadecimal value "0" means decimal "0" and the hexadecimal value "F" means decimal "15". To show the hexadecimal address as a decimal value, multiply the more significant digit (rotary encoder switch "S2") by factor 16 and the less significant digit (rotary encoder switch "S1") by factor 1, see table for configuring the CAN bus or PROFIBUS address. Then add the two values.

**Example:** Configuring address CAN bus 31

Set rotary code switch "S1" to "F" (decimal  $15 \cdot 1$ ) and rotary code switch "S2" to "1" (decimal  $1 \cdot 16$ ).

- Switch off the logic voltage.
- Set the desired fieldbus address by turning the "S1" and "S2" rotary encoder switches.
  - ✓ The rotary encoder switch must engage into the desired position.
- Switch on the logic voltage.

CAN bus and PROFIBUS address range

Fieldbus	Decimal address range	Hexadecimal address range
PROFIBUS	0-125	00-7D
CAN bus	0-255	00-FF

*Address configuration for CAN bus or PROFIBUS*

Hexadecimal address		Decimal address
Rotary encoder switch "S1"	Rotary encoder switch "S2"	
0	0	0
1	0	1
...	0	...
F	0	15
0	1	16
...	1	...
F	1	31
0	2	32
...	...	...
D	7	125
...	...	...
F	F	255

## 6 Start-up

### 6.1 Systemintegration

For the communication between SPS and product, SCHUNK provides the following two protocols:

- SCHUNK Drive Protocol (SDP)
  - Recommended for PROFINET and PROFIBUS by SCHUNK.
  - Not available with CAN bus.
- SCHUNK Motion Protocol (SMP)
  - Available for CAN bus and PROFIBUS.

#### 6.1.1 SCHUNK Drive Protocol (SDP)

If products are connected to the SPS via PROFIBUS or PROFINET, the "SDP" protocol is available.

For more information, see software manual "SCHUNK Drive Protocol (SDP)".

#### 6.1.2 SCHUNK Motion protocol (SMP)

If products are connected to the SPS via PROFIBUS or PROFINET, the "SMP" protocol is available.

For PROFIBUS, SCHUNK recommends using the "SDP" protocol.

For more information, see software manual "SCHUNK Motion Protocol (SMP)".

#### 6.1.3 Notes on the compatibility of Motion Tool Schunk (MTS) and firmware

The "Motion Tool SCHUNK (MTS)" configuration and commissioning tool and the firmware are coordinated with each other. Only the combinations of "MTS" and firmware version listed in the following table are compatible with each other. If other combinations are used, the product may end up in an undefined status during parameterization.

Compatibility of Firmware and Motion Tool SCHUNK (MTS)		
Firmware	2.x	3.x
MTS	2.x	2.x

The program version of the "Motion Tool SCHUNK (MTS)" is shown at the top of the program window.

The software version is displayed on the "General Information" tab under "Software Version".

The firmware version of the product can be found in the product window by choosing "Module" and then "Module Information".

## 6.2 Commissioning the product

### NOTE

For the communication between product and PC, the parameterization interface, USB mini AB device or the interface for PROFINET, PROFIBUS or CAN bus can be used.

If a device is connected to one or both USB interfaces, the respective bus connection will not function even if a bus cable is connected.

In the following cases, communication via the bus connection is not possible:

- If a USB device is connected to the interface USB mini AB, device.
- When connecting the USB stick to the interface USB micro AB, host and when the DIP switch 1 is "ON".

The product is commissioned by means of the "Motion Tool SCHUNK (MTS)" configuration and commissioning tool.

When you open the MTS, you must select the interface you wish to use for communication.

"The Motion Tool Schunk (MTS)" can be opened via the DVD or directly on the computer. If the "Motion Tool Schunk (MTS)" is to be opened directly on the computer, you must copy the "MTS" folder to a directory of your choice on the computer.

### NOTE

Motion Tool SCHUNK (MTS) does not require any installation! In order to save settings made, SCHUNK recommends a folder in which all users have write permission.

Default values for motions are predefined for the product as standard values. The following default values apply after the restart:

- Target speed
  - 10% of maximum value
- Target acceleration
  - 10% of maximum value
- Target jerk
  - 50% of maximum value

If these values are changed, the change is only saved temporarily, for as long as the product is connected to the logic voltage. When the logic voltage is disconnected from the product and switched on again, the product is always reset to these default values.

The following section describes commissioning and communication via the USB interface.

- **Only PROFIBUS or CAN bus:** Address for PROFIBUS or CAN bus is set
- **Only CAN bus:** Baud rate is set
- **All communication interfaces:** Product is mechanically and electrically connected
- Insert the supplied DVD into the computer and install the USB driver.
- Connect product to the computer via the parametrized interface, USB mini AB device.
- Open configuration and commissioning tool "Motion Tool SCHUNK (MTS)" via "mts.exe".
- Perform initial commissioning via "Motion Tool SCHUNK (MTS)", see software handbook "Motion Tool SCHUNK (MTS)".

## 6.3 PROFINET

### 6.3.1 Types of communication of PROFINET

The product supports the PROFINET communication types:

- **TCP/IP:**  
Open Ethernet TCP/IP communication without real time requirements
- **RT (Real Time):**  
IO data exchange between automation devices in real time (>1 ms).
- **IRT (Isochronous Real Time):**  
Isochronous real time communication for synchronized data exchange.

The product is incorporated into the PROFINET network as an IO device.

### 6.3.2 Operating behavior of the product

#### NOTE

The transducer system integrated in the product acts as a pseudo absolute-value transducer in conjunction with the position maintenance brake. Therefore, under certain conditions, referencing may be omitted after a restart, provided that the base jaws can move freely and have not been moved manually before. To ensure a reliable process sequence, SCHUNK recommends carrying out a reference run after each system restart.

If a product is connected, the following operating behavior will be exhibited:

- **Behavior when switching on the voltage supply:**
  - After switching on the voltage supply, the product will be in the "fast stop" mode and will not perform any movements.
  - The product will only perform movements if the product is driven by the higher-level control.
- **Behavior on canceling the connection between the higher-level control and the product:**

On canceling the connection, the product will enter fast stop and will not perform any movements.
- **Behavior with IOPS=BAD:**

The higher-level control will send data to the product periodically. The data qualifier IOPS contained there will provide information about the validity of the initial data. If this data qualifier has the value "BAD", the product performs a fast stop and does not perform any movement.

### 6.3.3 Commissioning with PROFINET interface

- Configure the hardware.
- Assign an IP address and device name.
- Configure the software.
- Switch on the logic voltage.
- Check if the logic voltage is present.
  - ✓ "Logic supply" LED 2 lights up green.
- Switch on power supply.
- Check if the power supply is present.
  - ✓ "Power supply" LED 1 lights up green.
- Check if an error message is present.
  - ✓ "Module error" LED 4 does not light up or flash. The product is ready.
  - ✓ "Module error" LED 4 lights up or flashes. An error message or warning is pending and the product is not ready for operation.
- If an error message is pending, eliminate the error: Troubleshooting.
- Project product, [Projecting of the regulator](#) [► 47].

### 6.3.4 Projecting of the regulator


#### NOTE

Projecting of the product is described with the projecting software *Siemens TIA-Portal V13*, for example.


The following illustrations may differ from the actual design.

#### 6.3.4.1 Installing GSDML file

- The current GSDML file is available (see DVD supplied or download from [schunk.com](http://schunk.com)).
- The project engineering software Siemens TIA-Portal is started.

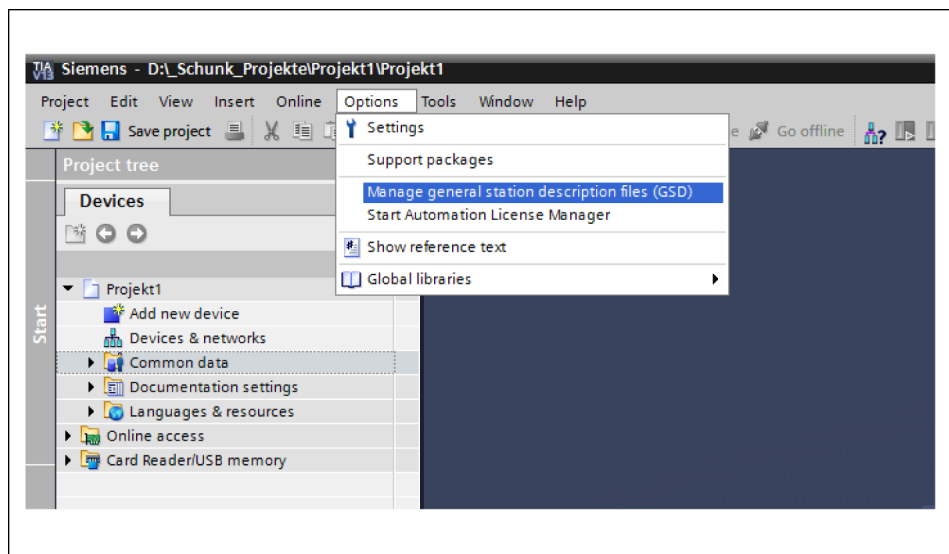


- Choose option *Extras > Manage device description file (GSD)*.
- ✓ The *Manage device description file* window will be displayed.

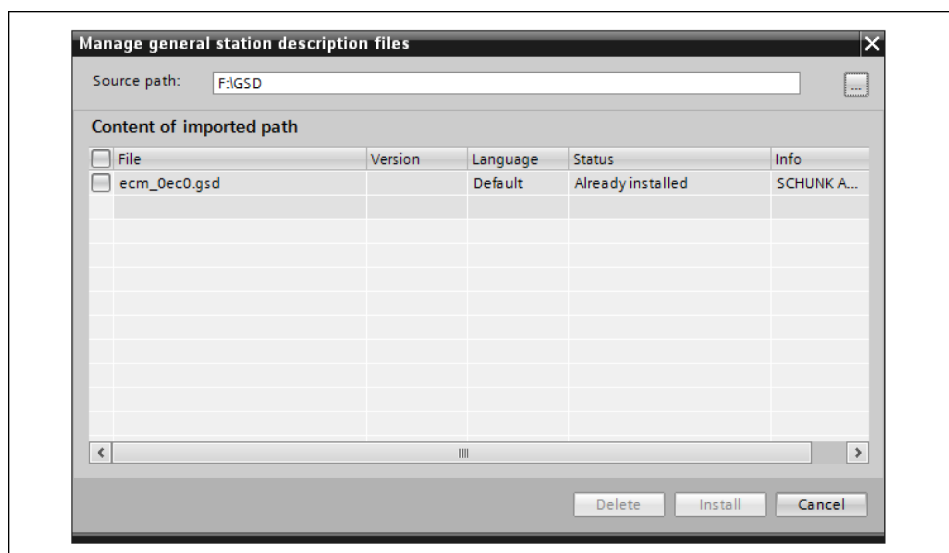


- Under *Source path*, select the storage location of the current GSDML file.
- ✓ The available GSD files will be displayed.


- Highlight the current GSDML file of the product by checking the box.

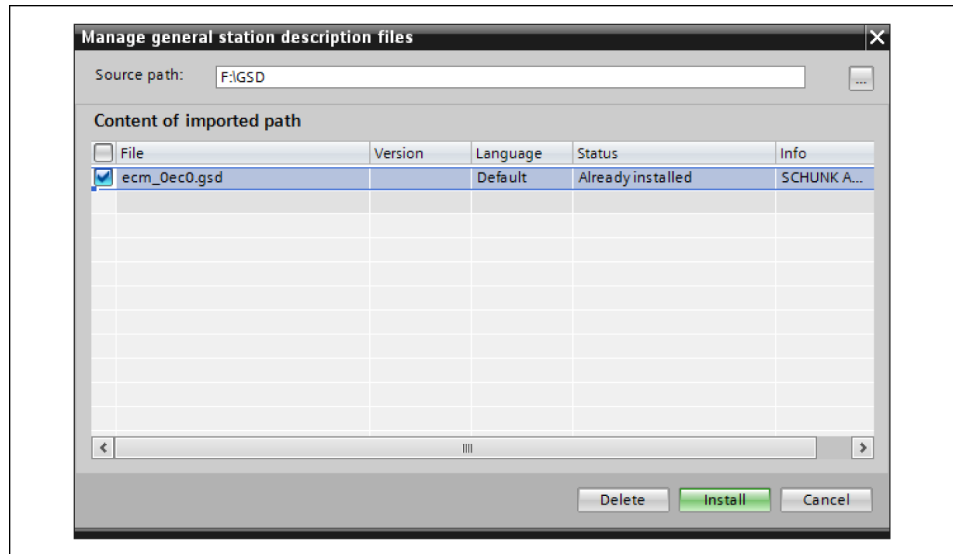


- Start the import of the highlighted GSDML file with *Install*.  
 ✓ The *Installation* window displays the installation steps.

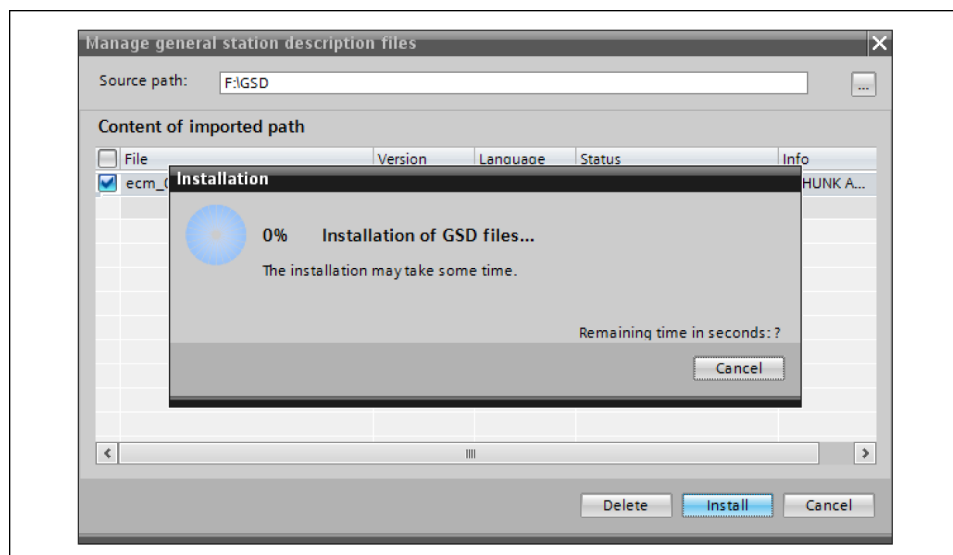



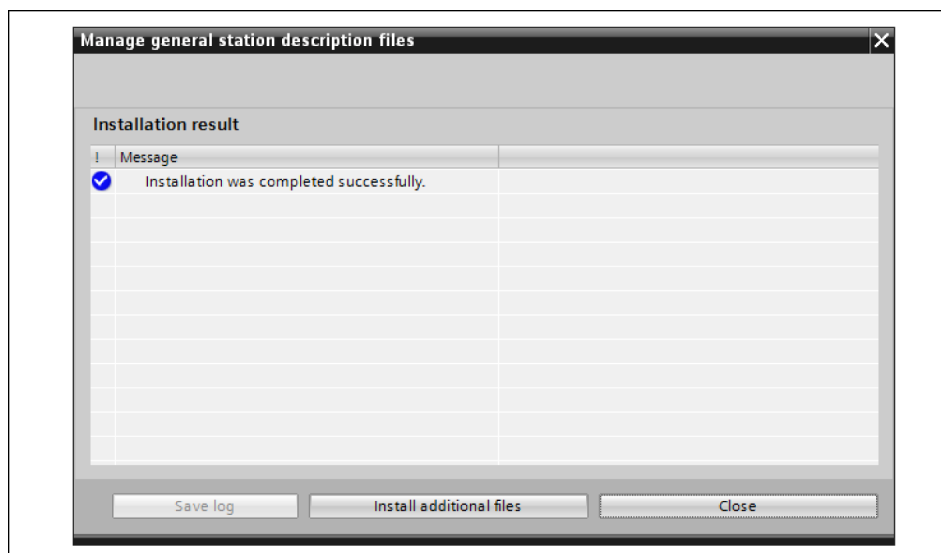


- Confirm the successful completion of the installation with *Close*. The product will then be automatically made available in the catalog of available hardware:

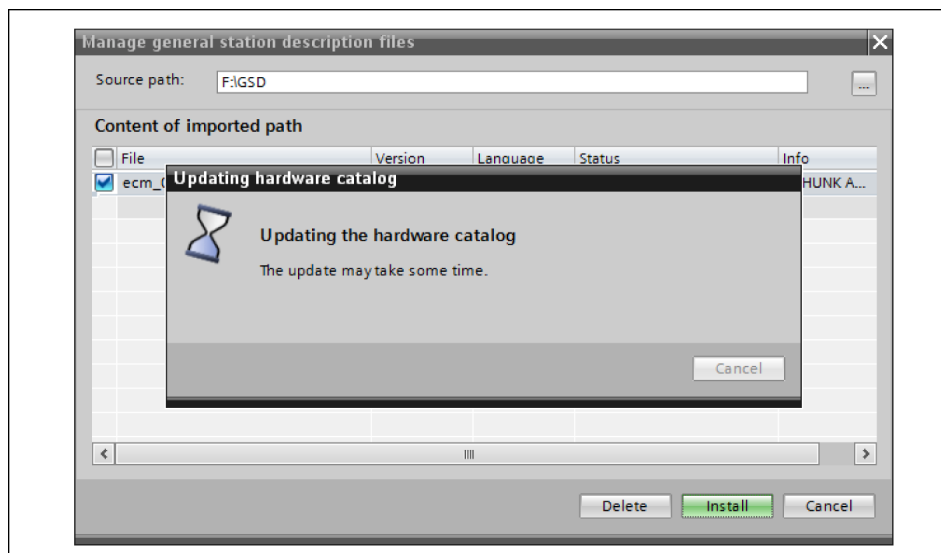


### 6.3.4.2 Projecting the hardware


- The current GSDML file is installed.

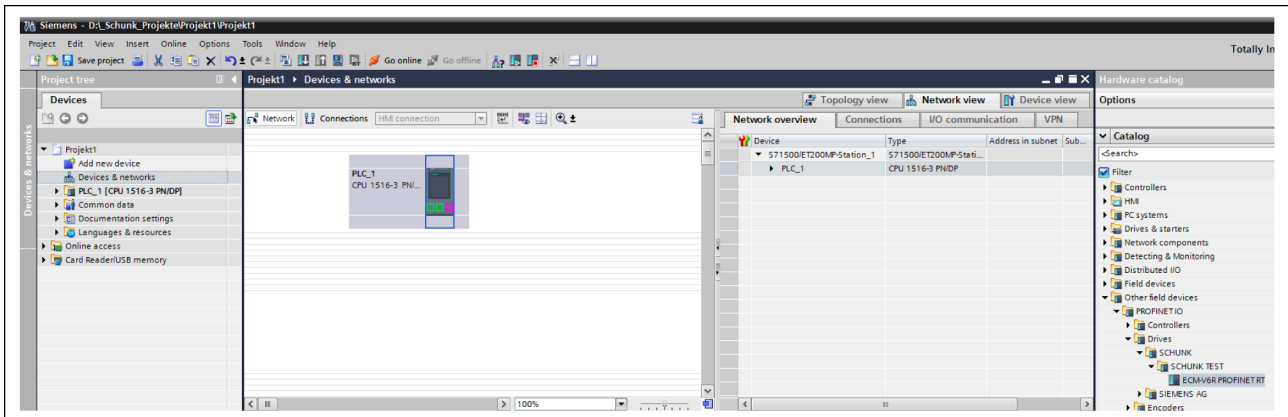


- In the *Devices & Networks* area, select the *Network View* tab.
  - ✓ Insert the CPU for the higher-level control from the hardware catalog
  - ✓ Insert product from the hardware catalog
  - ✓ Carry out networking. To do this, connect the "Product" connection point to the "CPU of the higher-level control" connection point.

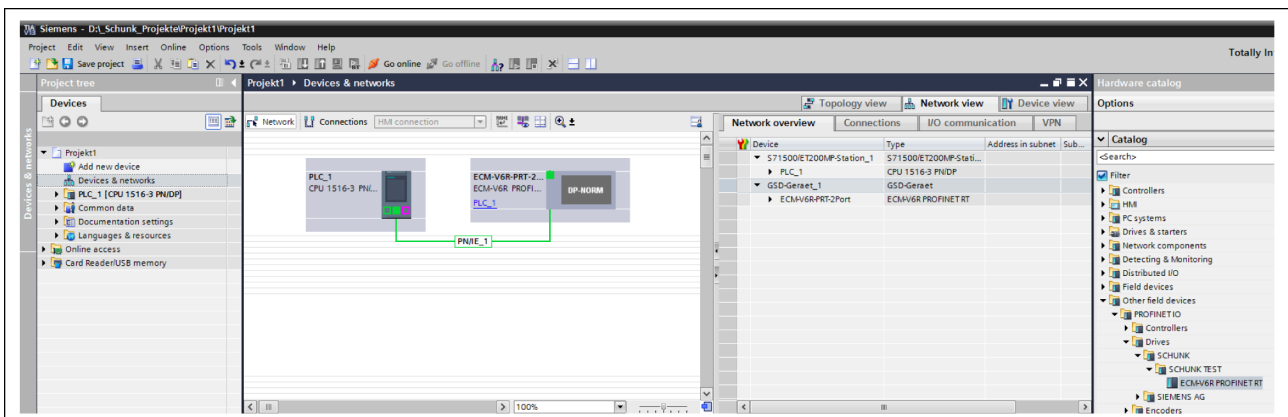


- Highlight the product and select the *Device View* tab.
- Specify the addresses of the inputs and outputs with the *Input/Output Frame* option or the *Input/Output Element* option.

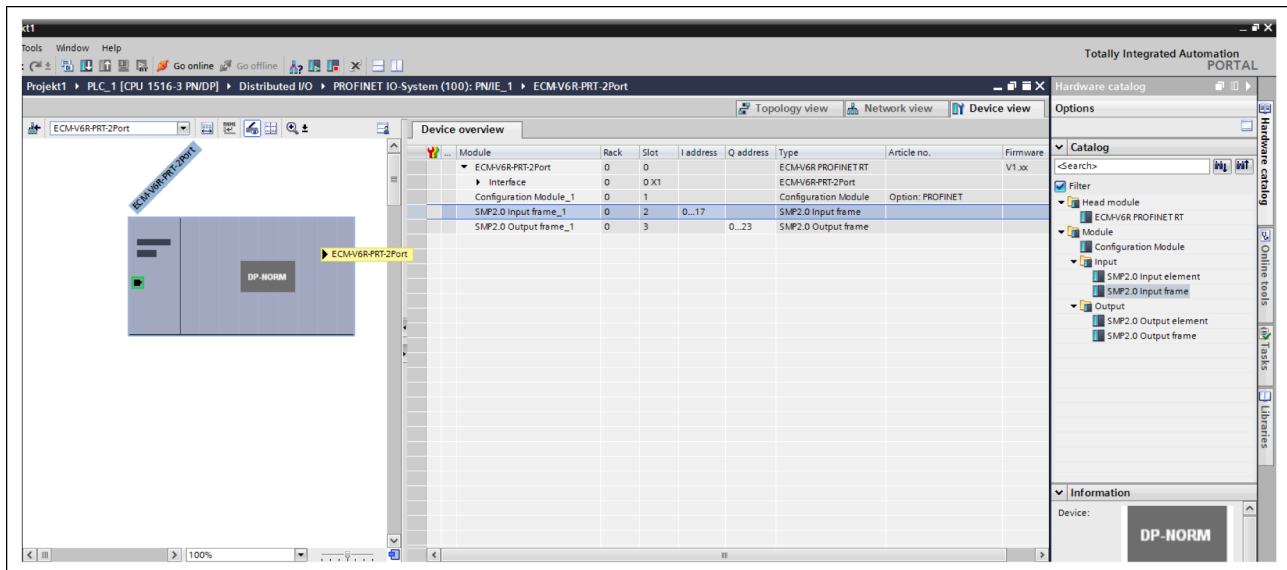


- If necessary, adjust the product name in the *Properties – General* tab.

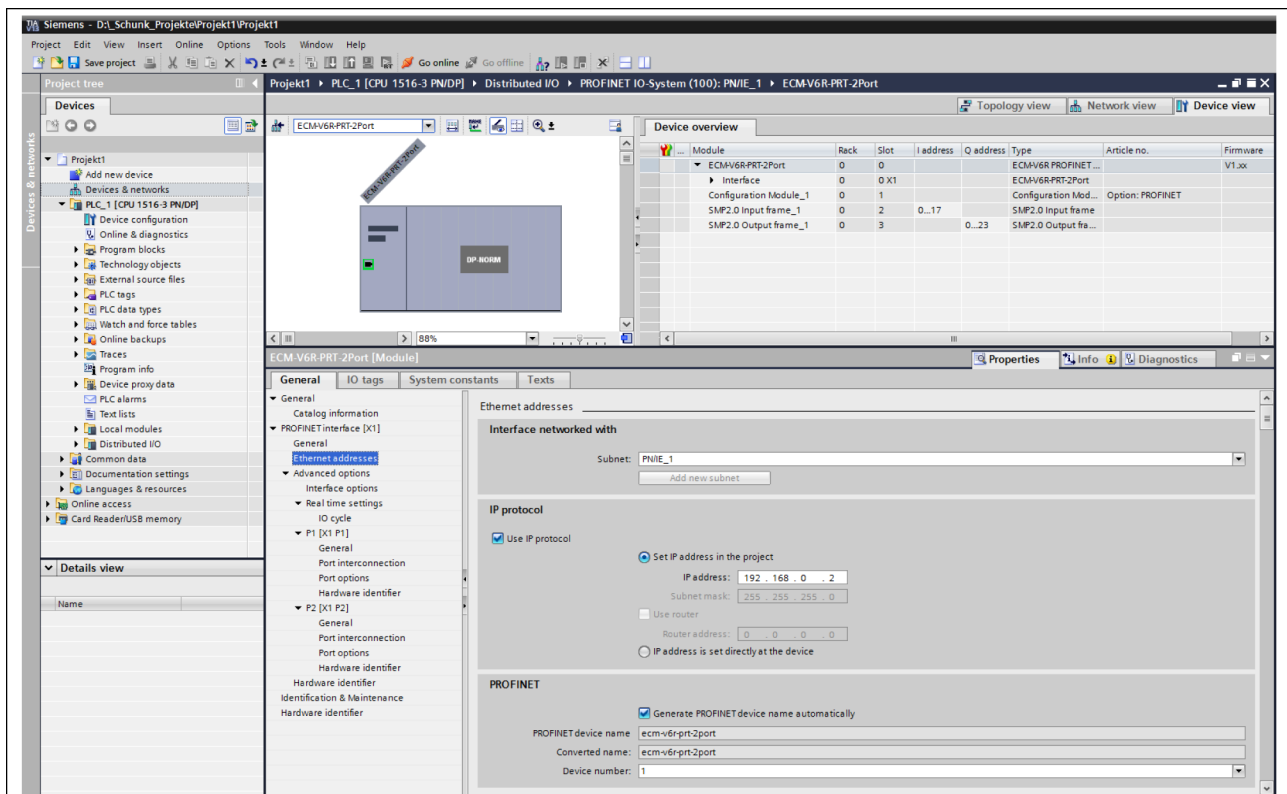


- If necessary, adjust the IP addresses in the *Properties – PROFINET interface [X1] – Ethernet Addresses* tab.

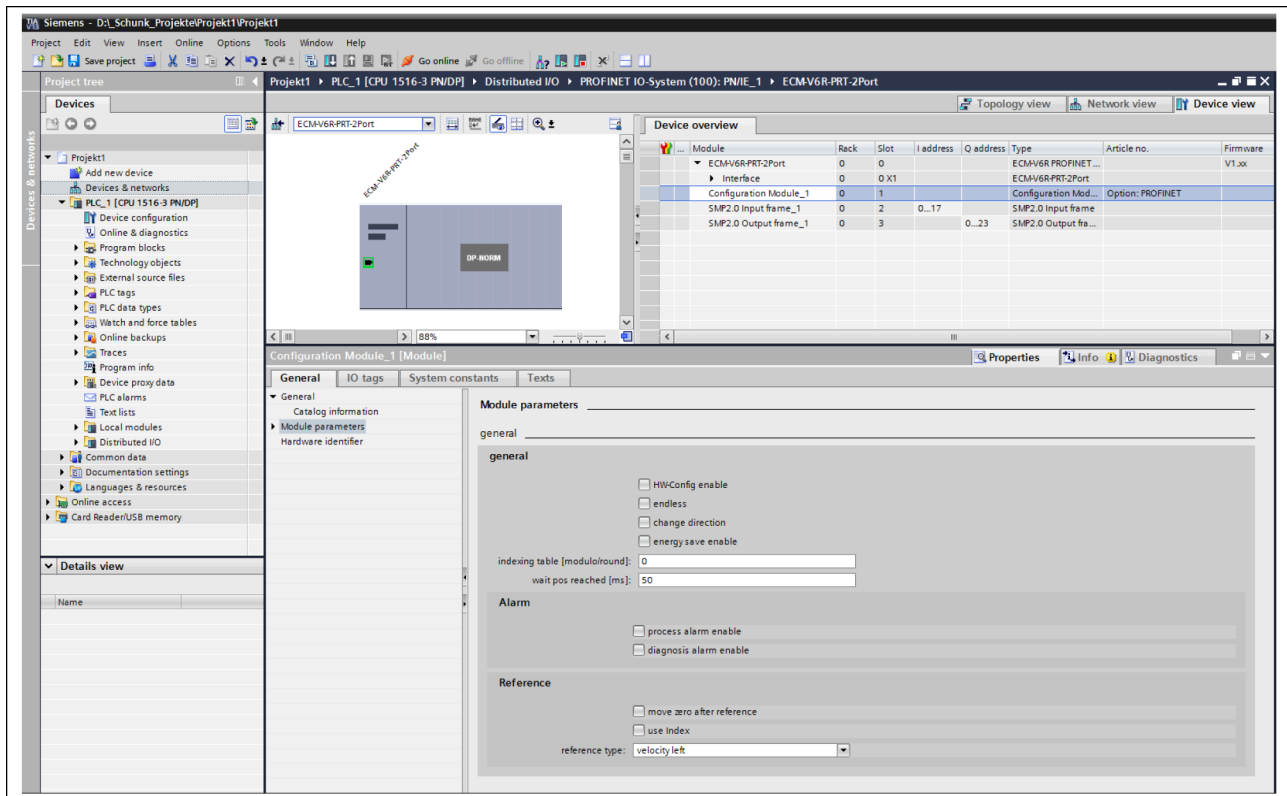


- If necessary, select the *Configuration Module* in *Device view* tab, and adjust the parameters in the *Properties – Module parameters* tab.

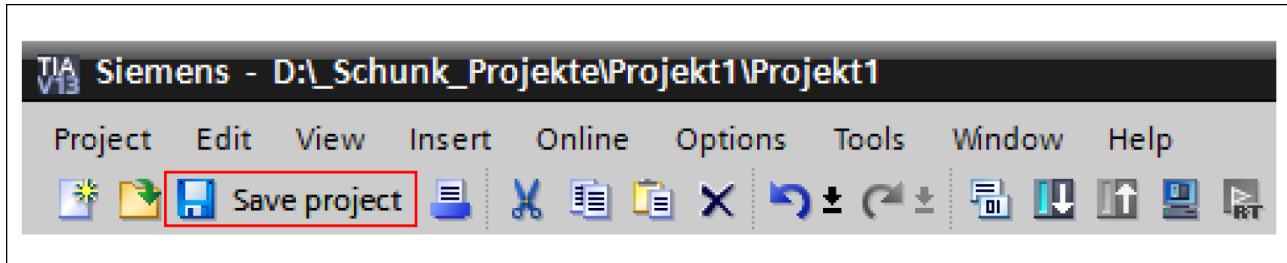


- Press the *Save project* button to save the properties.

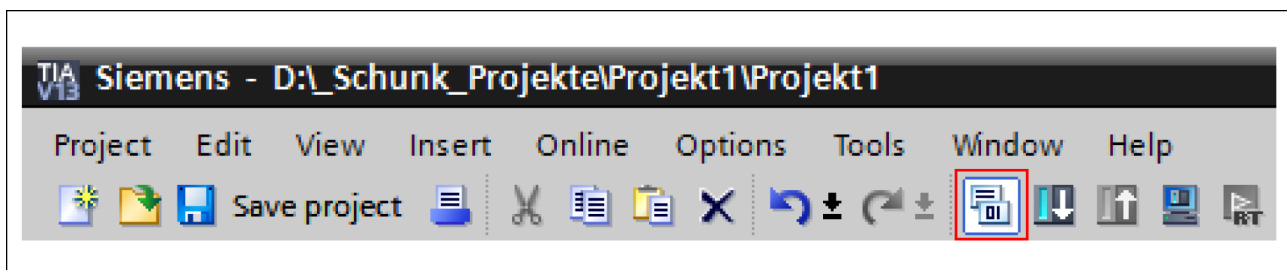


- Press the *Translate* button to check the accuracy of the projecting. If an error or a warning is displayed, remove it and press the *Translate* button again.
- ✓ The *Translate* button is displayed.

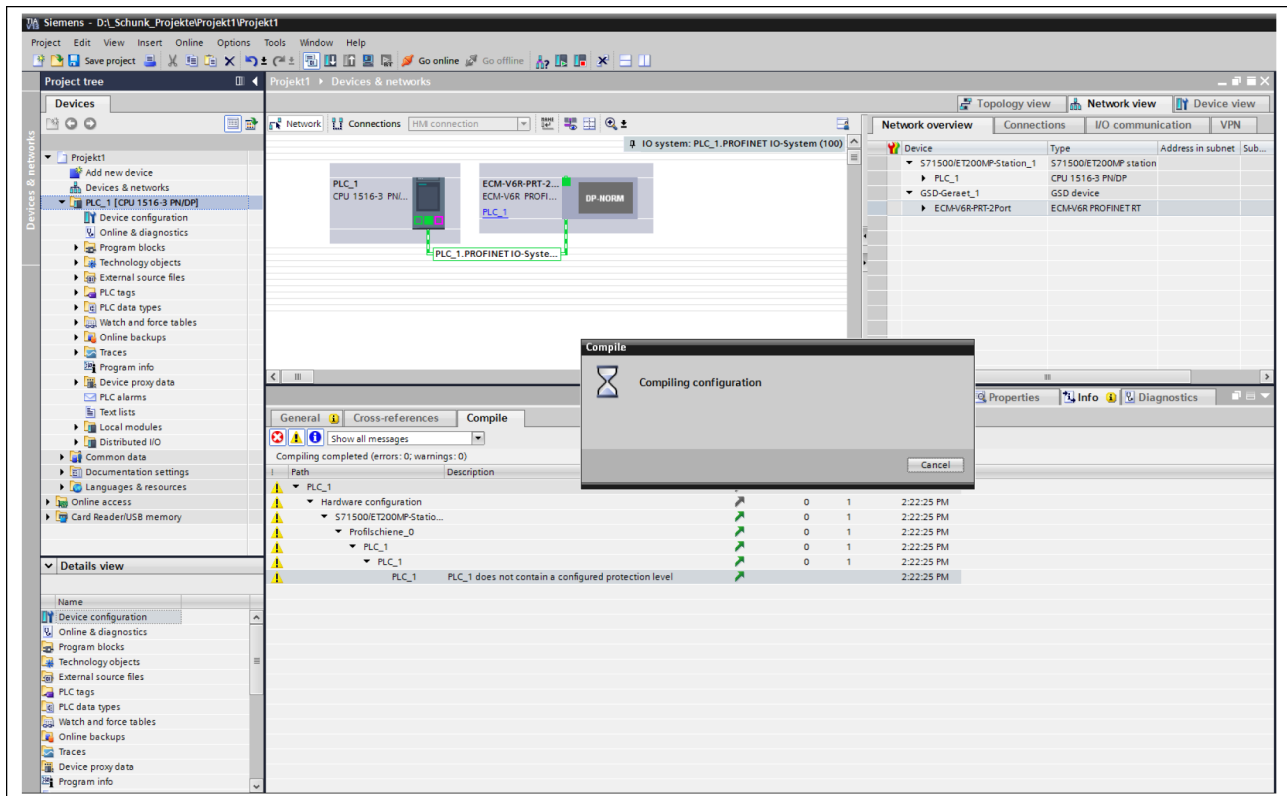

- ✓ After a successful check, the *Translate* window will close automatically.

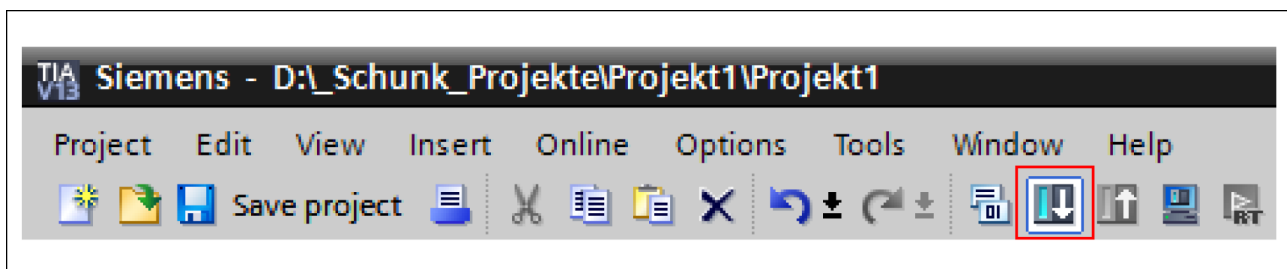


- Highlight the CPU of the higher-level control in the project and press the *Load in Device* button.
- ✓ The *Enhanced Load* window is shown.

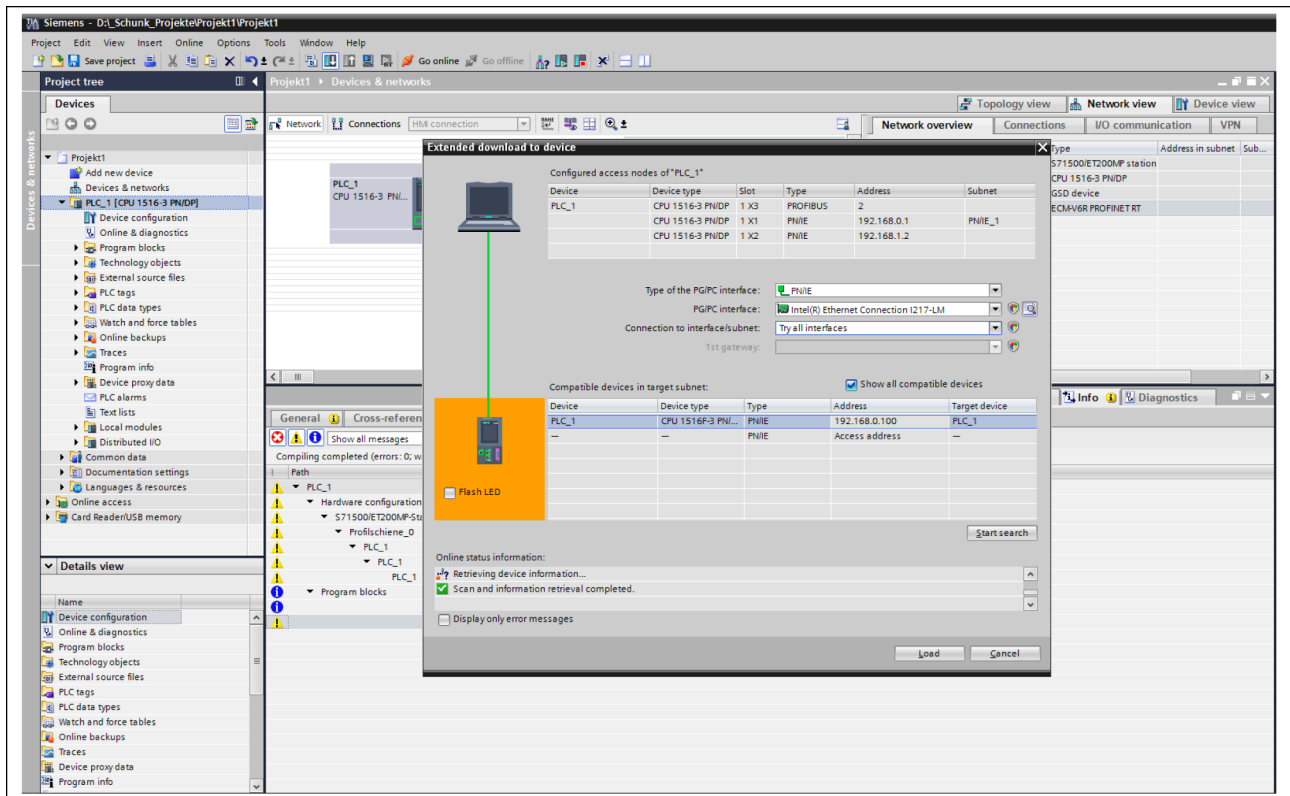


- Apply the following settings:
  - ✓ Fieldbus interface
  - ✓ PC interface
  - ✓ Higher-level control interface
  - ✓ Place a check mark at *Display all compatible devices*
- Click the *Start search* button.
  - ✓ In the results list *Compatible devices in the destination subnet*, the CPU of the higher-level control is displayed.
- Select the CPU of the higher-level control and press the *Load* button.
- ✓ The data will be transferred.

## 7 Operation

### 7.1 Special feature with Firmware 3.03

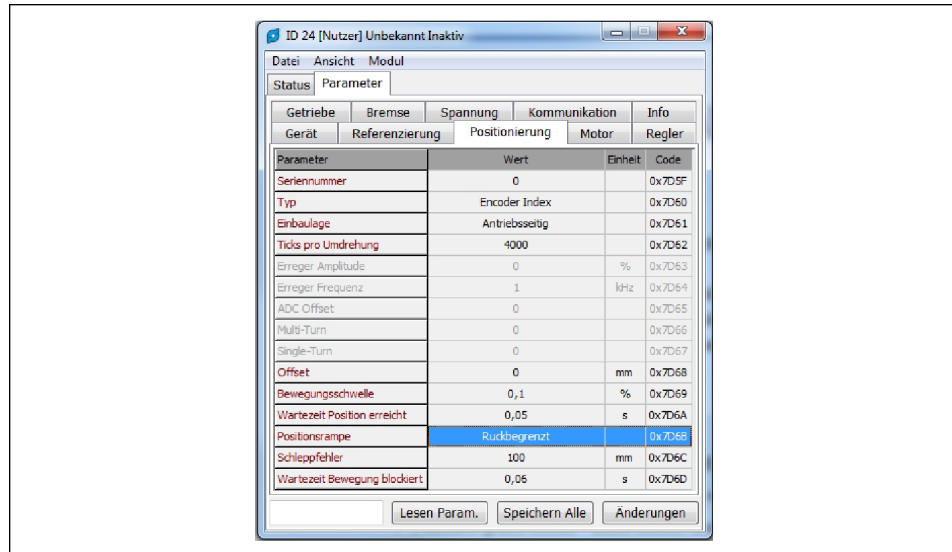

Parameter position ramp

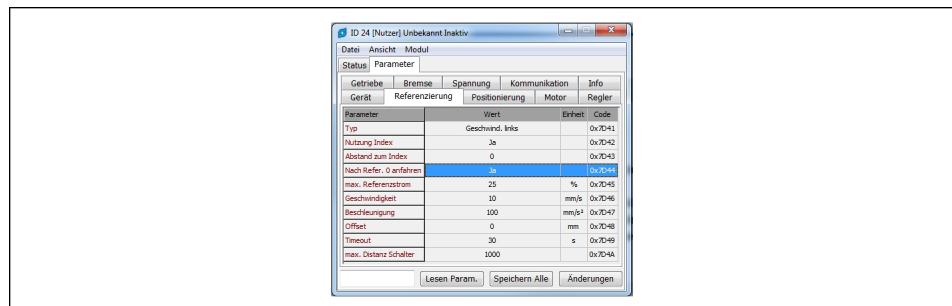


Move parameter to reference 0

If the SDP protocol is used, a value must be entered for the target jerk under the following conditions for a reference run:

- In the "Position ramp" parameter, the "jerk limited" ramp is set and in the "After reference 0 travel" a "Yes" is entered.

If a target jerk is entered, the product does not move.

## 7.2 Perform quick test

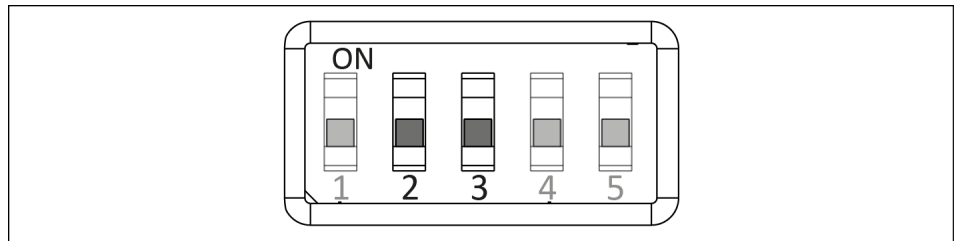

*DIP switch*

Via the USB device or the bus interface, a quick test can be performed with the DIP switches 2 "Test 2" and 3 "Test 1". The USB host must be inactive for the quick test. If the USB host is active, the USB stick inserted and DIP switch 1 set, a quick test is not possible.

### Quick test, up to Firmware 2.12

DIP switch		Function
2 (Test 2)	3 (Test 1)	
0	0	Complete quick test
0	1	Acknowledge a pending error message
1	1	Perform reference journey
1	0	Perform relative travel by 0 mm or 1.0 degree with 10% maximum speed, 10% maximum acceleration, 50% nominal current and 50% maximum jerk

- DIP switches 2 "Test 2" and 3 "Test 1" are in "OFF" position
- If the "Error module" LED lights up: Switch DIP switch 3 "Test 1" to "ON" position.
  - ✓ A pending error message is acknowledged.
  - ✓ If the error is still present after acknowledgment, see "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software manuals and [Trouble shooting](#) [► 64].
- Switch DIP switch 3 "Test 1" to "OFF" position.
- Switch DIP switches 2 "Test 2" and 3 "Test 1" to "ON" position.
  - ✓ Product moves to parameterized reference value.
- Switch DIP switches 2 "Test 2" and 3 "Test 1" to "OFF" position.
- Switch DIP switch 2 "Test 2" to "ON" position.
  - ✓ Relative travel is executed.
- Switch DIP switch 2 "Test 2" to "OFF" position.



- Switch logic voltage off and back on again.
  - ✓ Test mode is ended.
  - ✓ Product is restarted.

#### Quick test, from Firmware 3.03

DIP switch		Function
2 (Test 2)	3 (Test 1)	
0	0	Complete quick test
0	1	Acknowledge a pending error message
1	1	Perform reference journey
1	0	Reserved

- DIP switches 2 "Test 2" and 3 "Test 1" are in "OFF" position
- If the "Error module" LED lights up: Switch DIP switch 3 "Test 1" to "ON" position.
  - ✓ A pending error message is acknowledged.
  - ✓ If the error is still present after acknowledgment, see "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software manuals and [Trouble shooting](#) [▶ 64].
- Switch DIP switch "Test 1" to "OFF" position.
- Switch DIP switches 2 "Test 2" and 3 "Test 1" to "ON" position.
  - ✓ Product moves to parameterized reference value.
- Switch DIP switches 2 "Test 2" and 3 "Test 1" to "OFF" position.
- Switch logic voltage off and back on again.
  - ✓ Test mode is ended.
  - ✓ Product is restarted.

### 7.3 Change parameter configuration on the product with USB stick

For the following action, a USB stick is required, whose file system FAT16 or FAT32 must be formatted. The USB stick is not included in the scope of delivery.

#### Export parameter file

The file ending of the exported parameter file is **\*.sav**.

- Power supply to the product is switched off
- DIP switch "1" is in "OFF" position
- Connect USB stick to the USB micro AB, host.
- Put DIP switch "1" into "ON" position and wait 10 seconds.
  - ✓ The current configuration of the product is saved on the USB stick.
- Put DIP switch "1" into "OFF" position.
- Disconnect the USB flash drive from the USB Micro AB, host.

#### Change configuration

The parameters are changed in the "MTS Config Tool", software, see software manual "Motion Tool Schunk (MTS)".

#### Import parameter file

The file ending of the parameter file to be imported is **\*.par**.

- Power supply to the product is switched off
- DIP switch "1" is in "OFF" position
- Connect USB stick to the USB micro AB, host.
- Turn on the power supply to the product and wait 10 seconds.
- Put DIP switch "1" into "ON" position and wait 10 seconds.
- Put DIP switch "3" into "ON" position and wait 10 seconds.
  - ✓ Parameters are transferred from the USB stick to the product.
- DIP switches "1" and "3" into "OFF" position.
- Disconnect the USB flash drive from the USB Micro AB, host.
- Switch off the logic voltage.
  - ✓ Product is restarted.

## 7.4 Updating firmware

The firmware can only be updated after consultation with SCHUNK's service department via the USB Mini AB (Device) or USB Micro AB (Host).

---

### NOTE

The Firmware has the file extension \*.bin.


---

### 7.4.1 Update via USB Mini AB (device)


The firmware can be updated via a Windows computer using the "Firmware Updater" tool:

- Insert the DVD supplied in the scope of delivery into the computer.
- Open the "FirmwareUpdater.exe" file and follow the instructions.

## 7.4.2 Update via USB Micro AB (host)

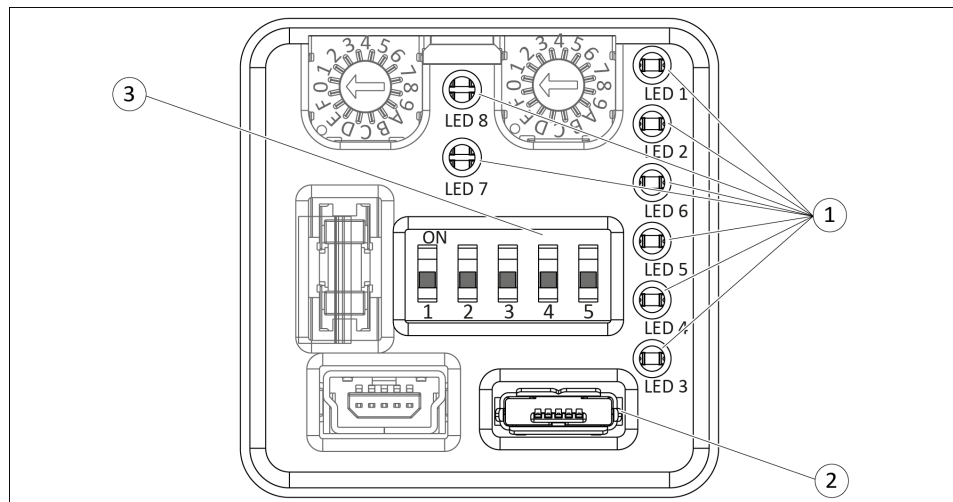

Service window, PROFINET variant

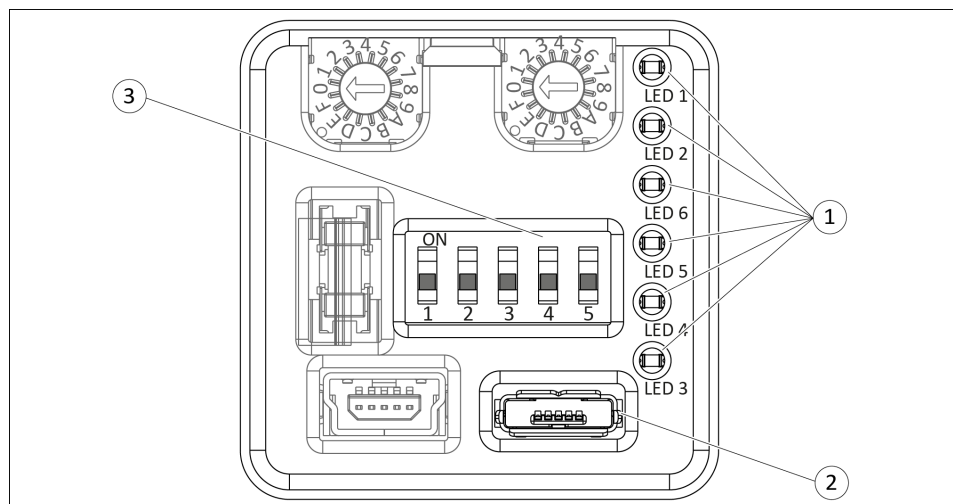

Service window, PROFIBUS and CAN bus variant

1	LED
2	USB Micro AB, host
3	DIP switch

### CAN bus communication interface

#### CAUTION

##### Risk of damaging the logic board!

If the product is disconnected from the power supply while the logic board is being updated, the software will not be completely installed and can no longer be started. The logic board update cannot be repeated.

- Do not disconnect the product from the power supply.
- If the product is disconnected from the power supply while the logic board is being updated, send the product to SCHUNK with a repair order.

- There is new firmware on the USB flash drive
- The power supply is disconnected from the product
- DIP switches "1" and "2" are in "OFF" position
- Connect the USB flash drive to the USB Micro AB, host.
- Switch on the power supply of the product.
  - ✓ LED 1 and LED 2 light up green.
  - ✓ LED 6 lights up green.
  - ✓ LED 4 lights up red for approx. 5 seconds.
  - ✓ After LED 4 goes out, LED 3 lights up yellow for approx. 5 seconds.
  - ✓ After LED 3 goes out, LED 4 lights up red.
- Switch DIP switch "1" to "ON" position.
  - ✓ LED 1 and LED 2 light up green.
  - ✓ LED 6 lights up red.
  - ✓ LED 3 lights up yellow.
  - ✓ LED 4 flashes red once.
- Switch DIP switch "2" to "ON" position.
  - ✓ LED 1 and LED 2 light up green.
  - ✓ LED 6 lights up red.
  - ✓ LED 3 lights up yellow.
  - ✓ LED 4 flashes red once.

---

**NOTE**

The logic board is being updated.

- Do not disconnect the product from the power supply.

- 
- ✓ LED 4 flashes red rapidly.
  - ✓ LED 4 lights up red for approximately 10 seconds and goes out.
  - The adapter board update is finished.
  - Disconnect the product from the power supply.
  - Disconnect the USB flash drive from the USB Micro AB, host.
  - Switch DIP switches "1" and "2" to "OFF" position.

- Switch on the power supply of the product.
  - ✓ LED 1 and LED 2 light up green.
  - ✓ LED 6 lights up green.
  - ✓ LED 4 lights up red for approx. 5 seconds.
  - ✓ After LED 4 goes out, LED 3 lights up yellow for approx. 5 seconds.
  - ✓ After LED 3 goes out, LED 4 lights up red.
- ✓ The firmware update was successful and the product is ready for use.

### PROFIBUS and PROFINET communication interfaces

#### **CAUTION**

##### **Risk of damaging the logic board!**

If the product is disconnected from the power supply while the logic board is being updated, the software will not be completely installed and can no longer be started. The logic board update cannot be repeated.

- Do not disconnect the product from the power supply.
  - If the product is disconnected from the power supply while the logic board is being updated, send the product to SCHUNK with a repair order.
- 
- There is new firmware on the USB flash drive
  - The power supply is disconnected from the product
  - DIP switches "1" and "2" are in "OFF" position
  - Connect the USB flash drive to the USB Micro AB, host.
  - Switch on the power supply of the product.
    - ✓ LED 1 and LED 2 light up green.
    - ✓ LED 6 lights up red.
    - ✓ LED 4 lights up red for approx. 5 seconds.
    - ✓ After LED 4 goes out, LED 3 lights up yellow.
  - Switch DIP switch 1 to "ON" position.
    - ✓ LED 1 and LED 2 light up green.
    - ✓ LED 6 lights up red.
    - ✓ LED 3 lights up yellow.
    - ✓ LED 4 flashes red once.

- Switch DIP switch 2 to "ON" position.
  - ✓ LED 1 and LED 2 light up green.
  - ✓ LED 6 lights up red.
  - ✓ LED 3 lights up yellow.
  - ✓ LED 4 flashes red once.

---

**NOTE**

The logic board is being updated.

- Do not disconnect the product from the power supply.

- 
- ✓ LED 4 flashes red.

---

**NOTE**

The adapter board is being updated.

- If the product is disconnected from the power supply while the adapter board is being updated, repeat the update process for the product.

- 
- ✓ LED 4 lights up red for approx. 5 seconds and goes out.
  - The adapter board update is finished.
  - Disconnect the product from the power supply.
  - Disconnect the USB flash drive from the USB Micro AB, host.
  - Switch DIP switches "1" and "2" to "OFF" position.
  - Switch on the power supply of the product.
    - ✓ LED 1 and LED 2 light up green.
    - ✓ LED 6 lights up red.
    - ✓ LED 3 lights up yellow for approx. 5 seconds.
    - ✓ After LED 3 goes out, LED 4 lights up red.
  - ✓ The firmware update was successful and the product is ready for use.

## 8 Trouble shooting

Once an error with an error message is eliminated, this error message must be acknowledged, see the "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software manuals. The error is indicated in the service window via LED 4, [LED \[► 25\]](#).

A list of the information and error codes can be found in the "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software modules.

Detailed error information can be read out via "Motion Tool SCHUNK (MTS)"; see the "SCHUNK Motion Control (SMP)" software manual.



## 8.1 Communication malfunction

Possible cause	Corrective action
Logic supply fuse triggered	Check logic supply fuse and replace if necessary.
The connection between the product and "Motion Tool SCHUNK (MTS)" was interrupted	Check bus cable or USB cable for damage and replace if necessary.
No communication can be established with "Motion Tool SCHUNK (MTS)" (USB, PROFIBUS or CAN bus interface)	Check delivery state. Note: the product is supplied either with CAN bus or PROFIBUS.
	Check the communication interface.
	Check end terminals. Is the product an end node in the bus? Is the termination resistor connected?
	<b>For product with CAN bus</b>
	Configure the CAN bus address, <a href="#">Configuring PROFIBUS or CAN bus</a> [► 41].
	Check the baud rate, <a href="#">Setting the baud rate (CAN bus)</a> [► 40].
	<b>For product with PROFIBUS</b>
	Check GSD file, use suitable GSD file if necessary.
	Configure PROFIBUS address, <a href="#">Configuring PROFIBUS or CAN bus</a> [► 41].
	Check baud rate (1.5 or 12 mbaud).
Values are saved in EEPROM but not activated	Restart product after saving. OR: Before saving, stop the product using fast stop.  <b>IMPORTANT! New values are not saved in EEPROM if the product is under control or in motion.</b>

## 8.2 Product moves in a jerky fashion, is sluggish or blocked

Possible cause	Corrective action
Product is overloaded	Check load situation, e.g. maximum permissible finger weight, maximum permissible finger length, load data of the base jaws.
	Check product, contact SCHUNK Service if necessary.
Voltage supply malfunction	Check the power output of the power supply unit.
	Check power cable line and cable cross sections (high loss of voltage possible with 24 VDC power supply).
	Check power cable line for shorts and cable breakage.
Sporadic breaks in communication	Check bus connection. <a href="#">Electrical connection</a> [► 34]
Dirt deposits on product (increasing sluggishness)	Clean product. <a href="#">Maintenance intervals</a> [► 67]
Moisture in the product (oil, cutting fluid, cleaning agent)	Clean product. <a href="#">Maintenance intervals</a> [► 67]
	Check for appropriate IP class.
Mechanical defect	Check product and replace if necessary.

## 8.3 Product does not open

Possible cause	Corrective action
No voltage connected. (emergency stop chain interrupted, safety light curtain triggered)	Check the power supply requirement, <a href="#">Technical data</a> [► 19].
Insufficient voltage.	
Power supply fuse triggered	Check power supply fuse and replace if necessary.
Error message pending	Eliminate errors and acknowledge error message, see the "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software manuals.
Setpoint settings for current, speed, jerk and acceleration are not suitable or too low	Check setpoint settings and enter suitable values, see the "SCHUNK Motion Protocol (SMP)" and "SCHUNK Drive Protocol (SDP)" software manuals.

## 9 Maintenance

### 9.1 Maintenance intervals

Interval [Mio. cycles] for EGL	Maintenance work
2	<ul style="list-style-type: none"> <li>• Clean the product dry. (The product corresponds to the protection type IP 46). Remove all coarse dirt and chips from the cavities in the product.</li> <li>• Inspect the product for damage. Replace the product if necessary. Have all repair work on the product carried out only by SCHUNK.</li> </ul>
As required	Update firmware, <a href="#">Updating firmware</a> [► 59].

### 9.2 Disassembly and assembling

This product must not be disassembled for maintenance.

#### **CAUTION**

##### **Material damage due to improper disassembly!**

Incorrect works can cause damage to the mechanics and internal electronics.

- Disassembly or opening of the product is not permitted.
- Only allow SCHUNK to repair the product.

## 10 EU-Declaration of Conformity

Manufacturer/  
Distributor

SCHUNK GmbH & Co. KG Spann- und Greiftechnik  
Bahnhofstr. 106 – 134  
D-74348 Lauffen/Neckar

Product designation: 2-finger parallel gripper EGL  
ID number 1325751, 1325754, 1302877

We hereby declare on our sole authority that the product meets the requirements of the following directive at the time of declaration.

The declaration is rendered invalid if modifications are made to the product.

- **EMC Directive 2014/30/EU**

Directive of the European Parliament and the Council of February 26, 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility

Applied harmonized standards, especially:

EN 61000-6-2 (2005) Electromagnetic compatibility (EMC) - Part 6-2: Generic standards -Immunity for industrial environments  
IEC 61000-6-2: 2005

EN 61000-6-3: 2007+ A1:2011 Electromagnetic compatibility (EMV) - Part 6-3: Generic standards - Interference emissions in residential, commercial, industrial and light industrial environments  
IEC 61000-6-3: 2006 + A1:2010

Signed for and on behalf of: SCHUNK GmbH & Co. KG

*Signature: see original declaration*

Dr.-Ing. Manuel Baumeister,  
Technology & Innovation,  
Mechatronics & Sensors

Lauffen/Neckar, February 2020

## 11 Translation of original declaration of incorporation

in terms of the Directive 2006/42/EG, Annex II, Part 1.B of the European Parliament and of the Council on machinery.

Manufacturer/ Distributor	SCHUNK GmbH & Co. KG Spann- und Greiftechnik Bahnhofstr. 106 – 134 D-74348 Lauffen/Neckar
------------------------------	---

We hereby declare that on the date of the declaration the following partly completed machine complied with all basic safety and health regulations found in the directive 2006/42/EC of the European Parliament and of the Council on machinery. The declaration is rendered invalid if modifications are made to the product.

Product designation:	2-finger parallel gripper / EGL / electric
ID number	1325751, 1325754, 1302877

The partly completed machine may not be put into operation until conformity of the machine into which the partly completed machine is to be installed with the provisions of the Machinery Directive (2006/42/EC) is confirmed.

Applied harmonized standards, especially:

EN ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
-------------------	---

The manufacturer agrees to forward on demand the relevant technical documentation for the partly completed machinery in electronic form to national authorities.

The relevant technical documentation according to Annex VII, Part B, belonging to the partly completed machinery, has been created.

Person authorized to compile the technical documentation:  
Robert Leuthner, Address: see manufacturer's address

*Signature: see original declaration*

Lauffen/Neckar, February 2020

Dr.-Ing. Manuel Baumeister,  
Technology & Innovation,  
Mechatronics & Sensors

## 12 Annex to Declaration of Incorporation

according 2006/42/EG, Annex II, No. 1 B

1. Description of the essential health and safety requirements pursuant to 2006/42/EC, Annex I that are applicable and that have been fulfilled with:

Product designation	2-finger parallel gripper
Type designation	EGL
ID number	1325751, 1325754, 1302877

To be provided by the System Integrator for the overall machine	↓
Fulfilled for the scope of the partly completed machine	↓
Not relevant	↓

1.1	Essential Requirements			
1.1.1	Definitions		X	
1.1.2	Principles of safety integration		X	
1.1.3	Materials and products		X	
1.1.4	Lighting		X	
1.1.5	Design of machinery to facilitate its handling		X	
1.1.6	Ergonomics		X	
1.1.7	Operating positions			X
1.1.8	Seating			X

1.2	Control Systems			
1.2.1	Safety and reliability of control systems		X	
1.2.2	Control devices		X	
1.2.3	Starting		X	
1.2.4	Stopping		X	
1.2.4.1	Normal stop		X	
1.2.4.2	Operational stop		X	
1.2.4.3	Emergency stop		X	
1.2.4.4	Assembly of machinery		X	
1.2.5	Selection of control or operating modes		X	
1.2.6	Failure of the power supply			X

1.3	Protection against mechanical hazards			
1.3.1	Risk of loss of stability			X
1.3.2	Risk of break-up during operation			X
1.3.3	Risks due to falling or ejected objects			X
1.3.4	Risks due to surfaces, edges or angles		X	
1.3.5	Risks related to combined machinery			X

<b>1.3</b>	<b>Protection against mechanical hazards</b>			
1.3.6	Risks related to variations in operating conditions			X
1.3.7	Risks related to moving parts		X	
1.3.8	Choice of protection against risks arising from moving parts			X
1.3.8.1	Moving transmission parts		X	
1.3.8.2	Moving parts involved in the process			X
1.3.9	Risks of uncontrolled movements			X
<b>1.4</b>	<b>Required characteristics of guards and protective devices</b>			
1.4.1	General requirements			X
1.4.2	Special requirements for guards			X
1.4.2.1	Fixed guards			X
1.4.2.2	Interlocking movable guards			X
1.4.2.3	Adjustable guards restricting access			X
1.4.3	Special requirements for protective devices			X
<b>1.5</b>	<b>Risks due to other hazards</b>			
1.5.1	Electricity supply		X	
1.5.2	Static electricity		X	
1.5.3	Energy supply other than electricity		X	
1.5.4	Errors of fitting		X	
1.5.5	Extreme temperatures			X
1.5.6	Fire			X
1.5.7	Explosion			X
1.5.8	Noise			X
1.5.9	Vibrations			X
1.5.10	Radiation	X		
1.5.11	External radiation	X		
1.5.12	Laser radiation	X		
1.5.13	Emissions of hazardous materials and substances			X
1.5.14	Risk of being trapped in a machine	X		
1.5.15	Risk of slipping, tripping or falling	X		
1.5.16	Lightning			X
<b>1.6</b>	<b>Maintenance</b>			
1.6.1	Machinery maintenance		X	
1.6.2	Access to operating positions and servicing points		X	
1.6.3	Isolation of energy sources		X	
1.6.4	Operator intervention		X	
1.6.5	Cleaning of internal parts		X	

1.7	Information			
1.7.1	Information and warnings on the machinery		X	
1.7.1.1	Information and information devices		X	
1.7.1.2	Warning devices		X	
1.7.2	Warning of residual risks		X	
1.7.3	Marking of machinery	X		
1.7.4	Instructions	X		
1.7.4.1	General principles for the drafting of instructions	X		
1.7.4.2	Contents of the instructions	X		
1.7.4.3	Sales literature	X		

	The classification from Annex 1 is to be supplemented from here forward.			
2	Supplementary essential health and safety requirements for certain categories of machinery			X
2.1	Foodstuffs machinery and machinery for cosmetics or pharmaceutical products			X
2.2	Portable hand-held and/or guided machinery			X
2.2.1	Portable fixing and other impact machinery			X
2.3	Machinery for working wood and material with similar physical characteristics			X
3	Supplementary essential health and safety requirements to offset hazards due to the mobility of machinery		X	
4	Supplementary essential health and safety requirements to offset hazards due to lifting operations		X	
5	Supplementary essential health and safety requirements for machinery intended for underground work			X
6	Supplementary essential health and safety requirements for machinery presenting particular hazards due to the lifting of persons		X	