



Assembly and operating manual

PPD

Pneumatic Positioning Unit

Translation of Original Operating
Manual

Imprint

Copyright:

This manual is protected by copyright. The author is SCHUNK SE & Co. KG.
All rights reserved.

Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

Document number: 1563798

Version: 03.00 | 14/05/2024 | en

Dear Customer,

Thank you for trusting our products and our family-owned company, the leading technology supplier of robots and production machines.

Our team is always available to answer any questions on this product and other solutions. Ask us questions and challenge us. We will find a solution!

Best regards,

Your SCHUNK team

Customer Management

Tel. +49-7133-103-2503

Fax +49-7133-103-2189

cmg@de.schunk.com



Please read the operating manual in full and keep it close to the product.

Table of Contents

1 General	4
1.1 About this manual	4
1.1.1 Presentation of Warning Labels	4
1.1.2 Definition of Terms	5
1.1.3 Symbol definition	5
1.1.4 Trademarks	5
1.1.5 Applicable documents	5
1.1.6 Variants	5
1.2 Warranty	5
1.3 Scope of delivery	6
1.4 Accessories	6
2 Basic safety notes	7
2.1 Intended use	7
2.2 Not intended use	7
2.3 Ambient conditions and operating conditions	7
2.4 Constructional changes	7
2.5 Personnel qualification	7
2.6 Notes on particular risks	8
3 Technical data	9
4 Design and description	10
4.1 Design	10
4.2 Description	10
4.3 LED status display	11
5 Assembly and settings	12
5.1 Mechanical connection	12
5.2 Connections	13
5.2.1 Connection diagram	13
5.2.2 Electrical connection	14
5.2.3 Connection cable for communication IO-Link	15
5.2.4 Pneumatic connection	16
6 Notes on Commissioning and operation	17
7 Troubleshooting	19
8 Maintenance	20
9 EU-Declaration of Conformity	21
10 UKCA Declaration of Conformity	22

1 General

1.1 About this manual

This manual contains important information for a safe and appropriate use of the product.

This manual is an integral part of the product and must be kept accessible for the personnel at all times.

Before starting work, the personnel must have read and understood this operating manual. Prerequisite for safe working is the observance of all safety instructions in this manual.

In addition to these instructions, the documents listed under ▶ 1.1.5 [📄 5] are applicable.

NOTE: The illustrations in this manual are intended to provide a basic understanding and may deviate from the actual version.

1.1.1 Presentation of Warning Labels

To make risks clear, the following signal words and symbols are used for safety notes.



⚠ DANGER

Dangers for persons!

Non-observance will inevitably cause irreversible injury or death.



⚠ WARNING

Dangers for persons!

Non-observance can lead to irreversible injury and even death.



⚠ CAUTION

Dangers for persons!

Non-observance can cause minor injuries.

CAUTION

Material damage!

Information about avoiding material damage.

1.1.2 Definition of Terms

The term "product" replaces the product name on the title page in this manual.

1.1.3 Symbol definition

The following symbols are used in this manual:

■ Prerequisite for an action

1. Action 1

2. Action 2

⇒ Intermediate results

⇒ Final results

▶ 1.1.3 [📄 5]: chapter number and [page number] in hyperlinks

1.1.4 Trademarks

- IO-Link is a registered trademark of PROFIBUS Nutzerorganisation e.V.

1.1.5 Applicable documents

- General terms of business *
- Catalog data sheet of the purchased product *
- Assembly and operating manuals of the accessories *
- Software Manual PPD *

The documents labeled with an asterisk (*) can be downloaded from schunk.com/downloads.

1.1.6 Variants

This operating manual applies to the following variations:

- PPD 10 – IOL
- PPD 20 – IOL
- PPD 40 – IOL

1.2 Warranty

If the product is used as intended, the warranty is valid for 24 months from the ex-works delivery date under the following conditions:

- Observe the applicable documents, ▶ 1.1.5 [📄 5]
- Observe the ambient conditions and operating conditions, ▶ 2.3 [📄 7]

1.3 Scope of delivery

The scope of delivery includes

- Pneumatic Positioning Unit PPD in the version ordered (Gripper, position sensor as well as required cables and pneumatic accessories have to be ordered separately according to the application)

1.4 Accessories

The following accessories, which must be ordered separately, are required for the product:

- Connection cable for communication IO-Link (1540697)
- Connection cable for voltage supply (1540660)

Optional accessories:

- Mounting set PPD (1540705)
- Cable extension 1.5 m (1540662)
- Cable extension 3m (1540663)

For information regarding which accessory articles can be used with the corresponding product variants, see catalog data sheet.

2 Basic safety notes

2.1 Intended use

Pneumatic Positioning Unit PPD is designed for pneumatic control of a gripper.

The product may be used only in the context of its defined application parameters ▶ 3 [9].

To comply with the intended use, it is also essential to comply with the manufacturer's specifications regarding assembly, commissioning, maintenance, operation and ambient conditions.

2.2 Not intended use

- Any utilization that exceeds or differs from the appropriate use is regarded as misuse.

2.3 Ambient conditions and operating conditions

Required ambient conditions and operating conditions

Incorrect ambient and operating conditions can make the product unsafe, leading to the risk of serious injuries, considerable material damage and/or a significant reduction to the product's life span.

- Make sure that the product is used only in the context of its defined application parameters, ▶ 3 [9].

2.4 Constructional changes

Implementation of structural changes

Modifications, changes or reworking, e.g. additional threads, holes, or safety devices, can damage the product or impair its functionality or safety.

- Structural changes should only be made with the written approval of SCHUNK.

2.5 Personnel qualification

Inadequate qualifications of the personnel

If the personnel working with the product is not sufficiently qualified, the result may be serious injuries and significant property damage.

- All work may only be performed by qualified personnel.
- Before working with the product, the personnel must have read and understood the complete assembly and operating manual.
- Observe the national safety regulations and rules and general safety instructions.

The following personal qualifications are necessary for the various activities related to the product:

Trained electrician

Due to their technical training, knowledge and experience, trained electricians are able to work on electrical systems, recognize and avoid possible dangers and know the relevant standards and regulations.

Qualified personnel

Due to its technical training, knowledge and experience, qualified personnel is able to perform the delegated tasks, recognize and avoid possible dangers and knows the relevant standards and regulations.

Instructed person

Instructed persons were instructed by the operator about the delegated tasks and possible dangers due to improper behaviour.

Service personnel of the manufacturer

Due to its technical training, knowledge and experience, service personnel of the manufacturer is able to perform the delegated tasks and to recognize and avoid possible dangers.

2.6 Notes on particular risks



⚠ WARNING

Risk of injury due to unexpected movements!

If the power supply is switched on or residual energy remains in the system, components can move unexpectedly and cause serious injuries.

- Before starting any work on the product: Switch off the power supply and secure against restarting.
 - Make sure, that no residual energy remains in the system.
-

3 Technical data


Basic data	Weight [kg]	1.8
	Noise emission [dB(A)]	
	Mechanical sound level	70
	Sound level with exhaust air	85
Pneumatic operating data	Pressure medium	Compressed air, compressed air quality according to ISO 8573-1:2010 [7:4:4]
	Operating pressure [bar]	4 – 8
	Control pressure [bar]	2 – 8
Electric(al) operating data	Nominal voltage [VDC]	24 +/- 10%
	Current consumption rated/max [A]	0.42 / 6.5
IO Link	Pins	Pin 10, 11 and 12.
	Version	1.1
	Transmission rate	COM2
	Minimum cycle time [ms]	10
Environmental and operational conditions	IP rating	67
	Operating temperature [°C]	
	– Min.	0
– Max.	60	

* Without using a sound absorber. The sound level of the exhaust air can be reduced by using a sound absorber

More technical data is included in the catalog data sheet. Whichever is the latest version.

4 Design and description

4.1 Design

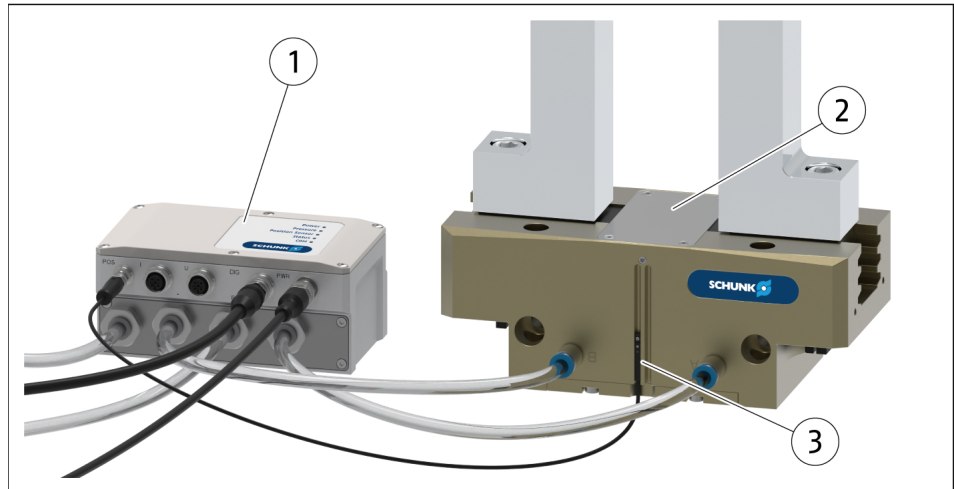


- | | |
|---|--------------------------------|
| 1 | Pneumatic Positioning Unit PPD |
| 2 | Pneumatic gripper |
| 3 | Position sensor |

4.2 Description

The pneumatic positioning unit is an accessory for pneumatic grippers. Together with a position sensor, any position of the gripper fingers can be approached in addition to the end positions (gripper open and gripper closed). Four integrated high-speed 2/2 valves together with the position sensor signal and the integrated Electronic ensure a closed control loop

4.3 LED status display

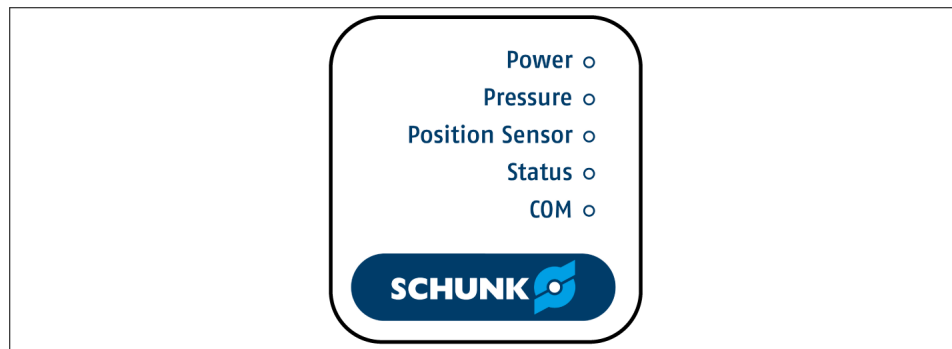


LED	Description
Power	LED on: supply voltage applied LED off: No supply voltage is applied
Pressure	LED on: pneumatic pressure is ok LED flashing: Pneumatic pressure is out of required range LED off: No supply voltage is applied
Position Sensor	LED on: sensor signal ok LED flashing: Sensor signal not ok LED off: No supply voltage is applied
Status	LED on: The product is ready for operation LED flashing: The product is not ready for operation LED off: No supply voltage is applied
COM	LED on: connection active, IO-Link communication inactive LED flashing: Connection active, IO-Link communication active LED off: No supply voltage is applied

5 Assembly and settings

5.1 Mechanical connection

Connections at the housing


The product can be assembled from two sides.

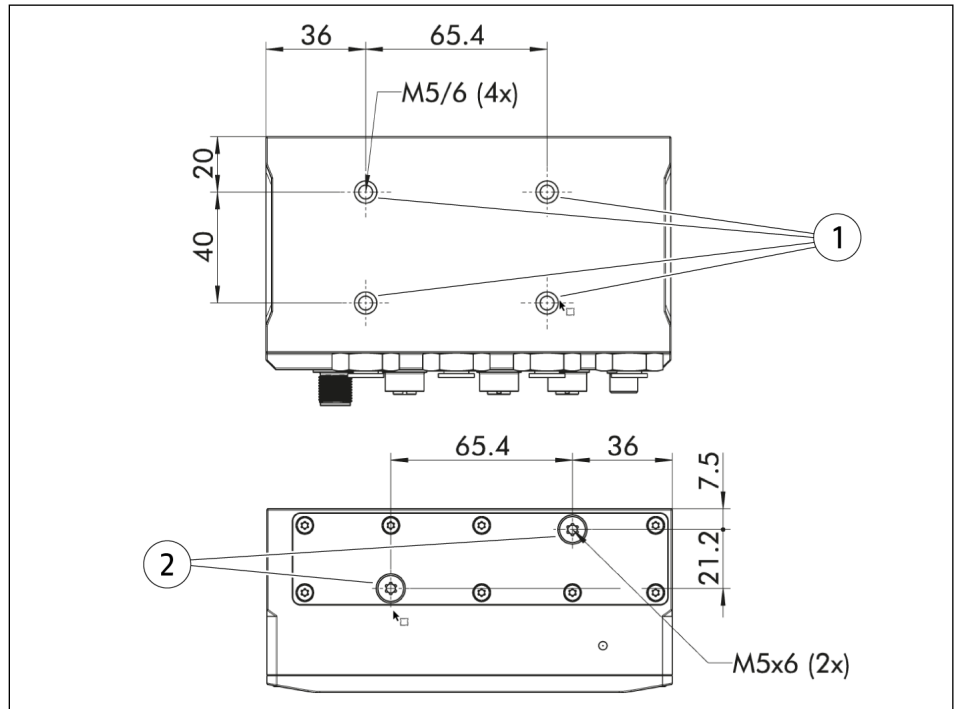

1 Fastening at rear side on 4 threaded holes M5

2 Remove screws and fastening at the 2 threaded holes M5

Optional accessories "PPD mounting set

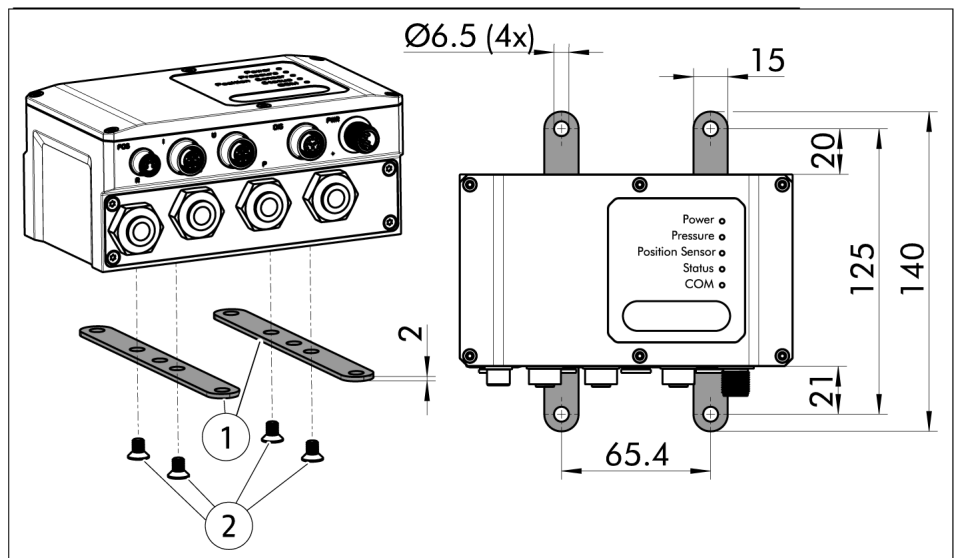


Alternatively mounting options of the PPD from above.


The scope of delivery includes two stainless steel mounting brackets (1) and four M5x5 stainless steel screws (2).

5.2 Connections

5.2.1 Connection diagram

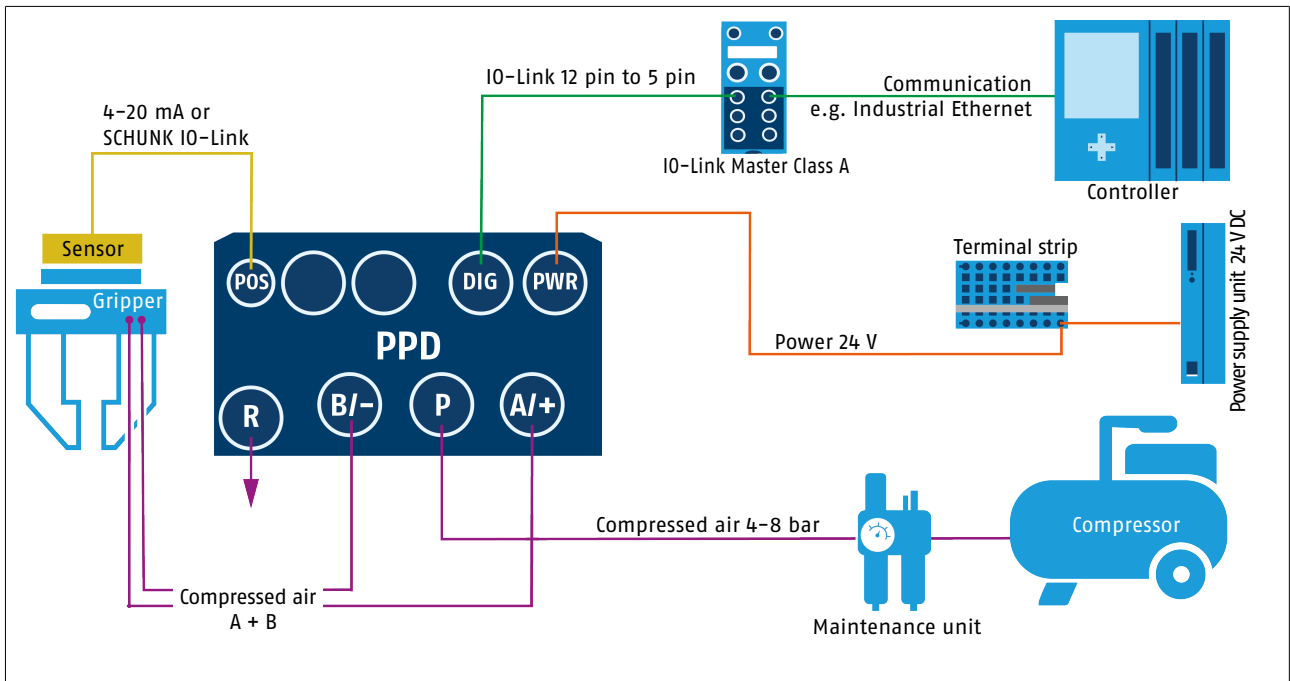

5.2.2 Electrical connection

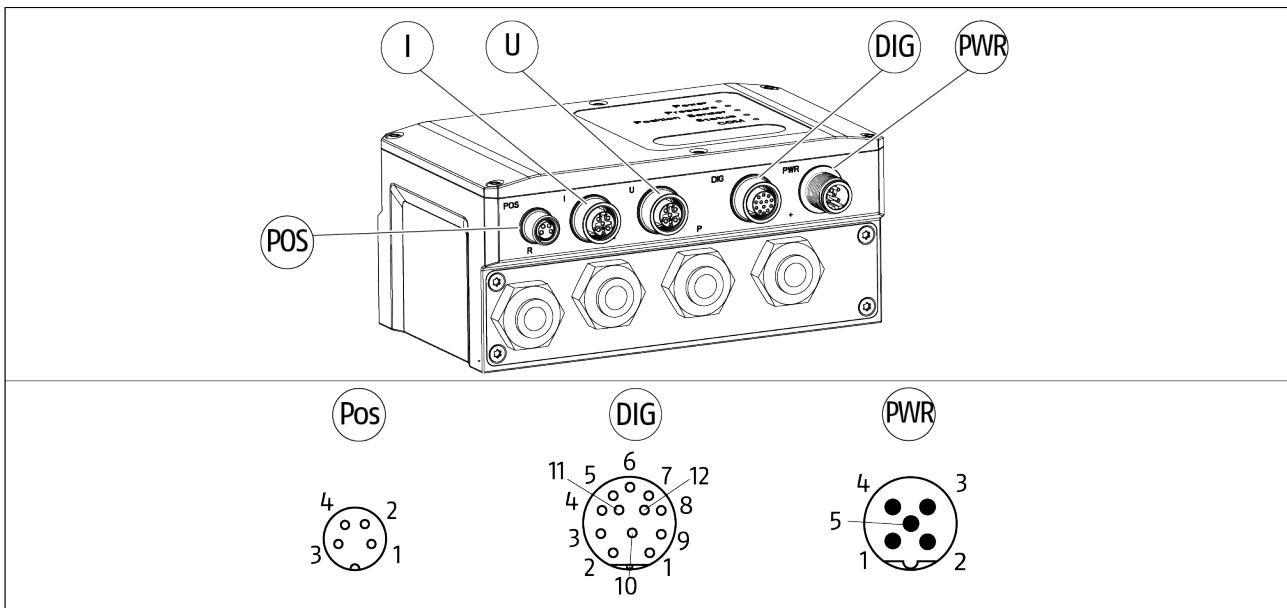

Marking	Designation	Plug connector	Pin	Description
POS	Position sensor	M8 socket 4-pin-A	1	+24 VDC
			2	4-20 mA *
			3	GND/-
			4	Signal IO-Link
I	Intended for future functions			
U	Intended for future functions			
DIG	Communication	M12 socket 12-pin-A	1 - 9	Not used
			10	IO-Link, L+
			11	IO-Link, CQ
			12	IO-Link, GND
PWR	Voltage supply	M12 connector 5-pin-B	1	+24 VDC
			2	GND/- *
			3	Not used
			4	Not used
			5	GND/- *

* The signal input is not protected. Do not apply voltage, otherwise the electronics of the PPD will be damaged.




⚠ CAUTION

Unexpected movements of the gripper jaws possible

An incorrect signal from the position sensor for the set position can cause an undesired malfunction.

- Before commissioning, make sure that the position sensor signals are correct.

5.2.3 Connection cable for communication IO-Link

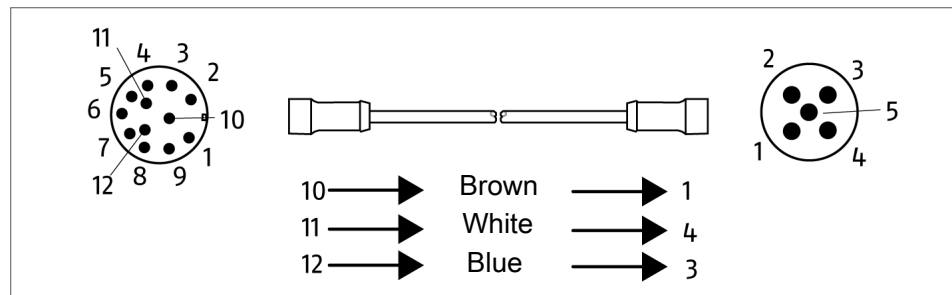


A special connection cable is required to connect the PPD to an IO-Link master.

The cable has a 12-pin M12 connector on one side for connection to the PPD. On the other side is a 5-pin M12 connector for connection to an IO-Link master.

ID of the connection cable: ▶ 1.4 [[📄](#) 6]

5.2.4 Pneumatic connection

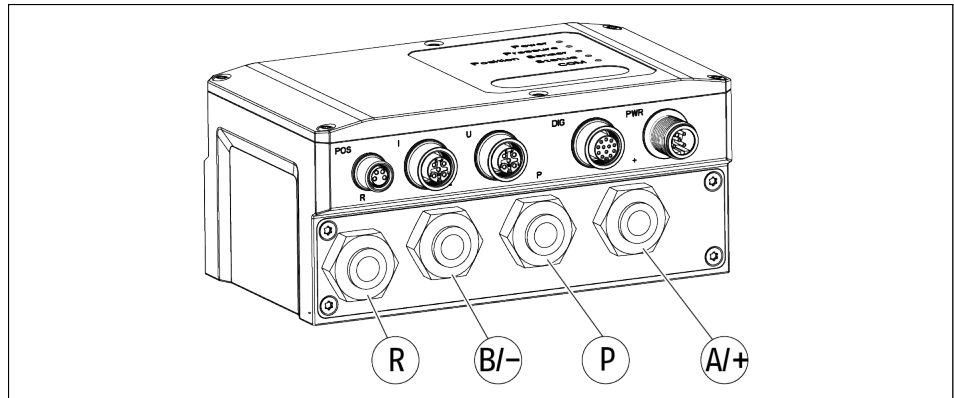

Marking	Hose-Ø (Thread in the case)	Description
R	8 mm (G3/8")	Exhaust air
B/-	8 mm (G3/8")	Control of pneumatic connection B on gripper
P	8 mm (G3/8")	Supply pressure
A/+	8 mm (G3/8")	Control of pneumatic connection A on the gripper



⚠ WARNING

Danger due to unexpected movements when inserting external locking or booster valves.

Missing signals and pressure loss possible

When using booster valves, consider the effects of missing signals and pressure losses.

6 Notes on Commissioning and operation

The commissioning and operation of the Pneumatic Positioning Unit PPD are described in the "PPD Software Manual".

Notes on commissioning

NOTE

- Many sensor systems can be taught to reverse the direction and/or adjust the range. When the sensor is taught to a new range, the new length should also be used in the settings to ensure a correct reading.
- During initial commissioning and after venting the piston chambers, a few gripping cycles may be required to build up pressure.



⚠ WARNING

The PPD normally uses normally closed 2-way valves internally. Air pockets can cause danger during operation and maintenance due to unexpected movements of the connected gripper.

- Consider the safety of applications and users when designing systems to minimize the effects of pressurized piston chambers.
- Ensure that the system is ventilated before maintenance.



⚠ WARNING

Risk of injury due to uncontrolled rapid movements.

Movements against empty piston chambers can cause uncontrolled (fast) movements.

- Consider the safety of the application and the user when designing systems to account for the effects of rapid movement.

Notes on operation



⚠ WARNING

Oscillations may occur if the adjustment is too aggressive for the application.

- Set up the system in a safe manner and avoid limit settings for speed, accuracy, and controller gain.



⚠ CAUTION

Incorrect setting may cause unwanted behavior in application



⚠ CAUTION

Undesired exhaust may cause uncontrolled movement, consider potential risks when using Exhausting functions.



⚠ CAUTION

Supply pressure loss may cause the system to exhaust the air when trying to compensate for pressure loss.



⚠ CAUTION

Leakage may cause impaired function, uncontrolled movement, and increased noise levels.

7 Troubleshooting

LED Status	Description
LED off	No supply voltage is applied
LED "Pressure" flashing	Pneumatic pressure is out of required range
LED "Position Sensor" flashing	Sensor signal not ok
LED "Status" flashing	The product is not ready for operation

Delayed reaction

Possible cause	Corrective action
long tubing and/or tubing with restricted flow may delay response and impair function	Keep hoses as short as possible Check hose routing for crushing, constrictions

Movement of the gripper restricted

Possible cause	Corrective action
Too low a force/pressure setting can restrict the movement of the gripper	Adjust force/pressure setting accordingly
Position sensor incorrectly installed or incorrect value for finger stroke is used	Control and correct accordingly

The PPD does not work

Possible cause	Corrective action
Signal from the position sensor has been lost	Check position sensor

The gripper jaws remain stuck in one end position

Possible cause	Corrective action
Position sensor signal inverted or out of range	Check position sensor

Continuous opening and closing of the gripper jaws when in absolute positioning

Possible cause	Corrective action
Default values for acyclic data exchange (piston stroke, stroke per jaw, piston surface A/B) are not set.	Set acyclic default values as described in the software manual for the pneumatic positioning unit.

8 Maintenance

The product is maintenance-free.

In case of damage, send the product to SCHUNK with a repair order.

9 EU-Declaration of Conformity

Manufacturer/
Distributor

SCHUNK SE & Co. KG
Spanntechnik | Greiftechnik | Automatisierungstechnik
Bahnhofstr. 106 – 134
D-74348 Lauffen/Neckar

Product designation: Pneumatic Positioning Unit / PPD /
ID number

We hereby declare on our sole authority that the product meets the requirements of the following directives at the time of the declaration.

The declaration is rendered invalid if modifications are made to the product.

- **Machinery Directive 2006/42/EG**
- **EMC Directive 2014/30/EU**
- **RoHS Directive 2011/65/EU**
- **REACH Regulation EC No. 1907/2006**
- **The protection objectives of the Low Voltage Directive have been complied with in accordance with Annex I, No. 1.5.1 of the Machinery Directive**

Applied harmonized standards, especially:

EN ISO 12100:2010	Safety of machinery – General principles for design – Risk assessment and risk reduction
EN 61000-4-2:2009	Electromagnetic compatibility (EMC) – Part 4-2: Testing and measurement techniques – Electrostatic discharge immunity test (IEC 61000-4-2:2008)
EN IEC 61000-6-2:2019	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments
EN IEC 61000-6-4:2019	Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments

Signed for and on behalf of: SCHUNK SE & Co. KG

Signature: see original declaration

Lauffen/Neckar, September 2023

Dr.-Ing. Manuel Baumeister,
Head of Systems Engineering,
Technology & Innovation

10 UKCA Declaration of Conformity

Manufacturer/
Distributor SCHUNK Intec Limited
 Clamping and gripping technology
 3 Drakes Mews, Crownhill
 MK8 0ER Milton Keynes

Product designation: Pneumatic Positioning Unit PPD
ID number

We hereby declare on our sole authority that the product meets the requirements of the following directives at the time of the declaration.

The declaration is rendered invalid if modifications are made to the product.

- **Machinery Directive 2006/42/EG**
- **Electromagnetic Compatibility Regulations 2016**
- **RoHS Directive 2011/65/EU**
- **REACH Regulation EC No. 1907/2006**
- **The protection objectives of the Low Voltage Directive have been complied with in accordance with Annex I, No. 1.5.1 of the Machinery Directive**

Applied harmonized standards, especially:

EN ISO 12100:2010	Safety of machinery – General principles for design – Risk assessment and risk reduction
EN 61000-4-2:2009	Electromagnetic compatibility (EMC) – Part 4-2: Testing and measurement techniques – Electrostatic discharge immunity test (IEC 61000-4-2:2008)
EN IEC 61000-6-2:2019	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments
EN IEC 61000-6-4:2019	Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments


Person authorized to compile the technical documentation:
Marcel Machado, address: refer to manufacturer's address

Signed for and on behalf of: SCHUNK SE & Co. KG



Lauffen/Neckar, September 2023

Dr.-Ing. Manuel Baumeister, Head of Systems
Engineering, Technology & Innovation

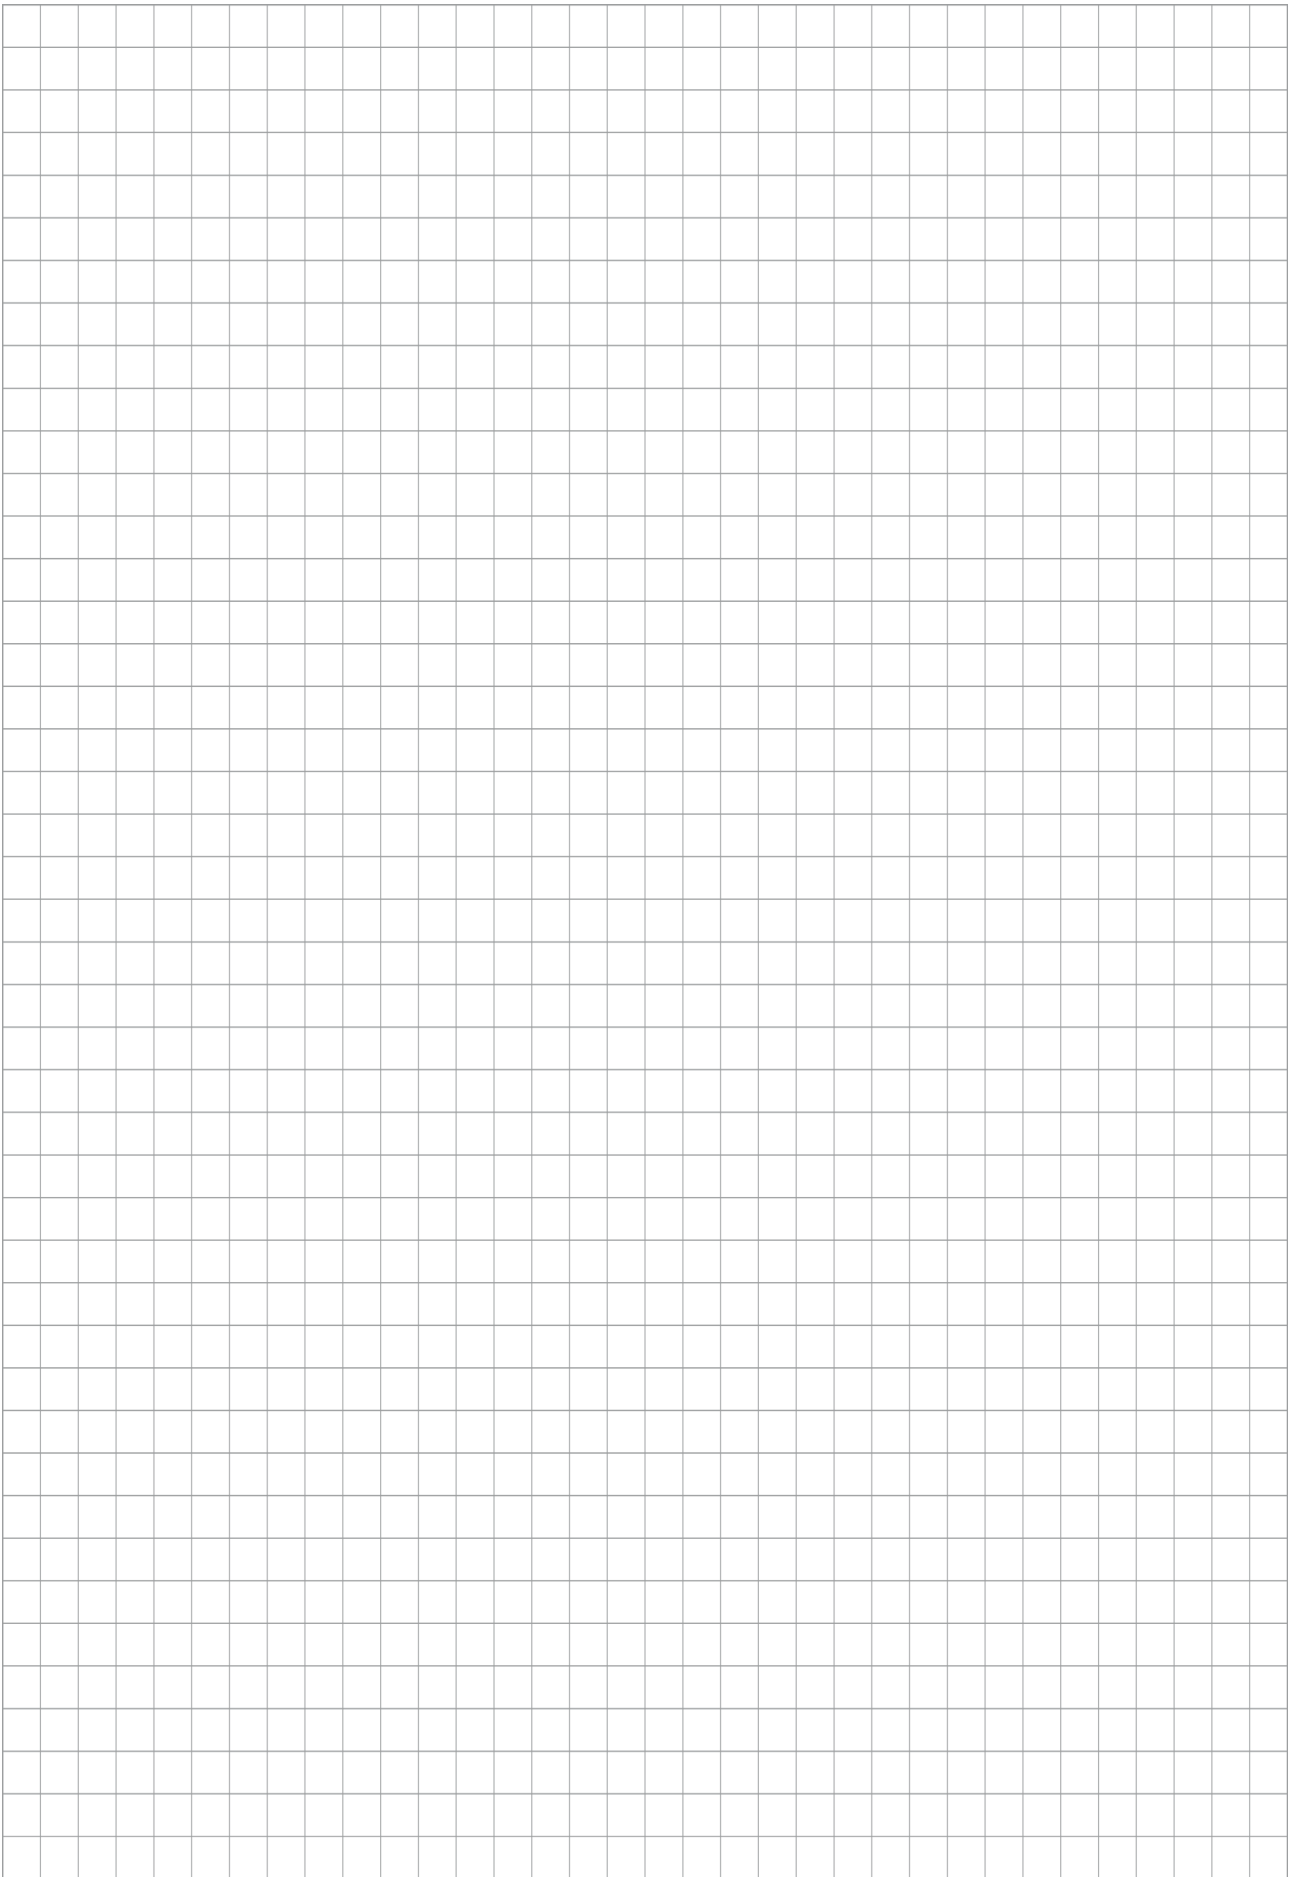



SCHUNK SE & Co. KG
Spanntechnik | Greiftechnik | Automatisierungstechnik

Bahnhofstr. 106 - 134
D-74348 Lauffen/Neckar
Tel. +49-7133-103-0
info@de.schunk.com
schunk.com

Folgen Sie uns | *Follow us*



Wir drucken nachhaltig | *We print sustainable*