



# Assembly and Operating Manual

## PFH 150– 300

### 2-Finger Parallel Gripper

Translation of the original manual

Hand in hand for tomorrow

## Imprint

### Copyright:

This manual is protected by copyright. The author is SCHUNK SE & Co. KG.  
All rights reserved.

### Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

**Document number:** 389270

**Version:** 11.00 | 11/04/2024 | en

Dear Customer,

Thank you for trusting our products and our family-owned company, the leading technology supplier of robots and production machines.

Our team is always available to answer any questions on this product and other solutions. Ask us questions and challenge us. We will find a solution!

Best regards,

Your SCHUNK team

Customer Management

Tel. +49-7133-103-2503

Fax +49-7133-103-2189

cmg@de.schunk.com



**Please read the operating manual in full and keep it close to the product.**

## Table of Contents

<b>1 General .....</b>	<b>5</b>
1.1 About this manual.....	5
1.1.1 Presentation of Warning Labels .....	5
1.1.2 Applicable documents .....	6
1.1.3 Sizes.....	6
1.1.4 Variants .....	6
1.2 Warranty .....	6
1.3 Scope of delivery.....	6
1.4 Accessories .....	6
1.4.1 Sensors .....	7
1.4.2 Seal kit .....	7
1.4.3 Accessories kit .....	7
<b>2 Basic safety notes .....</b>	<b>8</b>
2.1 Intended use.....	8
2.2 Constructional changes.....	8
2.3 Spare parts .....	8
2.4 Gripper fingers .....	8
2.5 Ambient conditions and operating conditions .....	9
2.6 Personnel qualification .....	9
2.7 Personal protective equipment .....	10
2.8 Notes on safe operation.....	11
2.9 Transport.....	11
2.10 Malfunctions .....	11
2.11 Disposal .....	12
2.12 Fundamental dangers .....	12
2.12.1 Protection during handling and assembly .....	12
2.12.2 Protection during commissioning and operation .....	13
2.12.3 Protection against dangerous movements .....	13
2.12.4 Protection against electric shock.....	13
2.13 Notes on particular risks .....	14
<b>3 Technical Data .....</b>	<b>16</b>
<b>4 Assembly.....</b>	<b>17</b>
4.1 Mounting of the top jaws.....	17
4.2 Connections .....	18
4.2.1 Mechanical connection.....	18
4.2.2 Pneumatic connection.....	19

4.3	Mounting the sensor .....	21
4.3.1	Inductive proximity switch IN 80 .....	21
4.3.2	Magnetic switch MMS 22 / RMS 22 .....	24
<b>5</b>	<b>Troubleshooting.....</b>	<b>26</b>
5.1	Product does not move? .....	26
5.2	Product does not execute a complete stroke? .....	26
5.3	Product opens or closes jerkily? .....	26
5.4	Gripping force is dropping.....	27
5.5	Module does not achieve the opening and closing times? .....	27
<b>6</b>	<b>Maintenance .....</b>	<b>28</b>
6.1	Notes.....	28
6.2	Maintenance and lubrication intervals.....	28
6.3	Lubricants/Lubrication points (basic lubrication) .....	28
6.4	Disassembling the product .....	29
6.5	Servicing and assembling the product .....	30
6.5.1	Screw tightening torques .....	31
6.5.2	Rotations of fitting bolt .....	31
6.6	Assembly drawing .....	32
<b>7</b>	<b>Translation of the original declaration of incorporation .....</b>	<b>33</b>
<b>8</b>	<b>UKCA declaration of incorporation .....</b>	<b>34</b>
<b>9</b>	<b>Information on the RoHS Directive, REACH Regulation and Substances of Very High Concern (SVHC) .....</b>	<b>35</b>

# 1 General

## 1.1 About this manual

This manual contains important information for a safe and appropriate use of the product.

This manual is an integral part of the product and must be kept accessible for the personnel at all times.

Before starting work, the personnel must have read and understood this operating manual. Prerequisite for safe working is the observance of all safety instructions in this manual.

In addition to these instructions, the documents listed under ▶ 1.1.2 [ 6 ] are applicable.

**NOTE:** The illustrations in this manual are intended to provide a basic understanding and may deviate from the actual version.

### 1.1.1 Presentation of Warning Labels

To make risks clear, the following signal words and symbols are used for safety notes.



#### **⚠ DANGER**

**Dangers for persons!**

Non-observance will inevitably cause irreversible injury or death.



#### **⚠ WARNING**

**Dangers for persons!**

Non-observance can lead to irreversible injury and even death.



#### **⚠ CAUTION**

**Dangers for persons!**

Non-observance can cause minor injuries.

#### **CAUTION**

**Material damage!**

Information about avoiding material damage.

### 1.1.2 Applicable documents

- General terms of business \*
- Catalog data sheet of the purchased product \*

The documents labeled with an asterisk (\*) can be downloaded from [schunk.com/downloads](https://schunk.com/downloads).

### 1.1.3 Sizes

This operating manual applies to the following sizes:

- PFH 150
- PFH 200
- PFH 250
- PFH 300

### 1.1.4 Variants

This operating manual applies to the following variations:

- PFH
- PFH High-temperature (HT)

## 1.2 Warranty

If the product is used as intended, the warranty is valid for 24 months from the ex-works delivery date under the following conditions:

- Observe the specified maintenance and lubrication intervals
- Observe the ambient conditions and operating conditions

Parts touching the workpiece and wear parts are not included in the warranty.

## 1.3 Scope of delivery

The scope of delivery includes

- 2-Finger Parallel Gripper PFH in the version ordered
- Assembly and Operating Manual
- Accessory pack

## 1.4 Accessories

The following accessories, which must be ordered separately, are required for the product:

- 2 Top jaws
- Sensors, if required with extension cord ▶ 1.4.1 [ 7 ]

A wide range of accessories are available for this product

For information regarding which accessory articles can be used with the corresponding product variants, see catalog data sheet.

### 1.4.1 Sensors

Designation	Type
Inductive proximity switches	IN 80-S
Magnetic switch	MMS 22
	RMS 22

- Exact type designation of the compatible sensors see catalog.
- Information on handling sensors is available at [schunk.com](http://schunk.com) or from SCHUNK contact persons.

### 1.4.2 Seal kit

Seal kit for	ID number
PFH 150 – 300	0302025

contents of the sealing kit, ► 6.6 [ 32].

### 1.4.3 Accessories kit

Content of the accessory pack:

Accessory pack for	ID number
PFH 150 – 300	9939381
	Centering sleeve $\varnothing 14 \times 8.6\text{mm}$ (4x)
	9682058
	Cylindrical pin ISO 8734 8.0m6 x 20mm
	9611222
	DIN 3771 NBR 70 15.55 x 2.62mm

## 2 Basic safety notes

### 2.1 Intended use

The product is designed exclusively for gripping and temporarily holding workpieces or objects.

- The product may only be used within the scope of its technical data, ▶ 3 [16].
- The product is intended for installation in a machine/ automated system. The applicable guidelines for the machine/ automated system must be observed and complied with.
- The product is intended for industrial and industry-oriented use. Its use outside enclosed spaces is only permitted if suitable protective measures are taken against outdoor exposure. The product is not suitable for use in salty air.
- The product can be used within the permissible load limits and technical data for holding workpieces during simple machining operations, but is not a clamping device according to EN 1550:1997+A1:2008.
- Appropriate use of the product includes compliance with all instructions in this manual.
- Any utilization that exceeds or differs from the appropriate use is regarded as misuse.

### 2.2 Constructional changes

#### Implementation of structural changes

Modifications, changes or reworking, e.g. additional threads, holes, or safety devices, can damage the product or impair its functionality or safety.

- Structural changes should only be made with the written approval of SCHUNK.

### 2.3 Spare parts

#### Use of unauthorized spare parts

Using unauthorized spare parts can endanger personnel and damage the product or cause it to malfunction.

- Use only original spare parts or spares authorized by SCHUNK.

### 2.4 Gripper fingers

#### Requirements of gripper fingers

Accumulated energy can make the product unsafe and risk the danger of serious injuries and considerable material damage.



- Execute the gripper fingers in such a way that the product reaches either the "open" or "closed" position in a de-energized state.
- Only change gripper fingers if no residual energy can be released.
- Make sure that the product and the top jaws are a sufficient size for the application.

## 2.5 Ambient conditions and operating conditions

### Required ambient conditions and operating conditions

Incorrect ambient and operating conditions can make the product unsafe, leading to the risk of serious injuries, considerable material damage and/or a significant reduction to the product's life span.

- Make sure that the product is used only in the context of its defined application parameters, ▶ 3 [16].
- Make sure that the product is a sufficient size for the application.
- Make sure that the environment is free from splash water and vapors as well as from abrasion or processing dust. Exceptions are products that are designed especially for contaminated environments.

## 2.6 Personnel qualification

### Inadequate qualifications of the personnel

If the personnel working with the product is not sufficiently qualified, the result may be serious injuries and significant property damage.

- All work may only be performed by qualified personnel.
- Before working with the product, the personnel must have read and understood the complete assembly and operating manual.
- Observe the national safety regulations and rules and general safety instructions.

The following personal qualifications are necessary for the various activities related to the product:

<b>Trained electrician</b>	Due to their technical training, knowledge and experience, trained electricians are able to work on electrical systems, recognize and avoid possible dangers and know the relevant standards and regulations.
<b>Qualified personnel</b>	Due to its technical training, knowledge and experience, qualified personnel is able to perform the delegated tasks, recognize and avoid possible dangers and knows the relevant standards and regulations.
<b>Instructed person</b>	Instructed persons were instructed by the operator about the delegated tasks and possible dangers due to improper behaviour.
<b>Service personnel of the manufacturer</b>	Due to its technical training, knowledge and experience, service personnel of the manufacturer is able to perform the delegated tasks and to recognize and avoid possible dangers.

## 2.7 Personal protective equipment

### Use of personal protective equipment

Personal protective equipment serves to protect staff against danger which may interfere with their health or safety at work.

- When working on and with the product, observe the occupational health and safety regulations and wear the required personal protective equipment.
- Observe the valid safety and accident prevention regulations.
- Wear protective gloves to guard against sharp edges and corners or rough surfaces.
- Wear heat-resistant protective gloves when handling hot surfaces.
- Wear protective gloves and safety goggles when handling hazardous substances.
- Wear close-fitting protective clothing and also wear long hair in a hairnet when dealing with moving components.

## 2.8 Notes on safe operation

### Incorrect handling of the personnel

Incorrect handling and assembly may impair the product's safety and cause serious injuries and considerable material damage.

- Avoid any manner of working that may interfere with the function and operational safety of the product.
- Use the product as intended.
- Observe the safety notes and assembly instructions.
- Do not expose the product to any corrosive media. This does not apply to products that are designed for special environments.
- Eliminate any malfunction immediately.
- Observe the care and maintenance instructions.
- Observe the current safety, accident prevention and environmental protection regulations regarding the product's application field.

## 2.9 Transport

### Handling during transport

Incorrect handling during transport may impair the product's safety and cause serious injuries and considerable material damage.

- When handling heavy weights, use lifting equipment to lift the product and transport it by appropriate means.
- Secure the product against falling during transportation and handling.
- Stand clear of suspended loads.

## 2.10 Malfunctions

### Behavior in case of malfunctions

- Immediately remove the product from operation and report the malfunction to the responsible departments/persons.
- Order appropriately trained personnel to rectify the malfunction.
- Do not recommission the product until the malfunction has been rectified.
- Test the product after a malfunction to establish whether it still functions properly and no increased risks have arisen.

## 2.11 Disposal

### Handling of disposal

The incorrect handling of disposal may impair the product's safety and cause serious injuries as well as considerable material and environmental harm.

- Follow local regulations on dispatching product components for recycling or proper disposal.

## 2.12 Fundamental dangers

### General

- Observe safety distances.
- Never deactivate safety devices.
- Before commissioning the product, take appropriate protective measures to secure the danger zone.
- Disconnect power sources before installation, modification, maintenance, or calibration. Ensure that no residual energy remains in the system.
- If the energy supply is connected, do not move any parts by hand.
- Do not reach into the open mechanism or movement area of the product during operation.

### 2.12.1 Protection during handling and assembly

#### Incorrect handling and assembly

Incorrect handling and assembly may impair the product's safety and cause serious injuries and considerable material damage.

- Have all work carried out by appropriately qualified personnel.
- For all work, secure the product against accidental operation.
- Observe the relevant accident prevention rules.
- Use suitable assembly and transport equipment and take precautions to prevent jamming and crushing.

#### Incorrect lifting of loads

Falling loads may cause serious injuries and even death.

- Stand clear of suspended loads and do not step into their swiveling range.
- Never move loads without supervision.
- Do not leave suspended loads unattended.

## 2.12.2 Protection during commissioning and operation

### Falling or violently ejected components

Falling and violently ejected components can cause serious injuries and even death.

- Take appropriate protective measures to secure the danger zone.
- Never step into the danger zone during operation.

## 2.12.3 Protection against dangerous movements

### Unexpected movements

Residual energy in the system may cause serious injuries while working with the product.

- Switch off the energy supply, ensure that no residual energy remains and secure against inadvertent reactivation.
- Never rely solely on the response of the monitoring function to avert danger. Until the installed monitors become effective, it must be assumed that the drive movement is faulty, with its action being dependent on the control unit and the current operating condition of the drive. Perform maintenance work, modifications, and attachments outside the danger zone defined by the movement range.
- To avoid accidents and/or material damage, human access to the movement range of the machine must be restricted. Limit/prevent accidental access for people in this area due through technical safety measures. The protective cover and protective fence must be rigid enough to withstand the maximum possible movement energy. EMERGENCY STOP switches must be easily and quickly accessible. Before starting up the machine or automated system, check that the EMERGENCY STOP system is working. Prevent operation of the machine if this protective equipment does not function correctly.

## 2.12.4 Protection against electric shock

### Possible electrostatic energy

Components or assembly groups may become electrostatically charged. When the electrostatic charge is touched, the discharge may trigger a shock reaction leading to injuries.

- The operator must ensure that all components and assembly groups are included in the local potential equalisation in accordance with the applicable regulations.
- While paying attention to the actual conditions of the working environment, the potential equalisation must be implemented by a specialist electrician according to the applicable regulations.
- The effectiveness of the potential equalisation must be verified by executing regular safety measurements.

## 2.13 Notes on particular risks



### **⚠ DANGER**

#### **Risk of fatal injury from suspended loads!**

Falling loads can cause serious injuries and even death.

- Stand clear of suspended loads and do not step within their swiveling range.
- Never move loads without supervision.
- Do not leave suspended loads unattended.
- Wear suitable protective equipment.



### **⚠ WARNING**

#### **Risk of injury from objects falling and being ejected!**

Falling and ejected objects during operation can lead to serious injury or death.

- Take appropriate protective measures to secure the danger zone.



### **⚠ WARNING**

#### **Risk of injury from sharp edges and corners!**

Sharp edges and corners can cause cuts.

- Use suitable protective equipment.



### **⚠ WARNING**

#### **Risk of injury due to unexpected movements!**

If the power supply is switched on or residual energy remains in the system, components can move unexpectedly and cause serious injuries.

- Before starting any work on the product: Switch off the power supply and secure against restarting.
- Make sure, that no residual energy remains in the system.



### **⚠ WARNING**

#### **Risk of injury from crushing and impacts!**

Serious injury could occur during movement of the base jaw, due to breakage or loosening of the gripper fingers or if the workpiece is lost.

- Wear suitable protective equipment.
- Do not reach into the open mechanism or the movement area of the product.



### **⚠ WARNING**

#### **Risk of injury due to spring forces!**

Parts are under spring tension on products which clamp using spring force or which have gripping force maintenance. While disassembling components can move unexpectedly and cause serious injuries.

- Disassemble the product cautiously.
- Make sure that no residual energy remains in the system.



### **⚠ WARNING**

#### **Risk of injury from objects falling during energy supply failure**

Products with a mechanical gripping force maintenance can, during energy supply failure, still move independently in the direction specified by the mechanical gripping force maintenance.

- Secure the end positions of the product with SCHUNK SDV-P pressure maintenance valves.

### 3 Technical Data

Tab.:


Size	150	200	250	300
Weight [kg]	18.9	23.5	28.6	33.6
Pressure medium	Compressed air, compressed air quality according to ISO 8573-1:2010 [7:4:4]			
Quality of the compressed air	filtered (10µm), Dry lubricated or non lubricated			
Min. pressure [bar]	2			
Max. pressure [bar]	8			
Max. permitted weight per finger [kg]	7	8	9	10
Noise emission [dB(A)]	≤ 70			
IP rating	30			
Min. ambient temperature [°C]	-10			
Max. ambient temperature [°C]	90			

More technical data is included in the catalog data sheet.  
Whichever is the latest version.



## 4 Assembly

### 4.1 Mounting of the top jaws

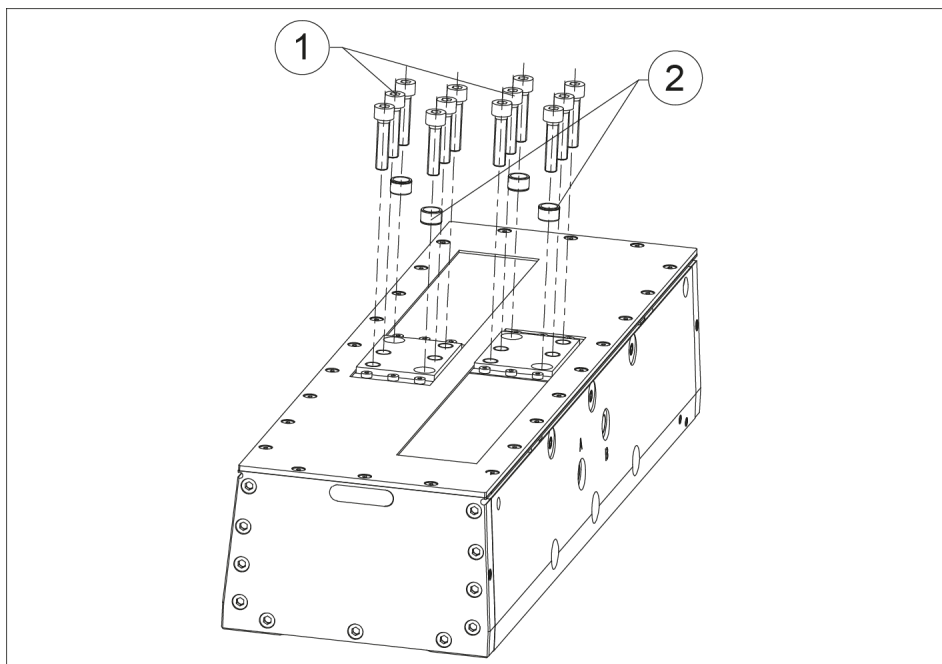

The centering sleeves (2) are included in the enclosed pack.

Item	Mounting	
2	Centering sleeve (4x)	Ø 14 x 8.6

The screws for mounting the top jaws have to be provided by the customer:

Item	Mounting	
1	Screw (12x)	M10 14 tief
Maximum tightening torques		40 Nm

## 4.2 Connections

### 4.2.1 Mechanical connection

#### Evenness of the mounting surface


The values apply to the whole mounting surface to which the product is mounted.

Edge length	Permissible unevenness
< 100	< 0.02
> 100	< 0.05

Tab.: Requirements for evenness of the mounting surface (Dimensions in mm)

#### Mounting

The product can be mounted from the front or the side.

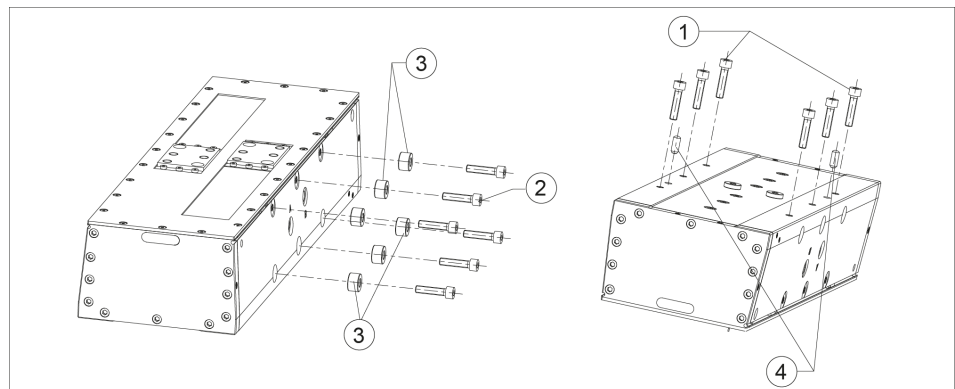

Assembly options

The centering pins (4) are included in the scope of delivery.

Item	Mounting	
4	Cylindrical pin (2x)	DIN 6325 8.0 m6 x 20 mm

### CAUTION

**The gripper will be damaged during assembly if the maximum screw-in depth for the mounting screws is exceeded.**

The maximum screw-in depth for bottom-sided and lateral gripper fastening must always be observed.

The following screws must be provided by the customer:

Item	Screw	
1	Thread diameter and max. screw-in depth when gripper is mounted from the front	M8 15 mm
2	Thread diameter and max. screw-in depth when gripper is mounted from the side	M8 14 mm
Maximum tightening torque of screws		40 Nm

When the gripper is fastened from the side, 6 spacers (3) are required.

The spacers are included in the attachment kit (ID 0302024) and must be ordered separately.

#### 4.2.2 Pneumatic connection

##### CAUTION


##### Damage to the gripper is possible!

If the maximum permissible finger weight or the permissible mass moment of inertia of the fingers is exceeded, the gripper can be damaged.

- A jaw movement always has to be without jerks and bounce.
- You must therefore implement sufficient reduction and/or damping.
- Observe the information in the catalog data sheet.

##### NOTE

- Observe the requirements for the compressed air supply, ▶ 3 [16].
- In case of compressed air loss (cutting off the energy line), the components lose their dynamic effects and do not remain in a secure position. However, the use of a SDV-P pressure maintenance valve is recommended in this case in order to maintain the dynamic effect for some time. Product variants are also offered with mechanical gripping force via springs, which also ensure a minimum clamping force in the event of a pressure drop.

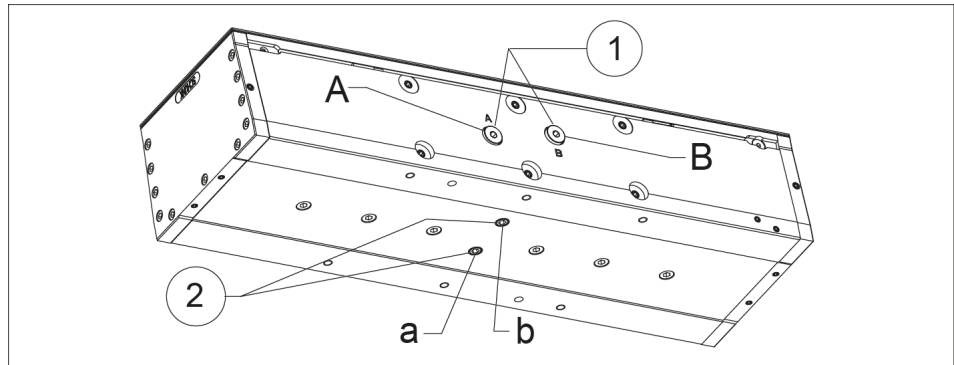

*Air connections*

Item	Connection	Thread
1	Hose connection (A = open, B = close)	G 1/4"
2	Hose connection or Hose-free direct connection (a = open, b = close)	G 1/4"

- Only open the air connections required.
- Seal air connections not required using the locking screws from the enclosed pack.
- For hose-free direct connections use the two O-rings from the enclosed pack.

## 4.3 Mounting the sensor


### NOTE

Observe the assembly and operating manual of the sensor for mounting and connecting.

The product is equipped for the use of sensors.

- For the exact type designations of suitable sensors, please see the catalog data sheet.
- For technical data for the suitable sensors, see Assembly and Operating Manual and catalog data sheet.
  - The Assembly and Operating Manual and catalog data sheet are included in the scope of delivery for the sensors and are available at [schunk.com](http://schunk.com).
- Information on handling sensors is available at [schunk.com](http://schunk.com) or from SCHUNK contact persons.

### 4.3.1 Inductive proximity switch IN 80

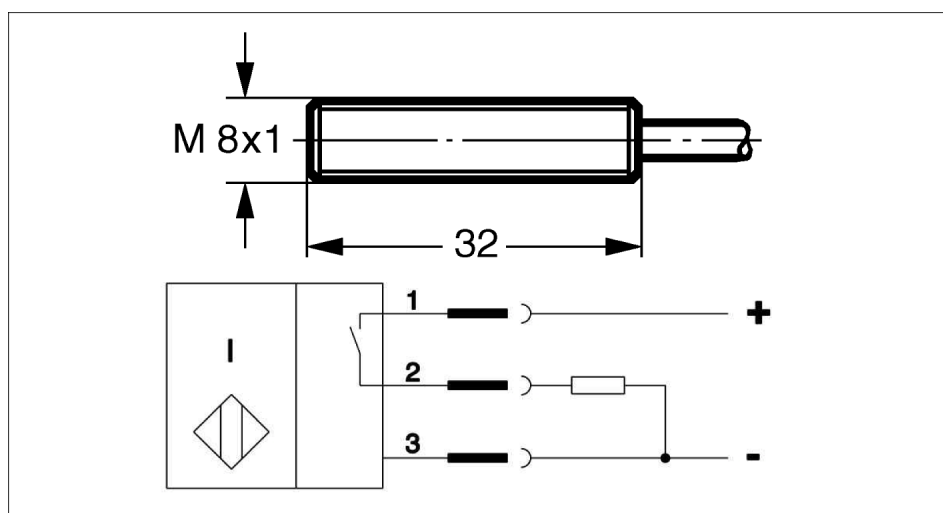

Connection example for IN 80

1	brown	2	black	3	blue
---	-------	---	-------	---	------

The inductive proximity switches used are equipped with reverse polarity protection and are short-circuit-proof.

Make sure that you handle the proximity switches properly:


- Do not pull on the cable.
- Do not allow the sensor to dangle from the cable.
- Do not overtighten the mounting screw or mounting clip.
- Please adhere to a permitted bend radius of the cable. (→ catalog)

- Avoid contact of the proximity switches with hard objects and with chemicals, in particular nitric acid, chromic acid and sulphuric acid.

The inductive proximity switches are electronic components, which can react sensitively to high-frequency interference or electromagnetic fields.

- Check to make sure that the cable is fastened and installed correctly. Provide for sufficient clearance to sources of high-frequency interference and their supply cables.
- Parallel switching of several sensor outputs of the same type (npn, pnp) is permissible, but does not increase the permissible load current.
- Note that the leakage current of the individual sensors (ca. 2 mA) is cumulative.

### Mounting of the proximity switch

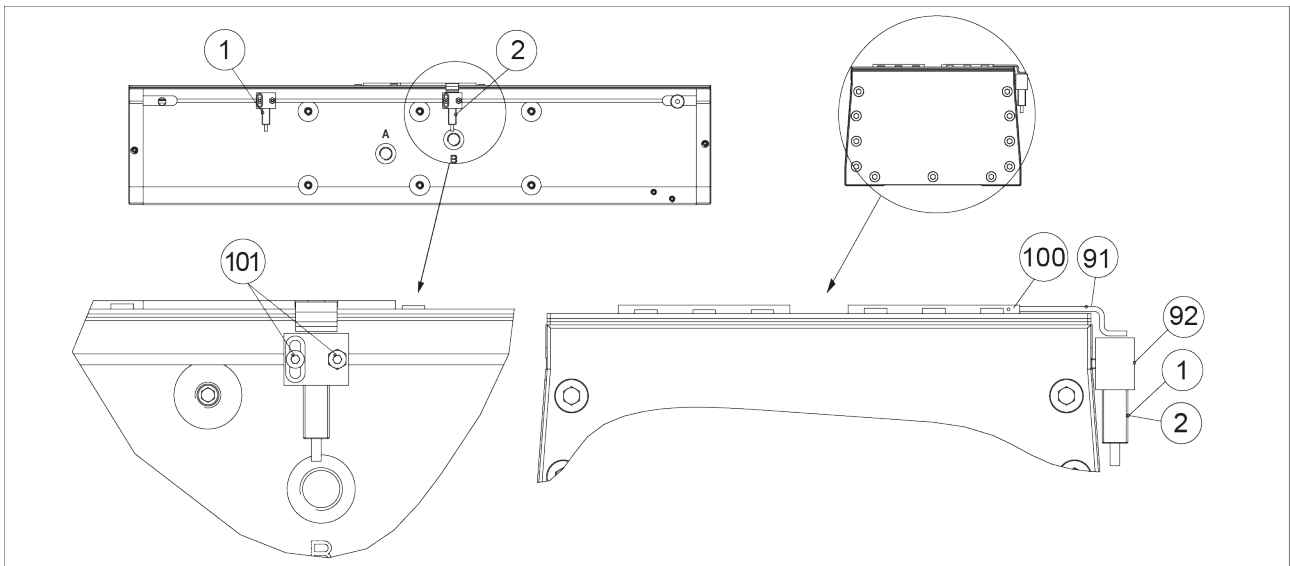

Mounting kit for proximity switch IN 80

#### Gripper open:

1. Put the Gripper into "open" position.
2. Install the switch cam (91) in the base jaw by screwing in the screw (100).
3. Bolt together the T-Nut (90) with the bracket (92).
4. Push the T-Nut with the bracket into the groove of the housing.
5. Push the proximity switch (1) to the stop in the bracket (92).
6. Push the Proximity switch (incl. Bracket and T-Nut) towards the center of the gripper, as seen from the front of the gripper until the proximity switch actuates.

7. By tightening the screw (101) fix the proximity switch in this position.
8. Test the function by closing and opening the gripper.

**Gripper closed:**

1. Put the Gripper into "closed" position.
2. Install the switch cam (91) in the base jaw by screwing in the screw (100).
3. Bolt together the T-Nut (90) with the bracket (92).
4. Push the T-Nut with the bracket into the groove of the housing.
5. Push the proximity switch (1) to the stop in the bracket (92).
6. Push the Proximity switch (incl. Bracket and T-Nut) outwards as seen from the centre of the gripper until the proximity switch actuates.
7. By tightening the screw (101) fix the proximity switch in this position.
8. Test the function by opening and closing the gripper.

**Part gripped (O.D. gripping):**



1. Clamp the part to be gripped.
2. Install the switch cam (91) in the base jaw by screwing in the screw (100).
3. Bolt together the T-Nut (90) with the bracket (92).
4. Push the T-Nut with the bracket into the groove of the housing.
5. Push the proximity switch (1) to the stop in the bracket (92).
6. Push the Proximity switch (incl. Bracket and T-Nut) outwards as seen from the centre of the gripper until the proximity switch actuates.
7. By tightening the screw (101) fix the proximity switch in this position.
8. Test the function by opening and closing the gripper.

**Part gripped (I.D. gripping):**

1. Clamp the part to be gripped.
2. Install the switch cam (91) in the base jaw by screwing in the screw (100).
3. Bolt together the T-Nut (90) with the bracket (92).
4. Push the T-Nut with the bracket into the groove of the housing.
5. Push the proximity switch (1) to the stop in the bracket (92).

6. Push the Proximity switch (incl. Bracket and T-Nut) towards the center of the gripper, as seen from the front of the gripper until the proximity switch actuates.
7. By tightening the screw (101) fix the proximity switch in this position.
8. Test the function by closing and opening the gripper.

#### 4.3.2 Magnetic switch MMS 22 / RMS 22

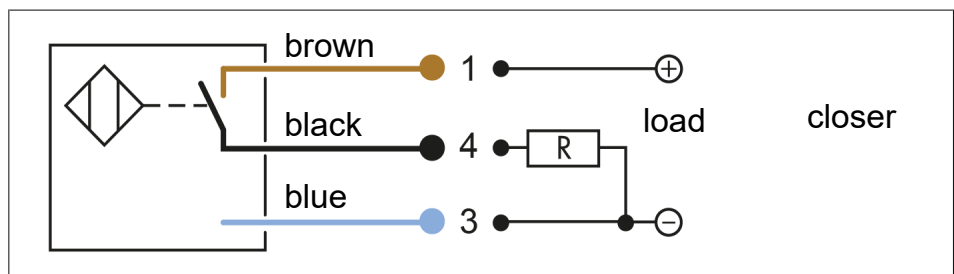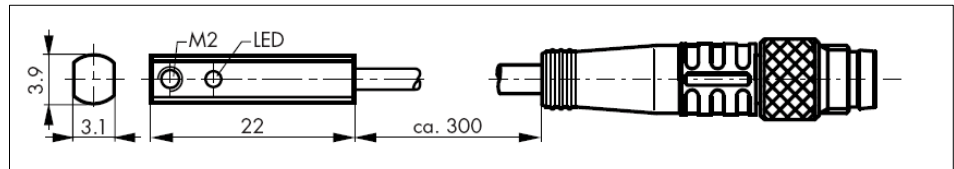

### CAUTION

#### Sensor can be damaged during assembly.

Do not exceed the maximum tightening torque of 30 Ncm for the set screws.

### NOTE


**Ferromagnetic material changes the switching positions of the sensor. For example: Adapter plate made of ordinary steel.**

At ferromagnetic adapter plates:

- First mount the product on the adapter plate.
- Then set the position of the magnetic switch.

The RMS sensors have a larger hysteresis than the MMS sensors. This means that short gripper strokes may not be able to be monitored with the RMS sensors.



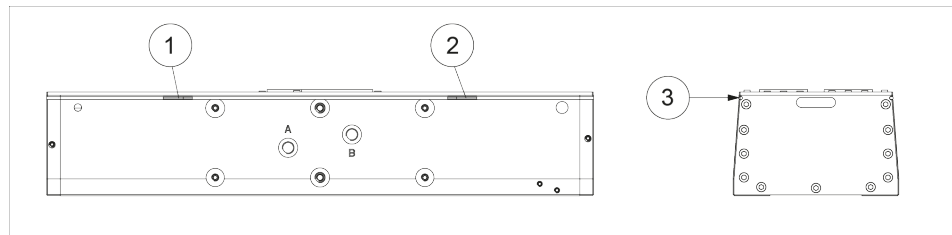

Position of the magnetic switches

1	Magnetic switch 1: Gripper "open"
2	Magnetic switch 2: Gripper "closed"
3	Milled opening for inserting the magnetic switch (both sides)

**Gripper open:**

1. Put the Gripper into "open" position.
2. Push the Magnetic switch 1 (1) through the milled opening (3) into the groove until it switches.
3. Fix the magnetic switch (1) in this position, by clamping it in the groove by tightening the threaded pin.
4. Test the function by closing and opening the gripper.

**Gripper closed:**

1. Put the Gripper into "closed" position.
2. Push the Magnetic switch 2 (2) through the milled opening (3) into the groove until it switches.
3. Fix the magnetic switch in this position, by clamping it in the groove by tightening the threaded pin.
4. Test the function by opening and closing the gripper.

**Part gripped (O.D. gripping):**

1. Clamp the part to be gripped.
2. Push the Magnetic switch 2 (2) through the milled opening (3) into the groove until it switches.
3. Fix the magnetic switch in this position, by clamping it in the groove by tightening the threaded pin.
4. Test the function by opening and closing the gripper.

**Part gripped (I.D. gripping):**

1. Clamp the part to be gripped.
2. Push the Magnetic switch 1 (1) through the milled opening (3) into the groove until it switches.
3. Fix the magnetic switch (1) in this position, by clamping it in the groove by tightening the threaded pin.
4. Test the function by closing and opening the gripper.

## 5 Troubleshooting

### 5.1 Product does not move?

Possible cause	Corrective action
Base jaws jam in housing, e.g. mounting surface is not sufficiently even.	Check the evenness of the mounting surface. ▶ 4.2.1 [18] Loosen the mounting screws of the product and actuate the product again.
Pressure drops below minimum.	Check air supply. ▶ 4.2.2 [19]
Compressed air lines switched.	Check compressed air lines.
Proximity switch defective or set incorrect.	Readjust or change sensor.
Unused air connections open.	Close unused air connections.
Component part defective.	Replace component or send it to SCHUNK for repair.

### 5.2 Product does not execute a complete stroke?

Possible cause	Corrective action
Dirt deposits between cover and piston.	Remove the cover, clean the product and regrease it. ▶ 6 [28]
Dirt deposits between basic jaws and guidance.	Disassemble and clean the product.
Pressure drops below minimum.	Check air supply. ▶ 4.2.2 [19]
Mounting surface is not sufficiently flat.	Check the evenness of the mounting surface. ▶ 4.2.1 [18]
Component part defective.	Send product with a SCHUNK repair order or dismantle product.
When fastening the product from the side, the maximum permissible depth of engagement was exceeded.	Use suitable fastening screws. ▶ 4.2.1 [18]

### 5.3 Product opens or closes jerkily?

Possible cause	Corrective action
Too little grease in the mechanical guiding areas.	Clean and lubricate product. ▶ 6 [28]
Compressed air lines blocked.	Check compressed air lines of damage.
Mounting surface is not sufficiently flat.	Check the evenness of the mounting surface.

## 5.4 Gripping force is dropping

Possible cause	Corrective action
Compressed air can escape.	Check seals, if necessary, disassemble the product and replace seals.
Too much grease in the mechanical movement space.	Clean and lubricate product.
Pressure drops below minimum.	Check air supply. ▶ 3 [16]
Component part defective.	Replace component or send it to SCHUNK for repair.

## 5.5 Module does not achieve the opening and closing times?

Possible cause	Corrective action
Compressed air lines are not installed optimally.	<p>If present: Open the flow control couplings on the product to the maximum that the movement of the jaws occurs without bouncing and hitting.</p> <p>Check compressed air lines.</p> <p>Inner diameters of compressed air lines are of sufficient size in relation to compressed air consumption.</p> <p>Keep compressed air lines between the product and directional control valve as short as possible.</p> <p>Flow rate of valve is sufficiently large relative to the compressed air consumption.</p> <p>If you still cannot achieve the open and close times in the latest catalog, we recommend the use of quick-air-vent-valves directly at the product.</p>

## 6 Maintenance

### 6.1 Notes

#### Original spare parts

Use only original spare parts of SCHUNK when replacing spare and wear parts.

### 6.2 Maintenance and lubrication intervals

#### CAUTION

#### Material damage due to hardening lubricants!

Lubricants harden more quickly at temperatures above 60°C, leading to possible product damage.

- Reduce the lubricant intervals accordingly.

<b>Size</b>	<b>150 – 300</b>
Interval [Mio. cycles]	1.5

### 6.3 Lubricants/Lubrication points (basic lubrication)

During maintenance, treat all greased areas with lubricant. Thinly apply lubricant with a lint-free cloth.

SCHUNK recommends the lubricants listed.

Lubricant point	Lubricant
Metallic sliding surfaces	SCHUNK grease 3
Seals and sealing surfaces	SCHUNK grease 1
Cylinder surfaces	SCHUNK grease 1

Details regarding SCHUNK lubricant designations are available at [schunk.com/lubricants](http://schunk.com/lubricants).

The product contains food-compliant lubricants as standard.

**The requirements of standard EN 1672-2:2020 are not fully met.**

#### NOTE

- Change contaminated food-compliant lubricant.
- Observe information in the safety data sheet from the lubricant manufacturer.

## 6.4 Disassembling the product

Position of the item numbers ▶ 6.6 [📄 32]

1. Move the gripper to the "open" position.
2. Remove the compressed air lines.
3. Loosen the set-screws (29) to reduce initial tension of the roller belt covering (20).
4. Unfasten and remove the screws (37 and 63).
5. Remove the upper cover plates (72 and 73).



### ⚠ CAUTION

**Roller belt covering (20) might still be under tension!**

Carefully remove the screws (64) of the cover plate (71).

6. Unfasten and remove the screws (64).
7. Remove the cover plate (71).
8. Unfasten and remove the fitting screws (31).
9. Remove the roller belt covering (20).
10. Unfasten the screws (62).
11. Remove the housing cover (6).

### NOTE

**The base jaws (3) and guide strips (4 and 14) are specifically designed for the gripper and must not be interchanged during assembly.**

12. Mark the installation position of the base jaws.

### CAUTION

**Never remove the guide strips (4 and 15) and the gear racks (11) from the base jaws (3) or the gripper housing (1)!**

### NOTE

**Both base jaws are moved synchronously via the pinion or gear rack teeth.**

13. Push out the base jaw completely (including piston rod, piston...).
14. Pull out the piston rods (7).
15. Remove the safety ring (55).
16. Remove the cover (13).
17. Push the piston (12) out of the base jaw (3).

## 6.5 Servicing and assembling the product

Position of the item numbers ▶ 6.6 [📄 32]

### Maintenance

- Clean all parts thoroughly and check for damage and wear.
- Treat all greased areas with lubricant.  
▶ 6.3 [📄 28]
- Oil or grease bare external steel parts.
- Lightly grease the moving components of the cover.
- Replace all wear parts / seals.
  - Position of the wearing parts ▶ 6.6 [📄 32]
  - Seal kit ▶ 1.4.2 [📄 7]

### Assembly

Assembly takes place in the opposite order to disassembly.  
Observe the following:

Position of the item numbers ▶ 6.6 [📄 32]

- Notice the installation position of the base jaws.
- Adjustment of the initial tension of the rotary cover (20)
  - Put the gripper into "open" position.
  - Screw the fitting screw (31) in the rotary cover.
  - Turn rotary cover clockwise ▶ 6.5.2 [📄 31].
  - Clamp the rotary axle with the setscrew (29), to keep the tension of the open gripper.
- Unless otherwise specified, secure all screws and nuts with Loctite no. 243 and tighten with the appropriate tightening torque. ▶ 6.5.1 [📄 31]

### 6.5.1 Screw tightening torques

Position of the item numbers ▶ 6.6 [ 32]


Item	Tightening torque [Nm]
29, 31	6 Nm
33	5 Nm
37, 64	3 Nm
62	15 Nm

### 6.5.2 Rotations of fitting bolt

Item	PFH	150	200	250	300
31	Number of rotations	3	2 1/2	2	1 1/2

## 6.6 Assembly drawing

The following figure is an example image.  
It serves for illustration and assignment of the spare parts.  
Variations are possible depending on size and variant.

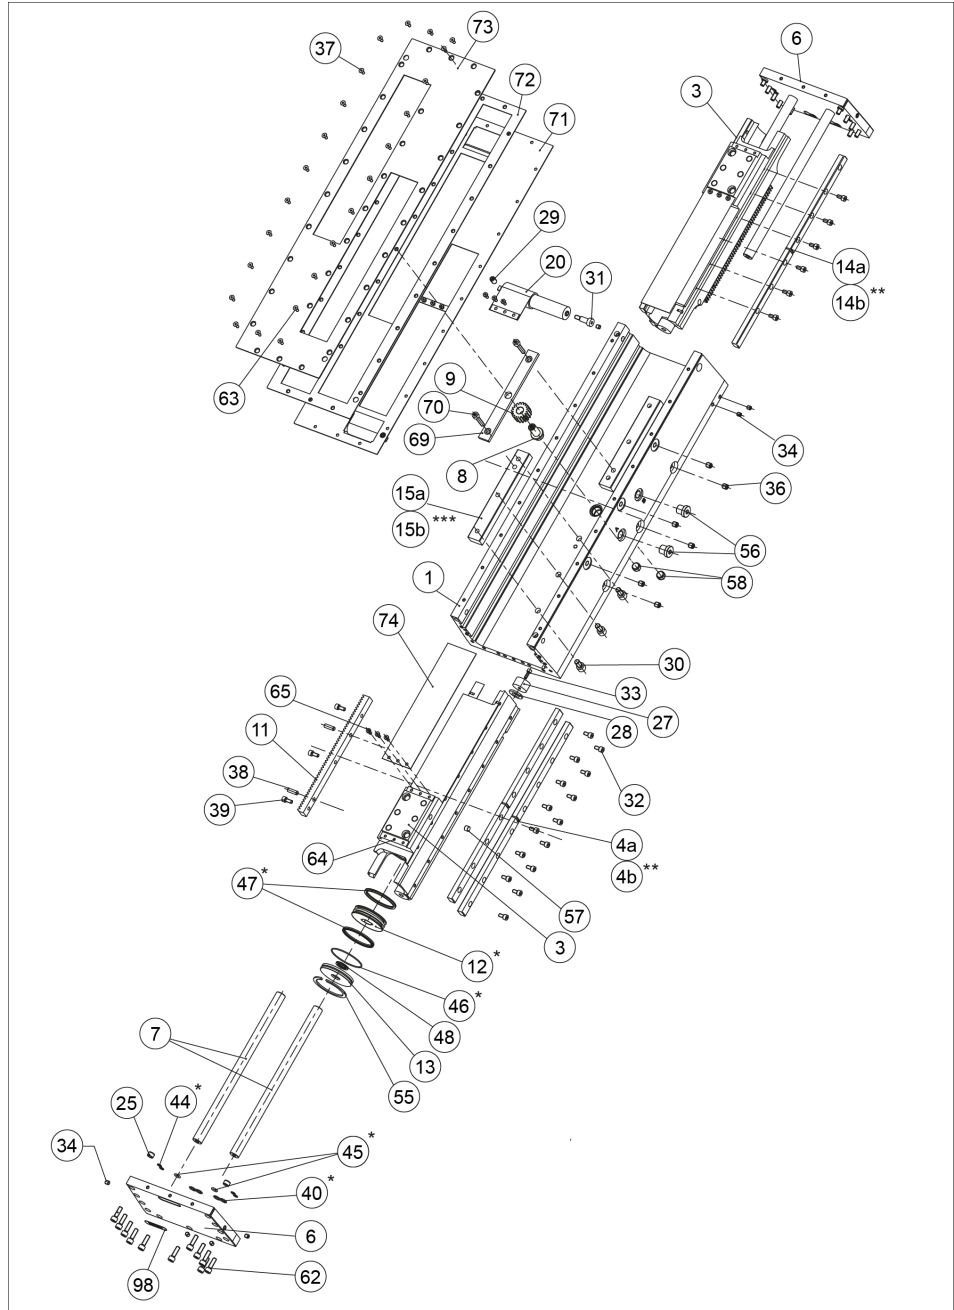

Assembly drawing PFH

- \* Wearing part, replace during maintenance. Included in the seal kit. Seal kit can only be ordered completely.
- \*\* only PFH 150 / PFH 300
- \*\*\* only PFH 300



## 7 Translation of the original declaration of incorporation

in terms of the Directive 2006/42/EG, Annex II, Part 1 Section B.

Manufacturer/  
Distributor                      SCHUNK SE & Co. KG  
Spanntechnik | Greiftechnik | Automatisierungstechnik  
Bahnhofstr. 106 – 134  
D-74348 Lauffen/Neckar

We hereby declare that the partly completed machine described below

Product designation:        2-Finger Parallel Gripper / PFH 150– 300/pneumatic  
ID number                      0302000, 0302020, 0302005, 0302010

meets the following basic occupational health and safety of the Machinery Directive 2006/42/EC:

No. 1.1.1, No. 1.1.2, No. 1.1.3, No. 1.1.5, No. 1.3.2, No. 1.5.3, No. 1.5.4, No. 1.5.6, No. 1.5.8, No. 1.5.10, No. 1.5.11, No. 1.5.13

The partly completed machinery may not be put into operation until it has been confirmed that the machine into which the partly completed machinery is to be installed complies with the provisions of the Machinery Directive (2006/42/EC). The declaration shall be rendered invalid if modifications are made to the product.

Applied harmonized standards, especially:

EN ISO 12100:2010              Safety of machinery – General principles for design –  
Risk assessment and risk reduction

The special technical documentation according to Annex VII, Part B, belonging to the partly completed machine, has been created.

Person authorized to compile the technical documentation:  
Stefanie Walter, Address: see manufacturer's address

*Signature: see original declaration*

Lauffen/Neckar, April 2024

Dr.-Ing. Manuel Baumeister,  
Head of Systems Engineering,  
Technology & Innovation

## 8 UKCA declaration of incorporation

in accordance with the Supply of Machinery (Safety) Regulations 2008.

Manufacturer/ Distributor                   SCHUNK Intec Limited  
  Clamping and gripping technology  
  3 Drakes Mews, Crownhill  
  MK8 0ER Milton Keynes

We hereby declare that on the date of the declaration the following partly completed machine complied with all basic safety and health regulations found in the "Supply of Machinery (Safety) Regulations 2008".

The declaration shall be rendered invalid if modifications are made to the product.

Product designation:           2-Finger Parallel Gripper / PFH 150- 300 / pneumatic  
ID number                           0302000, 0302020, 0302005, 0302010

The partly completed machine may not be put into operation until it has been confirmed that the machine into which the partly completed machine is to be installed complies with the provisions of the "Supply of Machinery (Safety) Regulations 2008".

Applied harmonized standards, especially:

EN ISO 12100:2010           Safety of machinery – General principles for design –  
  Risk assessment and risk reduction

The special technical documentation according to Annex VII, Part B, belonging to the partly completed machine, has been created.

Person authorized to compile the technical documentation:  
Marcel Machado, address: refer to manufacturer's address



Lauffen/Neckar, April 2024

Dr.-Ing. Manuel Baumeister,  
Head of Systems Engineering,  
Technology & Innovation

## 9 Information on the RoHS Directive, REACH Regulation and Substances of Very High Concern (SVHC)

### RoHS Directive

SCHUNK products are classified as "large-scale stationary installations" or as "large-scale stationary industrial tools" within the meaning of Directive 2011/65/EU and its extension 2015/863/EU "on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)", or fulfill their intended function only as part of one. Therefore products from SCHUNK do not fall within the scope of the directive at this time.

### REACH Regulation

Products from SCHUNK fully comply with the regulations of Regulation (EC) No. 1907/2006 "concerning the Registration, Evaluation, Authorization and Restriction of Chemicals (REACH)" and its amendment 2022/477. SCHUNK attaches great importance to completely avoiding chemicals of concern to humans and the environment wherever possible.

Only in rare exceptional cases do SCHUNK products contain SVHC substances on the candidate list with a mass content above 0.1%. In accordance with Article. 33 (1) of Regulation (EC) No. 1907/2006, SCHUNK complies with its duty to "communicate information on substances in articles" and lists the components concerned and the substances used in an overview that can be viewed at [schunk.com/SVHC](https://schunk.com/SVHC).

*Signature: see original declaration*

Lauffen/Neckar, April 2024

Dr.-Ing. Manuel Baumeister,  
Head of Systems Engineering,  
Technology & Innovation



**SCHUNK SE & Co. KG**  
Spanntechnik | Greiftechnik | Automatisierungstechnik

Bahnhofstr. 106 - 134  
D-74348 Lauffen/Neckar  
Tel. +49-7133-103-0  
info@de.schunk.com  
schunk.com

Folgen Sie uns | *Follow us*



Wir drucken nachhaltig | *We print sustainable*